



# GigaVUE-HC1 Hardware Installation Guide

**GigaVUE HC Series**

Product Version: 6.12

Document Version: 1.0

(See Change Notes for document updates.)

**Copyright 2025 Gigamon Inc. All rights reserved.**

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. No part of this publication may be reproduced, transcribed, translated into any language, stored in a retrieval system, or transmitted in any form or any means without the written permission of Gigamon Inc.

**Trademark Attributions**

Gigamon and the Gigamon logo are trademarks of Gigamon in the United States and/or other countries. Gigamon trademarks can be found at [www.gigamon.com/legal-trademarks](http://www.gigamon.com/legal-trademarks). All other trademarks are the trademarks of their respective owners.

Gigamon Inc.  
3300 Olcott Street  
Santa Clara, CA 95054  
408.831.4000



# Change Notes

When a document is updated, the document version number on the cover page will indicate a new version and will provide a link to this Change Notes table, which will describe the updates.

Product Version	Document Version	Date Updated	Change Notes
6.12	1.0	10/27/2025	The original release of this document with 6.12.00 GA.

# Contents

<b>GigaVUE-HC1 Hardware Installation Guide</b>	<b>1</b>
Change Notes	3
Contents	4
<b>Introducing the GigaVUE-HC1</b>	<b>7</b>
GigaVUE-HC1 Overview	7
Introducing the GigaVUE-HC1 Chassis	8
Chassis Cooling	10
Air Flow Direction	12
AC- and DC-Powered GigaVUE-HC1	12
GigaVUE-HC1 Base Chassis	12
Port Numbering	14
Module Status LEDs	14
Base Chassis Port Status LED	14
Breakout Panels	14
GigaVUE-HC1 Modules	15
Bypass Combo Modules	16
BPS-HC1-D25A24 SX/SR Bypass Combo Module	16
BPS-HC1-D25A60 SX/SR Bypass Combo Module	17
BPS-HC1-D35C60 LX/LR Bypass Combo Module	17
PRT-HC1-X12 Module	19
PRT-HC1-Q04X08 Module	20
SMT-HC1-S (Gen 3 GigaSMART Card)	22
Ports and LEDs	22
TAP-HC1-G10040 Module	23
<b>GigaVUE-HC1 Installation Roadmap</b>	<b>25</b>
First Steps – Getting Unpacked, Racked, Installed and Connected	25
Next Steps	26
<b>Assembling the GigaVUE-HC1 Node</b>	<b>27</b>
Unpacking the GigaVUE-HC1 Shipment	27
Rack-Mounting the GigaVUE-HC1 Chassis	31
Safety Precautions	31
Rack-Mounting Procedure	31
Four-Post Rack Mounting	32
Installing and Removing Modules Procedure	33
Hot Swapping Modules	33

Module Installation Procedure .....	33
Module Removal and Replacement Procedure (Hot Removal) .....	34
Replacing a Module with the Same Type of Module .....	34
Replacing a Module with a Different Type of Module .....	34
Fan Replacement Procedure .....	35
Next Steps .....	35
<b>Basic GigaVUE HC Series Connections and Configuration</b> .....	<b>36</b>
Grounding the GigaVUE-HC1 Chassis .....	36
Connecting Power to the GigaVUE-HC1 .....	37
Removing a Power Supply Module .....	38
Connecting -48V DC Power Supply Modules .....	39
Connecting Serial Console and Mgmt Ports .....	41
Configuring Basic GigaVUE HC Series Settings .....	42
Access the Command-Line Interface over the Console Port .....	42
Run the Jump-Start Script .....	43
Need to Change Any Settings? .....	45
Configure Modules and Enable Ports .....	46
Command-Line Basics .....	47
Command-Line Modes .....	47
Entering Commands in the CLI .....	50
Command-Line Syntax – Entering Commands .....	51
The Basic Commands .....	53
Completing the Initial GigaVUE HC Series Setup .....	56
Enter the Configure Command-Line Mode .....	56
SSH .....	57
Connecting to the GigaVUE HC Series Node from GigaVUE-FM .....	58
Initial User Account Configuration .....	59
Configuring the GigaVUE HC Series Host Name .....	61
Configuring GigaVUE HC Series Time Options .....	61
Configuring Automatic Email Notifications .....	63
Using a Custom Banner .....	64
Saving Changes .....	65
<b>Connecting GigaVUE-HC1 Ports</b> .....	<b>66</b>
Transceiver—Rules and Notes .....	66
Transceiver Installation Instructions .....	66
Installing Transceivers .....	67
Removing Transceivers .....	67
Copper TAP Specifications .....	67
Bypass Combo Module Specifications .....	67
Connecting GigaVUE-HC1 Ports .....	68
Enabling Modules and Ports .....	69
Setting Port Parameters Manually .....	70

<b>GigaVUE-HC1 Specifications</b>	<b>72</b>
Physical Dimensions and Weight	72
Battery Caution	73
Compliance	73
Safety	73
Emissions	73
Immunity	74
Environmental	74
Security	75
Power Requirements	75
Environmental Specifications	75
Standards and Protocols	76
Warranty	76
<b>Console Port Signaling and Cabling</b>	<b>76</b>
<b>NEBS Level 3 Compliance</b>	<b>78</b>
Installation Instructions GigaVUE-HC1	78
Intrabuilding or Intra-connection	78
Intrabuilding Ports (RJ45)	79
Class A2 Voltage Accessibility	79
Class B Voltage Accessibility	79
Equipment Grounding Systems	79
Communication Equipment Grounding	79
Bonding of Battery Return (BR) Input Terminals	79
Connections	79
Maintenance	80
<b>Additional Sources of Information</b>	<b>81</b>
Documentation	81
How to Download Software and Release Notes from My Gigamon	84
Documentation Feedback	84
Contact Technical Support	85
Contact Sales	86
Premium Support	86
The VUE Community	86
<b>Glossary</b>	<b>87</b>

# Introducing the GigaVUE-HC1

This chapter introduces the GigaVUE-HC1 of Gigamon Traffic Platform nodes, describes their features and functions, and provides an orientation to the physical layout of the GigaVUE-HC1.

Refer to the following sections for details:

- [GigaVUE-HC1 Overview](#)
- [Introducing the GigaVUE-HC1 Chassis](#)
- [GigaVUE-HC1 Base Chassis](#)
- [GigaVUE-HC1 Modules](#)
  - [BPS-HC1-D25A24 SX/SR Bypass Combo Module](#)
  - [BPS-HC1-D25A60 SX/SR Bypass Combo Module](#)
  - [BPS-HC1-D35C60 LX/LR Bypass Combo Module](#)
  - [PRT-HC1-X12 Module](#)
  - [PRT-HC1-Q04X08 Module](#)
  - [SMT-HC1-S \(Gen 3 GigaSMART Card\)](#)
  - [TAP-HC1-G10040 Module](#)

## GigaVUE-HC1 Overview

The GigaVUE-HC1 is part of the GigaVUE HC Series Deep Observability Pipeline. It has a modular 1RU design for:

- Small businesses with network security needs.
- Large businesses with remote sites


Key features

- Works with 10Gb connections
- Includes built-in GigaSMART
- Offers inline bypass

**GigaVUE-HC1**

- **1RU Footprint**
- **Two Module Slots (Bays)**
- **Dedicated Cluster Management Port**
- **Dual hot-pluggable power supplies (AC/DC)**
- **Supports all GigaVUE-HC1 Modules**
- **Cluster with GigaVUE HC Series and GigaVUE TA Series Nodes**
- **All ports, excluding BPS ports, of same type and speed can be used to create GigaStream**

GigaVUE-HC1

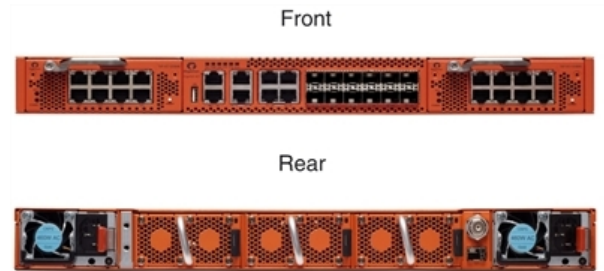

## Introducing the GigaVUE-HC1 Chassis

The fully-assembled GigaVUE-HC1 chassis consists of a 1RU, rack-mountable, 19 in-wide chassis with management, network, and tool ports at the front and power connections and fans at the rear.

[Figure 1 Front View of the GigaVUE-HC1 Chassis](#) summarizes the bays and components at the front.

[Figure 2 Rear View of the GigaVUE-HC1 Chassis](#) summarizes the rear of the GigaVUE-HC1 chassis.

The base chassis provides twelve 1Gb/10Gb SFP+ network ports, four 100Mb/1000Mb RJ45 copper ports, and GigaSMART, capable of processing packets at 20Gb. The faceplate of the chassis has ports for MGMT interface, cluster management, PTP and PPS over ethernet, Console, and a USB port.

**NOTE:** The GigaVUE-HC1 chassis ships from the factory with power supply modules and fans installed. The GigaVUE-HC1 modules are shipped separately. Refer to [Unpacking the GigaVUE-HC1 Shipment](#) for assembly instructions

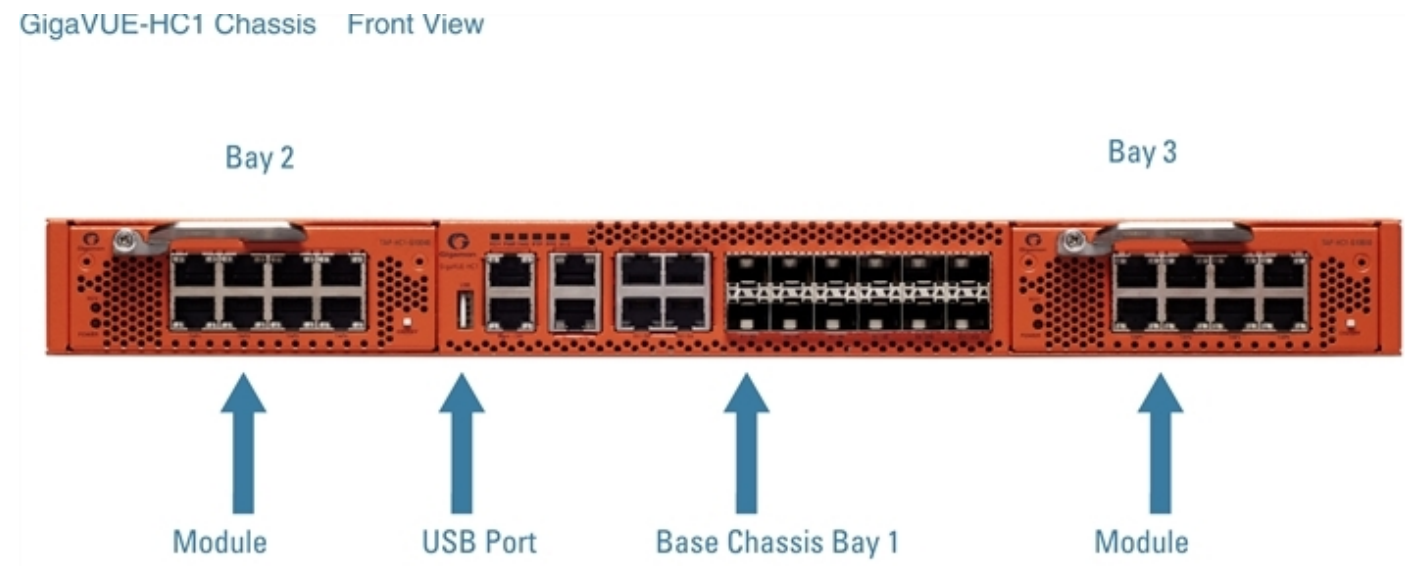


Figure 1 Front View of the GigaVUE-HC1 Chassis

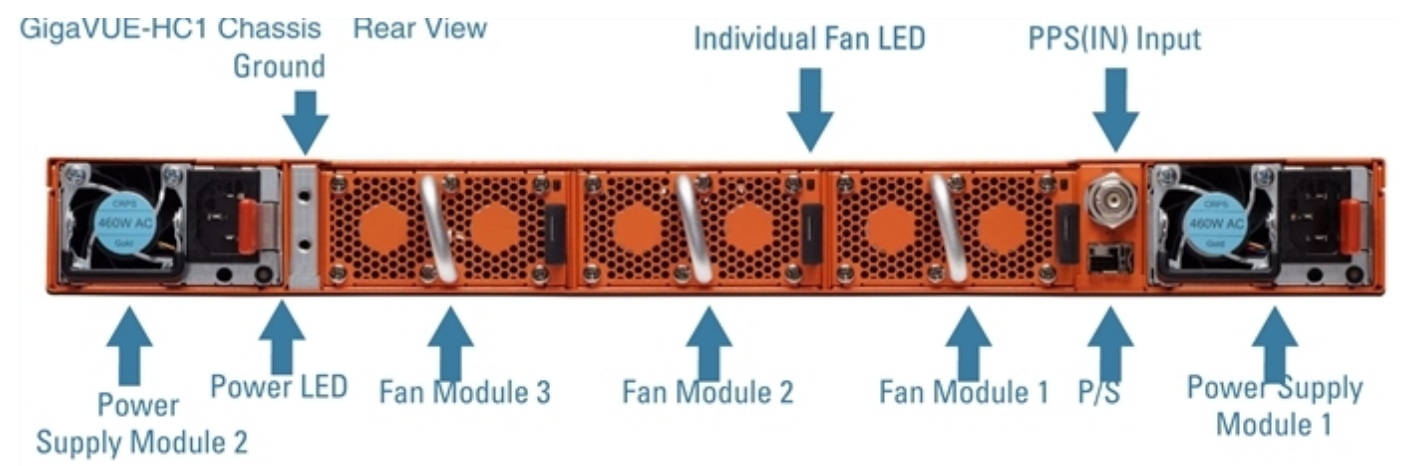


Figure 2 Rear View of the GigaVUE-HC1 Chassis

Table 1: GigaVUE-HC1 Chassis Components

Front Components on the GigaVUE-HC1 Chassis	
Module Bays	The base chassis is in the center and numbered 1. Slots (bays) are numbered 2-3 from left to right.
Base Chassis	<p>The GigaVUE-HC1 includes a base chassis that holds the management and processing components installed inside the unit. It is located in the center of the front of the chassis.</p> <p><b>Note:</b> The base chassis is not hot-swappable.</p> <p>The base chassis also controls the Mgmt port and console port on the front of the node for network and local administrative access to the GigaVUE-OS command-line interface (CLI). The base chassis provides twelve 1Gb/10Gb SFP+ network ports, four 100Mb/1000Mb RJ45 copper ports, and GigaSMART, capable of processing packets at 20Gb.</p>

Front Components on the GigaVUE-HC1 Chassis	
	Refer to <a href="#">GigaVUE-HC1 Base Chassis</a> for more information.
Rear Components on the GigaVUE-HC1 Chassis	
<b>Power Supply Modules</b>	<p>The GigaVUE-HC1 includes two separate power supply modules already installed at the rear of the node. Each power supply module can independently operate the GigaVUE-HC1 for 1+1 system redundancy and are hot-swappable. Separate AC and DC power units are available.</p> <p>Refer to <a href="#">Power Requirements</a> for information on power characteristics of the GigaVUE-HC1.</p> <p>Refer to <a href="#">Module Removal and Replacement Procedure (Hot Removal)</a> for more information on hot-swapping the module.</p>
<b>Fan Trays</b>	<p>The fan trays installed at the rear of the node provide system cooling. Fan trays are also hot-swappable. Refer to <a href="#">Module Removal and Replacement Procedure (Hot Removal)</a> for more information on hot-swapping the module.</p>
PPS(IN)	The GigaVUE-HC1 includes a BNC connector for an optional PTP 1PPS reference clock. (Reserved for future use).
P/S	Inter-chassis primary and secondary connection (Reserved for future use).

## Chassis Cooling

When you power on the GigaVUE-HC1 :

- The fans run at 100% speed, then drop to about 65% during normal operation.
- The system uses 2+1 redundancy — if one fan fails, the third fan maintains safe cooling at 40°C ambient temperature.
- The fans are hot-swappable. For details, refer to [Module Removal and Replacement Procedure \(Hot Removal\)](#)

The system monitors the temperatures of the intake, exhaust, CPU, switch CPU, and GigaSMART CPU. If any component passes its set threshold, the fan speed changes in steps of about 10%.

The temperatures of the following five components are monitored:

- intake
- exhaust
- CPU switch
- GigaSMART CPU temperatures

An SNMP trap is sent when a component reaches the threshold for warning, alert, or critical temperature conditions. Refer to [Table 2: Component Temperature Thresholds and Actions](#) for the temperatures at which the warning, alert, and critical traps are sent.



Table 2: Component Temperature Thresholds and Actions

Exhaust Temperature	CPU Temperature	Switch CPU Temperature	GigaSMART CPU Temperature
85°C Warning trap sent	90°C Warning trap sent	105°C Warning trap sent	90°C Warning trap sent
90°C Alert trap sent	95°C Alert trap sent	115°C Alert trap sent	95°C Alert trap sent
95°C Critical trap sent	100°C Critical trap sent	140°C Critical trap sent	100°C Critical trap sent

The output of the following CLI command displays the current intake, exhaust, CPU, switch CPU temperatures, as well as the GigaSMART CPU temperature:

```
(config) show environment
```

```
...
```

```
-----
```

```
Card cc1 (GVS-HC100/MB):
```

```
Intake temperature :      36 C
```

```
Exhaust temperature :      35 C
```

```
Cpu temperature :         28 C
```

```
Switch temperature :      51 C
```

```
Cav temperature :         53 C
```

```
-----
```

```
Card 2 (TAP-HC1-G10040):
```

```
Intake temperature :      32 C
```

```
Exhaust temperature :      31 C
```

```
-----
```

```
Card 3 (TAP-HC1-G10040):
```

```
Intake temperature :      33 C
```

```
Exhaust temperature :      33 C
```

```
=====
```

The output of the following CLI command displays the fan speed in RPM (the normal operational speed is approximately 12000 RPM; the maximum speed is approximately 19000 RPM):

```
(config) show environment
```

```
...
```

```
-----
```

```
Fan tray 1 (FAN-HC1):
```

```
1st fan :                  12136 RPM
```

```
2nd fan :                  12136 RPM
```

```
-----
```

```
Fan tray 2 (FAN-HC1):
```

```
1st fan :                  12136 RPM
```

```
2nd fan :                  12136 RPM
```

```
-----
```

```
Fan tray 3 (FAN-HC1):
```

```
1st fan :                  12288 RPM
```

```
2nd fan :                  12136 RPM
```

## Air Flow Direction


The air flow direction is from the front of the GigaVUE HC Series chassis to the rear. The rear-mounted fans pull air from the front to the back of the chassis. For environments with hot/cold aisles, install the chassis so the intake air at the front of the chassis is cold.

## AC- and DC-Powered GigaVUE-HC1

Gigamon provides both AC- and DC-powered versions of the GigaVUE-HC1. Refer to [Connecting Power to the GigaVUE-HC1](#) for information on connecting AC and DC power supplies.

## GigaVUE-HC1 Base Chassis

The base chassis is the heart of the GigaVUE-HC1, providing both processing and switching fabric resources, as well as user access to the CLI via the Mgmt/console ports.

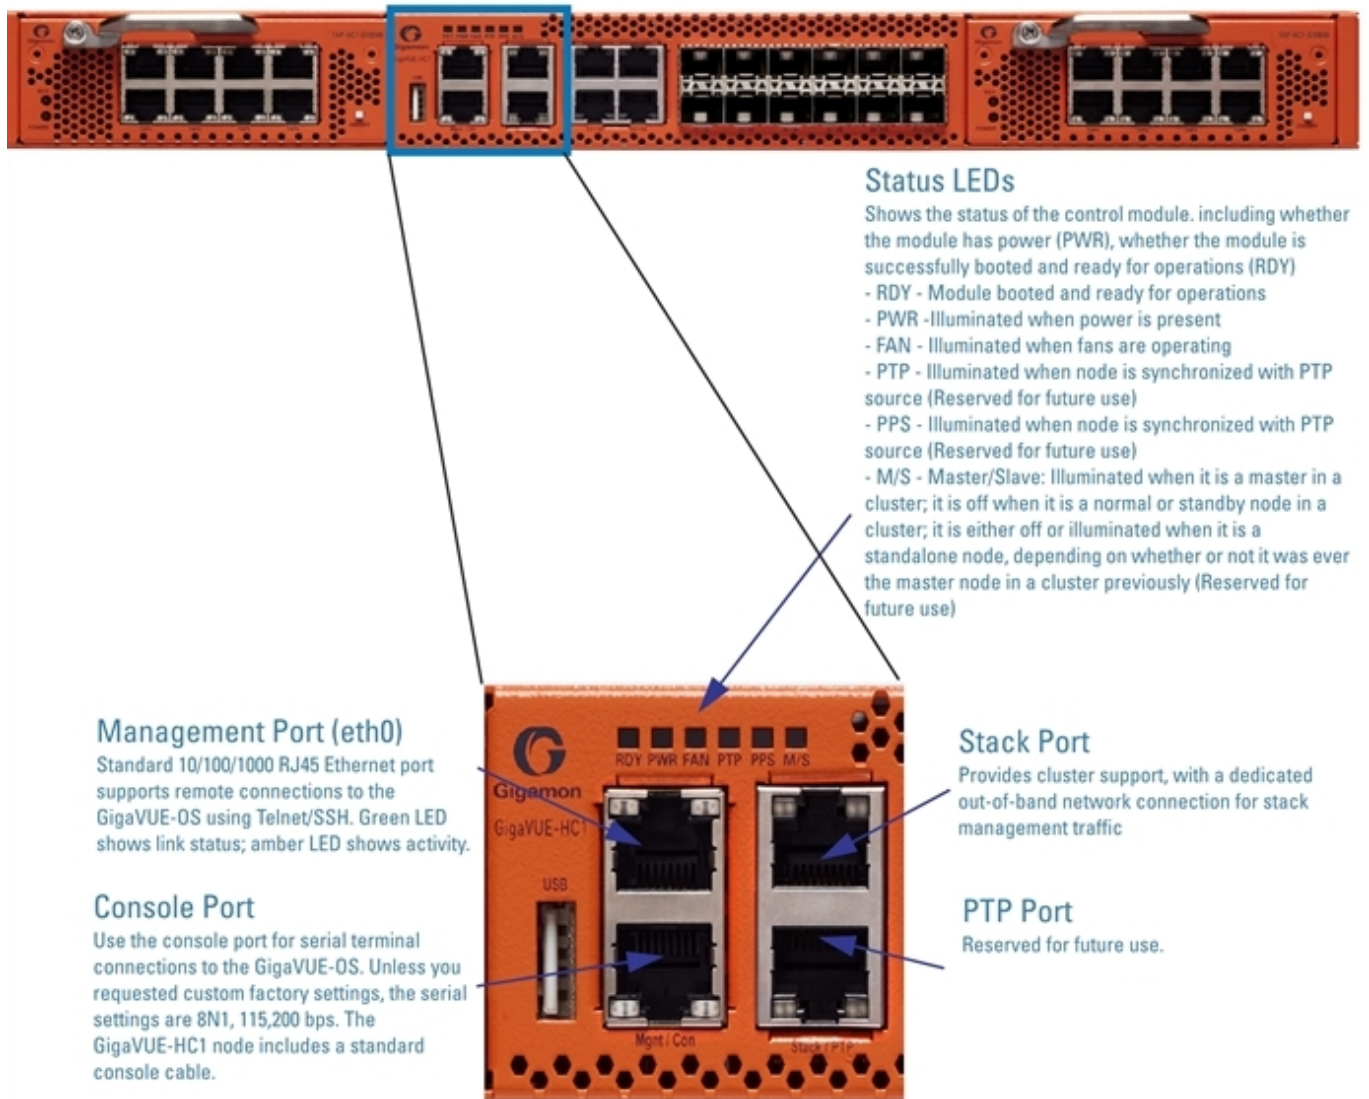

**Figure 3** GigaVUE-HC1 Management Ports

**NOTE:** The X ports of the GigaVUE-HC1 Base Chassis and PRT-HC1-Q04X08 module offer 10Mb/100Mb speed when 1Gb copper optics are utilized. However, the modules PRT-HC1-X12 and BPS-HC1-D25A24 do not support 10Mb/100Mb speed.

**NOTE:** The HC1-X12G4 fixed card on the GigaVUE-HC1 device supports only half-duplex mode at 10 Mb port speed for fiber ports with copper optics and fixed copper ports. Full-duplex mode is not supported at this speed.

## Port Numbering

The base chassis uses standard conventions for identifying network/ tool ports, both on the modules themselves, as well as in the CLI:

<b>10Gb Ports</b>	<ul style="list-style-type: none"> <li>Numbered with a leading <b>X</b>. For example, the base chassis includes 10Gb ports <b>X1</b> to <b>X12</b>.</li> </ul>
<b>1Gb Ports</b>	<ul style="list-style-type: none"> <li>Numbered with a leading <b>G</b>. For example, the base chassis includes 1Gb ports <b>G1</b> to <b>G4</b>.</li> </ul>

**NOTE:** When referring to ports in the CLI, the format is **box ID/slot ID/port ID**. For example, **1/1/x6** refers to box 1, slot 1, port X6.

- GigaVUE-HC1:** The base chassis is numbered 1. Slots (bays) are numbered 2-3 from left to right.

**NOTE:** The port labels on the base chassis faceplate use upper-case X, and G characters to identify ports. However, the CLI uses lowercase notation to refer to ports (for example, x1 and g1).

## Module Status LEDs

The module status LEDs are as follows:

- RDY is the Ready LED. It has the following states:
  - RED indicates that the system is booting up
  - GREEN indicates that the system is ready
- POWER is the Power LED. It has the following states:
  - Solid GREEN when both the power supply modules are ON.
  - Blinking AMBER when only one power supply module is ON.

## Base Chassis Port Status LED

The 10Gb port status LED has the following states:

- Off** indicates the port is administratively enabled, but the link is operationally down
- GREEN** indicates the link is operationally up

## Breakout Panels

Breakout panels let you connect ports on a GigaVUE HC Series node to a tool or network port or TAP for port breakout or aggregation.

The following breakout panels are available:

- PNL-M341/PNL-M341T
- PNL-M343/PNL-M343T

Refer to the [G-TAP M Series Hardware Guide](#) for details.

## GigaVUE-HC1 Modules

The GigaVUE-HC1 has two bays for replaceable modules. The following modules are available for the GigaVUE-HC1:

Module	Description	Section
<b>BPS-HC1-D25A24</b>	Bypass Combo Module, GigaVUE-HC1, with two SX/SR (50/125µm multimode) inline network port pairs and four SFP+ and SFP+ copper port cages	<a href="#">BPS-HC1-D25A24 SX/SR Bypass Combo Module</a>
<b>BPS-HC1-D25A60</b>	Bypass Modules, GigaVUE-HC1, with six SX/SR (50/125µm multi-mode) inline network port pairs	<a href="#">BPS-HC1-D25A60 SX/SR Bypass Combo Module</a>
<b>BPS-HC1-D35C60</b>	Bypass Modules, GigaVUE-HC1, with six LX/LR single- mode inline network port pairs	<a href="#">BPS-HC1-D35C60 LX/LR Bypass Combo Module</a>
<b>PRT-HC1-X12</b>	PRT-HC1-X12 provides twelve 10Gb/1Gb SFP+ network, tool, hybrid, inline network, and inline tool ports. Moreover, 10Gb ports can be used as stack-link ports.	<a href="#">PRT-HC1-X12 Module</a>
<b>PRT-HC1-Q04X08 Module</b>	The PRT-HC1-Q04X08 line card module increases the port density and allows GigaVUE-HC1 to connect with GigaVUE TA Series and GigaVUE HC Series nodes with higher-speed (40Gb) links	<a href="#">PRT-HC1-Q04X08 Module</a>
<b>SMT-HC1-S Gen 3 GigaSMART module</b>	The Generation 3 GigaSMART module, (SMT-HC1-S), delivers up to 80Gb of performance throughput.	<a href="#">SMT-HC1-S (Gen 3 GigaSMART Card)</a>
<b>TAP-HC1-G10040</b>	Copper TAP and bypass module, with 4 x 1Gb 10Mb/100Mb/1000Mb ports for either four TAPs or bypass copper (BPC) port pairs	<a href="#">TAP-HC1-G10040 Module</a>

Modules are hot-swappable and can be installed in any of the available front bays in a GigaVUE-HC1 node. **However, refer to [Module Removal and Replacement Procedure \(Hot Removal\)](#) for instructions – you must follow a specific procedure when removing modules to preserve node stability.**

**NOTE:** The protected links will remain down after performing a shutdown and no shutdown on the BPS-HC1-D25A24 module, as well as during module Online Insertion and Removal (OIR) on the GigaVUE-HC1 chassis. Reloading the chassis will help to restore the link.

## Bypass Combo Modules

There are three 1Gb/10Gb bypass combo modules as explained below.


### BPS-HC1-D25A24 SX/SR Bypass Combo Module

Bypass Combo Module with two SX/SR (50/125µm multi-mode) inline network port pairs and four regular SFP+ port cages (BPS-HC1-D25A24) ([Figure 4 Bypass Combo Module BPS-HC1-D25A24](#))

Before installing the BPS-HC1-D25A24 Bypass Combo Module, the GigaVUE-HC1 must be running software version 5.0 or higher.

For internal transceiver and loss summary specifications, refer to [Bypass Combo Module Specifications](#).

BPS-HC1-D25A24

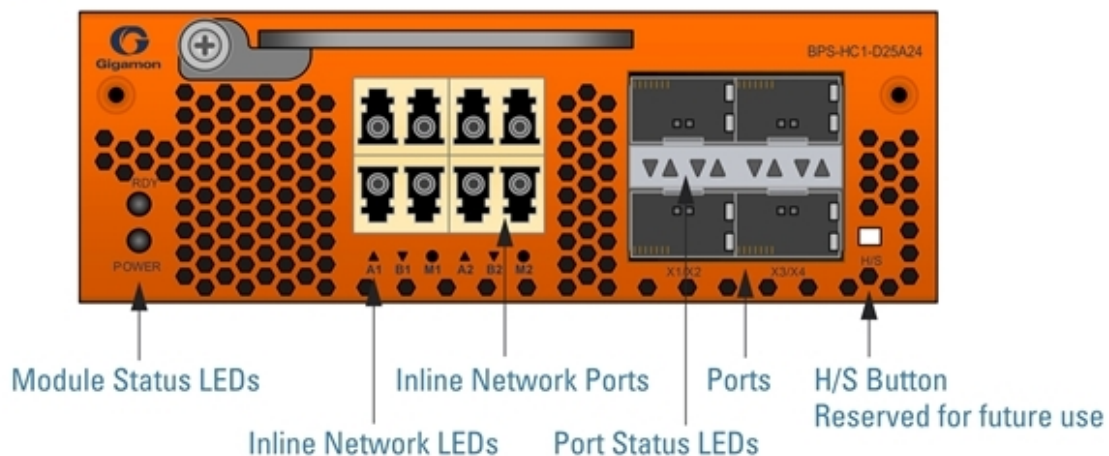

**Figure 4** Bypass Combo Module BPS-HC1-D25A24

### Features of the 1Gb/10Gb Bypass Combo Module

The 1Gb/10Gb bypass combo module has the following features:

- Two Inline network port pairs pass traffic bi-directionally.
- Port pairs that offer optical protection switches for physical bypass.
- Four regular SFP/SFP+ ports that can operate at 1Gb/10Gb, and SFP+ ports that can operate at 10Gb. These ports can be configured as any port type.
- Option to select between bypass or inline modes.
- The hot-swap button is not supported, but the command "**card slot <slot id> down**" can be used to hot-swap the module from the chassis.

## Inline Network Ports

Connect inline networks to the inline network ports. The inline network ports have built-in protection for power down.

The inline network status LEDs have the following labels:

- A1—Inline network LED A (for network 1 through network 2)
- B1—Inline network LED B (for network 1 through network 2)
- M1—Mode LED (on is inline and off is bypass)
- A2—Inline network LED A (for network 1 through network 2)
- B2—Inline network LED B (for network 1 through network 2)
- M2—Mode LED (on is inline and off is bypass)


**NOTE:** In the CLI, the inline network ports are referred to as x5 to x8.

## BPS-HC1-D25A60 SX/SR Bypass Combo Module

The BPS-HC1-D25A60 is a multi-mode SR 1Gb/10Gb bypass module. Bypass Modules offer six inline network port pairs each.

Before installing the BPS-HC1-D25A60 Bypass Combo Module, the GigaVUE-HC1 must be running software version 6.8 or higher.

For internal transceiver and loss summary specifications, refer to [Bypass Combo Module Specifications](#).

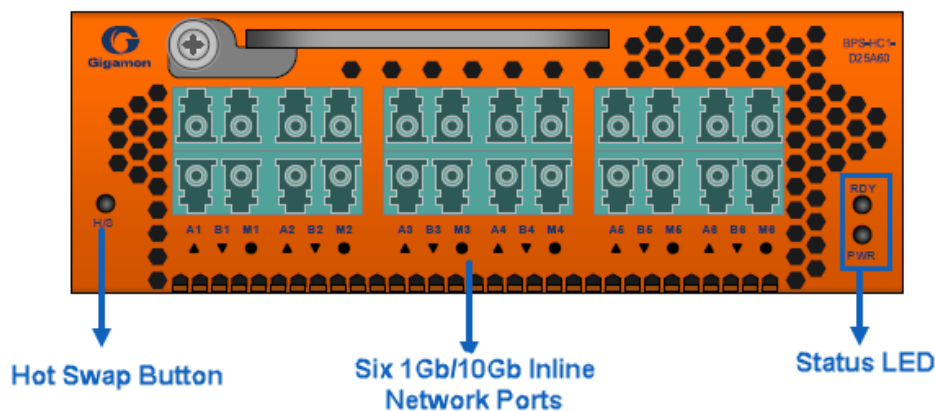

**Figure 5** Bypass Combo Module BPS-HC1-D25A60


## BPS-HC1-D35C60 LX/LR Bypass Combo Module

The BPS-HC1-D35C60 is a single-mode LR 1Gb/10Gb bypass module. Bypass Modules offer six inline network port pairs each.

Before installing the BPS-HC1-D35C60 Bypass Combo Module, the GigaVUE-HC1 must be running software version 6.7 or higher.



For internal transceiver and loss summary specifications, refer to [Bypass Combo Module Specifications](#).

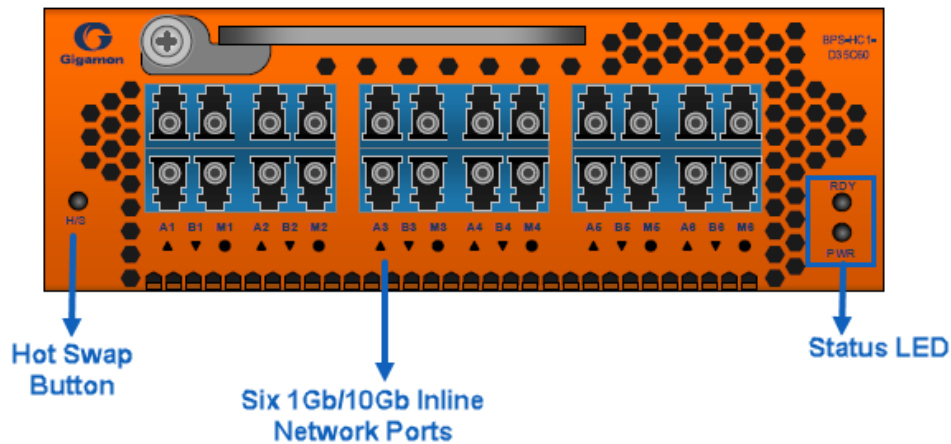

**Figure 6** Bypass Combo Module BPS-HC1-D25C60

### Features of the 1Gb/10Gb Bypass Combo Module

The 1Gb/10Gb bypass combo module has the following features:

- Inline network port pairs pass traffic bi-directionally.
- Port pairs that offer optical protection switches for physical bypass.
- The inline network ports can operate on both 1Gb/10Gb.
- Option to select between bypass or inline modes.
- The hot-swap button is not supported, but the command "**card slot <slot id> down**" can be used to hot-swap the module from the chassis.

### Inline Network Ports

Connect inline networks to the inline network ports. The inline network ports have built-in protection for power down.

The inline network status LEDs have the following labels:

- A1—Inline network LED A (for network 1 through network 2)
- B1—Inline network LED B (for network 2 through network 1)
- M1—Mode LED (on is inline and off is bypass)
- A12—Inline network LED A (for network 1 through network 2)
- B12—Inline network LED B (for network 2 through network 1)
- M12—Mode LED (on is inline and off is bypass)



## Bypass Combo Modules

Security tools such as firewalls and intrusion detection/protection systems are often connected inline on production networks, with traffic flowing from the network segment through the tool and then back onto the production network.

The GigaVUE-HC1 offers physical and logical Inline Bypass.

- Physical bypass provides automatic failover protection in the case of a power failure.
- The bypass combo modules provide the physical bypass function.

As it applies to a single pair of inline network ports, the physical bypass function is as follows:

- When the module is not powered (either the entire node is powered down or the module is removed from the node), the inline network port pair is in the physical bypass mode. That means that traffic is exchanged directly between network Port A and network Port B of the inline network pair.
- When the module is powered, the mode (inline or bypass) of the inline network port pair is controlled through software. In the physical bypass mode, the inline network port pair behaves exactly as if the module was not powered. In inline mode, the inline network port pair behaves like any other inline network port pair configured to work with an inline tool.

Modules are hot-swappable. Refer to [Hot Swapping Modules](#) for instructions.

## Module Status LEDs

The following module status LEDs are located on the front of the bypass combo module:

- RDY is the Ready LED. It has the following states:
  - RED indicates system booting or module down
  - GREEN indicates normal condition
- POWER is the Power LED. It has the following state:
  - GREEN indicates the module is receiving power


## Port Status LED

The SFP+ Port Status LED has the following states:

- Off indicates that the port is disabled or the link is down
- GREEN indicates that the link is established

## PRT-HC1-X12 Module

The PRT-HC1-X12 module provides a total of 120Gb connectivity with line rate on-board switching across twelve 10Gb/1Gb SFP/SFP+ ports. Refer to [Figure 7 PRT-HC1-X12 Module](#). When two PRT-HC1-X12 modules are installed in the node, the GigaVUE-HC1 provides twenty-four 10Gb/1Gb ports. All ports in the PRT-HC1-X12 module can be used as network, tool, hybrid, inline network, and inline tool ports. Moreover, the 10Gb ports can be used as stack-link ports. The hot-swap button is not supported. But the modules are hot-swappable. Refer to [Hot Swapping Modules](#) for instructions.

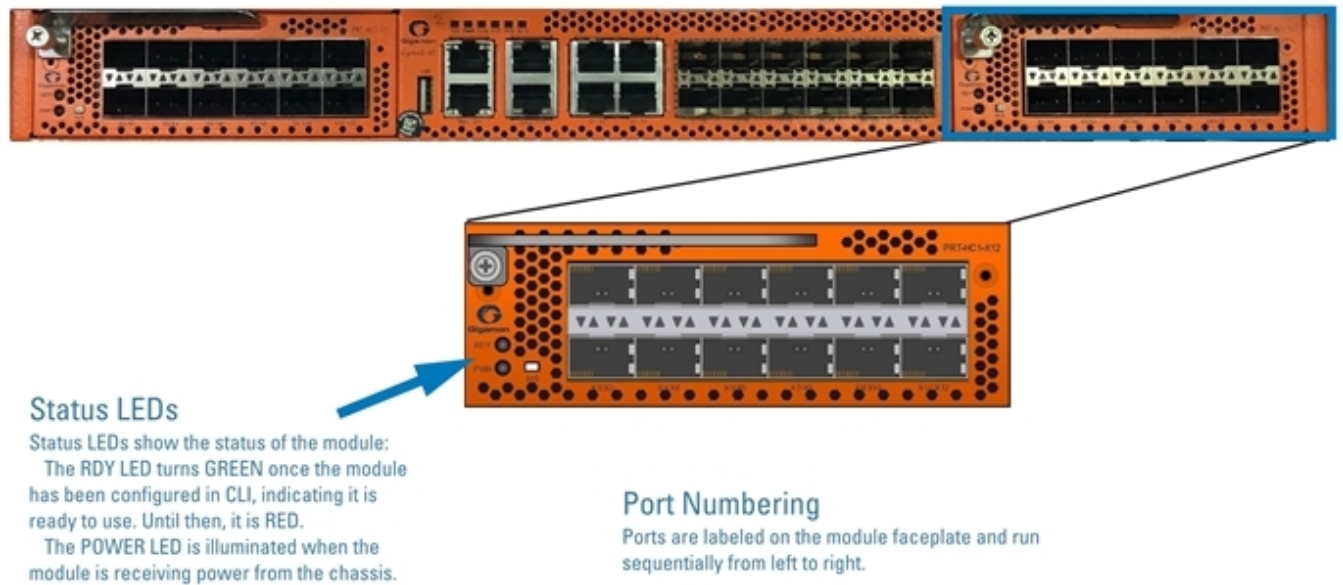

**Figure 7** PRT-HC1-X12 Module


## PRT-HC1-Q04X08 Module

The PRT-HC1-Q04X08 line card consists of four (4) 40Gb QSFP+ ports and eight (8) 1Gb/10Gb SFP/SFP+ ports.

This module:

- Increases the port density
- Allows GigaVUE-HC1 to connect with GigaVUE TA Series and GigaVUE HC Series nodes with higher-speed (40Gb) links.
- Provides connectivity of 240Gb with line rate on-board switching across the 40Gb/10Gb/1Gb ports.

The X ports of the PRT-HC1-Q04X08 module offer 10Mb/100Mb speed when 1Gb copper optics are utilized.

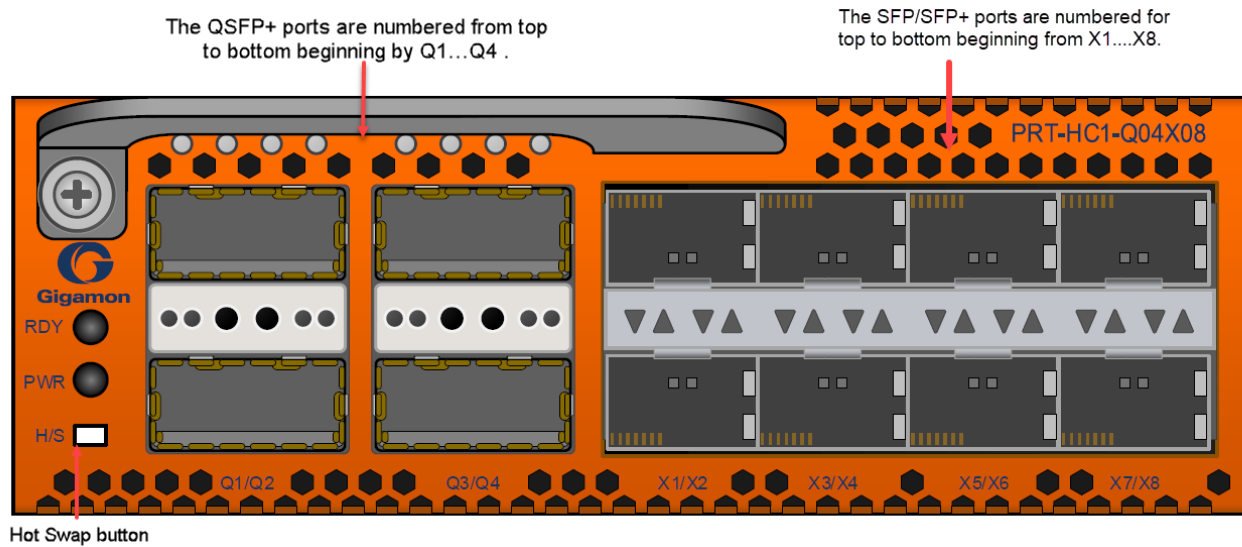

## Features

1. All ports, including breakout ports of this module, can be used as network ,tool, hybrid, circuit, inline network and tool ports.
2. The ports can be used for 10Gb/40Gb/4x10Gb stacking.
3. The module supports 4x10Gb breakout on the 40Gb ports using SR4 optics or PLR4/PSM4 optics
4. The breakout ports can be used in clustering and support IP interface configuration for netflow and tunneling. The ports in the line card can be added as part of GigaStream as well.
5. This module is hot-swappable by using the H/S button.

For details about the supported transceiver, cable type, fan-out, inline ports, and clusters, refer to [GigaVUE-OS Compatibility and Interoperability Matrix](#).

## Module LED

The LEDs on the modules indicate the current operational status. The operational states indicated by the color of Power (PWR) and Ready (RDY) LEDs are as described below.

LEDs	Color	Description
PWR - Power LED	Solid Green	Indicates the module is receiving power
RDY - Ready LED	Solid Green	Indicates normal condition
	Solid Red	Indicates system booting or module down

## Port Status LED

The 40Gb Port LED Q1..Q4 and 1Gb/10Gb SFP/SFP+ LED states are as described below:

LED	Color	Description
LED Q1..Q4	OFF	Port is administratively disabled, or the link is down.
	Solid Green	Link up
Port LED X1..X8	OFF	Port is administratively disabled, or the link is down.
	Solid Green	Link up
Activity LED	N/A	Unused

## SMT-HC1-S (Gen 3 GigaSMART Card)

GigaVUE-HC1 now supports an additional Node called the Generation 3 GigaSMART card (SMT-HC1-S) delivers up to 80Gb of performance throughput. There are no front end ports on this module.



### Ports and LEDs

Generation 3 GigaSMART Card (SMT-HC1-S)	
<b>Maximum Modules Per Chassis</b>	The maximum SMT-HC1-S number of modules per chassis is two.
<b>Power LED (PWR)</b>	The LED indicates the operational status of the module as follows : <ul style="list-style-type: none"> <li>• OFF means the node is not powered up.</li> <li>• GREEN means the node is powered on.</li> </ul>
<b>Ready LED (RDY)</b>	The LED indicates the operational status of the module as follows : <ul style="list-style-type: none"> <li>• OFF means the node is inserted but not yet configured.</li> <li>• RED means the node has failed.</li> </ul>

Generation 3 GigaSMART Card (SMT-HC1-S)	
	<ul style="list-style-type: none"> <li>GREEN means the node is ready.</li> </ul>
H/S LED	<p>The LED indicates the operational status of the module as follows :</p> <ul style="list-style-type: none"> <li>OFF means the node is in normal operation.</li> <li>BLUE means the node is ready to be removed when the card is shut-down or not configured. LED turns on at insertion of module.</li> </ul>
Hot Swap Button	<p>The hot-swap button is not supported, but the command "<b>card slot &lt;slot id&gt; down</b>" can be used to hot-swap the module from the chassis.</p>


## TAP-HC1-G10040 Module

The TAP-HC1-G10040 module provides four 1Gb Copper TAP connections to use as network ports.

Features:

- Eight ports enable 4 TAPs.
- Each port pair is arranged with one port above the other, providing bidirectional traffic flow between two nodes
- The hot-swap button is not supported. But the modules are hot-swappable. For instructions, refer to [Hot Swapping Modules](#).
- A port pair copies Traffic unless it is in the physical bypass state. For details, refer to [Figure 8 TAP-HC0-G10040 Module](#).

For details about the connectivity specifications, refer to “*GigaVUE-OS Compatibility and Interoperability Matrix*”.

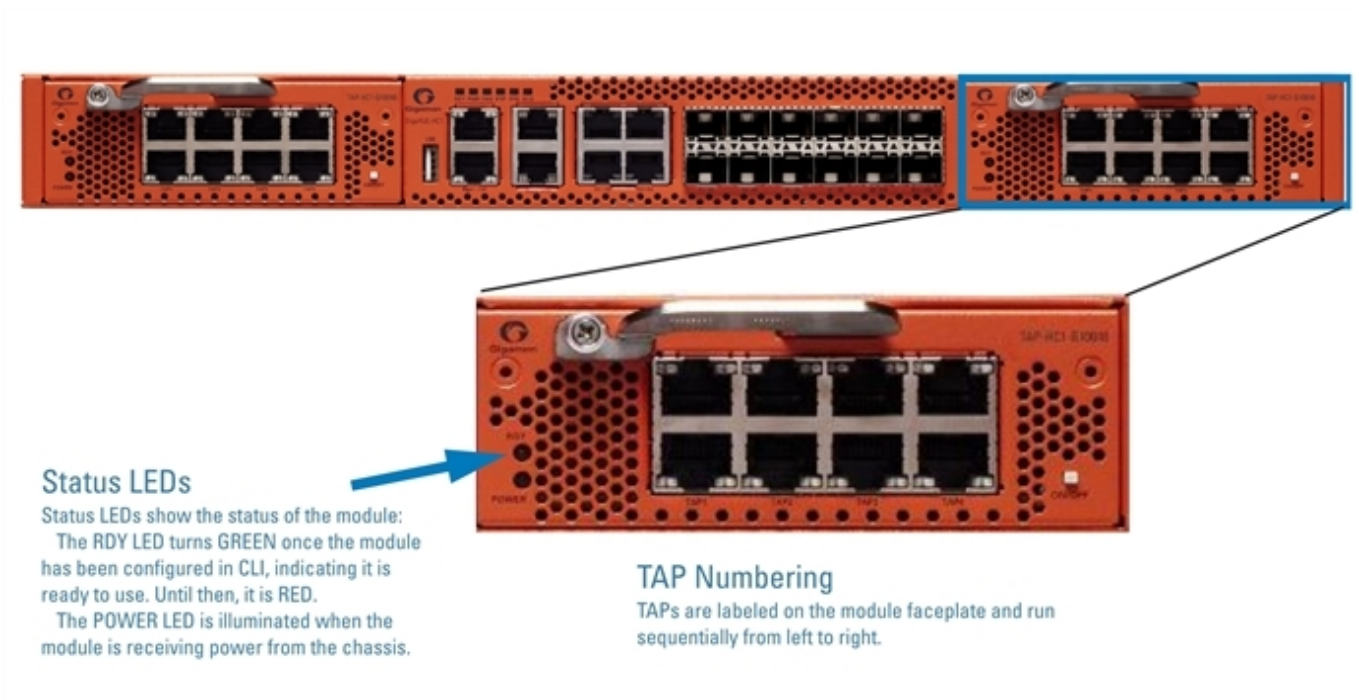

**Figure 8** TAP-HC0-G10040 Module

## Using the TAP-HC1-G10040 Module for Copper Bypass

Through software, you can configure the network ports on the TAP-HC1-G10040 module to be inline network ports. This allows the TAP-HC1-G10040 module to act as a copper bypass module, providing protected inline networks for copper ports.

To use the copper bypass functionality, the GigaVUE-HC1 must be running GigaVUE-OS version 4.8 or higher. For configuration information, refer to the chapter “Configuring Inline Bypass Solution on GigaVUE HC Series TAP Modules” in the *GigaVUE-OS CLI Reference Guide*.


# GigaVUE-HC1 Installation Roadmap

This chapter provides a flow chart of the major steps you need to perform to get a GigaVUE-HC1 node unpacked, rack-mounted, installed, and connected. It also describes what you should do once you have completed the initial setup of the node. Refer to the following sections for details:

- [First Steps – Getting Unpacked, Racked, Installed and Connected](#)
- [Next Steps](#)

## First Steps – Getting Unpacked, Racked, Installed and Connected

You have received your GigaVUE-HC1 node, and now you are ready to get up and running. [Figure 1 Getting Started Roadmap](#) shows the major steps you need to perform to get the GigaVUE-HC1 chassis out of the box, into a rack, installed with modules, plugged in, and running on your network.

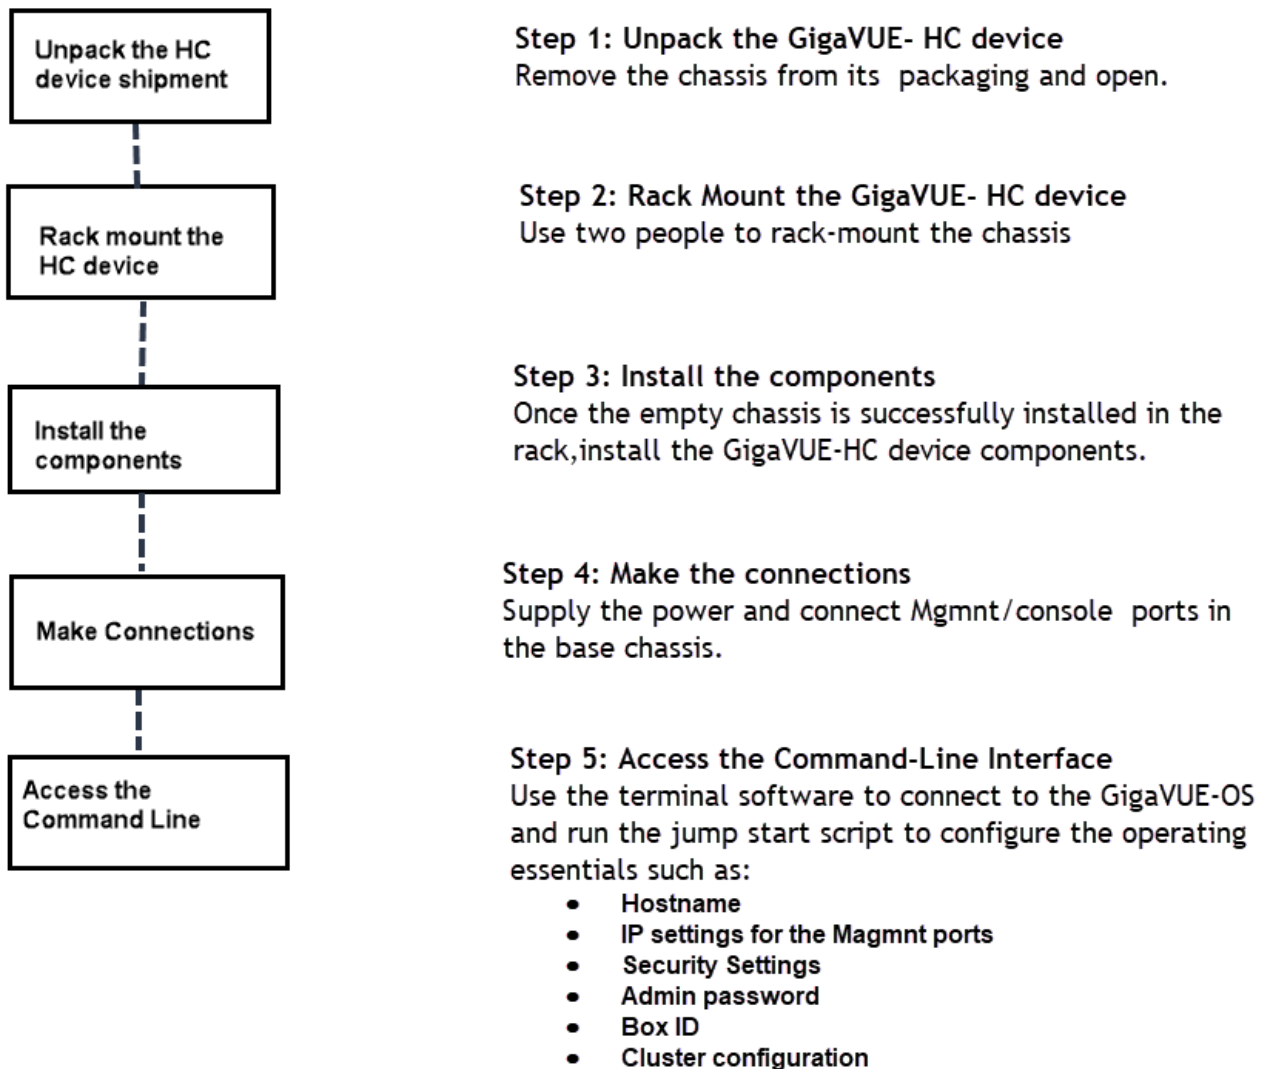

**Figure 1** Getting Started Roadmap

## Next Steps

Once you have performed the initial configuration of the GigaVUE-HC1 node, installing, connecting, and configuring the node, you are ready to get started mapping traffic between network and tool ports.

Refer to the *GigaVUE-OS CLI Reference Guide*, **GigaVUE Administration Guide**, and online help for information.



# Assembling the GigaVUE-HC1 Node

This chapter explains how to unpack, rackmount, and assemble the GigaVUE-HC1 node using the components that came with your shipment.

Separate sections are provided for unpacking and rack-mounting the GigaVUE-HC1 nodes, as well as installing and removing modules. Refer to the following sections for details:

- [Unpacking the GigaVUE-HC1 Shipment](#)
- [Rack-Mounting the GigaVUE-HC1 Chassis](#)
- [Installing and Removing Modules Procedure](#)
- [Module Removal and Replacement Procedure \(Hot Removal\)](#)
- [Next Steps](#)


## Unpacking the GigaVUE-HC1 Shipment

The GigaVUE-HC1 node is shipped with either DC or AC power supply modules, fans, and filler panels installed.

- The chassis and parts kit are shipped in one box
- Modules are shipped in separate boxes.

Perform the following procedure to unpack the node:

1. Inspect the shipping boxes. If any of the cartons were damaged, file a claim with the carrier who delivered them.
2. Open the box containing the GigaVUE-HC1 chassis and remove the parts kit from the top of the shipment. The parts kit contains the power cords, console cable and adapter, and power supply module covers.
3. Open the additional boxes containing the ordered modules and set them aside for assembly (each module is shipped in separate boxes).
4. Leave all protective filler panels in place in the chassis. **DO NOT** install the modules yet. Gigamon recommends rack-mounting the GigaVUE-HC1 chassis empty.

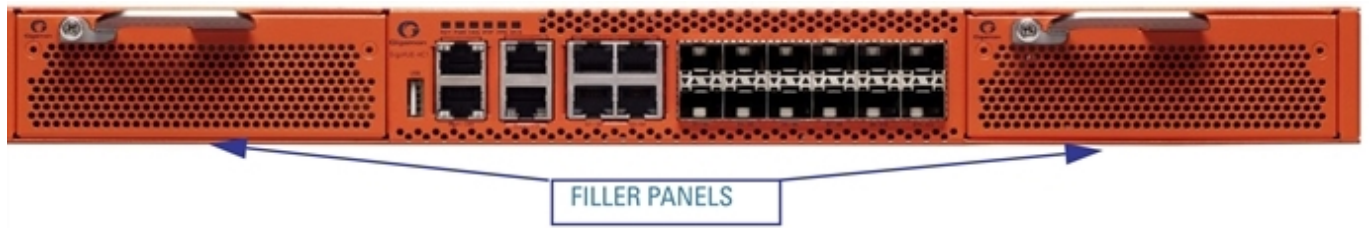

**Figure 1** GigaVUE-HC1 Out of the Box

## Power Adapter Models

There are two power adapter models such as ETA-USA, and TDK-Lambda. These power adapters are high-performance, reliable power supply solution designed for various industrial and commercial applications. It offers efficient energy conversion, robust protection features, and consistent power output to ensure optimal device operation.

The ETA-USA power supply is equipped with a switch to power it ON.





The TDK-Lambda power adapter does not have a switch to power it ON.





## Rack-Mounting the GigaVUE-HC1 Chassis

This section describes how to rack-mount the GigaVUE-HC1 chassis in a standard 1RU rack space using the hardware provided with the chassis. You can install the GigaVUE-HC1 chassis in two-post or four-post racks with a minimum depth of 16in (40.64cm).

### Safety Precautions

Before you get started rack-mounting the GigaVUE-HC1 chassis, make sure you have read the following safety precautions:

- There are a wide variety of racks available on the market. Make sure you consult the instructions provided by your rack vendor for detailed mounting instructions before installing the GigaVUE-HC1 chassis.
- Make sure you install any stabilizers provided for the rack before installing the chassis. Unsecured racks can tip over and cause injury or death.
- Make sure you install devices in the rack from the bottom up, with the heaviest devices at the bottom.
- Make sure you provide adequate ventilation to the nodes installed in the rack.

### Rack-Mounting Procedure

Use the following procedure to rackmount the GigaVUE-HC1 chassis:

1. **Decide whether you want to front-mount or center-mount the chassis in the rack.** Front-mounted nodes will sit flush with the front of the rack, while center-mounted nodes will extend in front of it.

**NOTE:** The GigaVUE-HC1 chassis is not shipped with its standard rack ears attached. However, they are available in the accessory kit. Install the rack ears facing towards the node for a front-mounting position. You can reverse the direction of the rack-ears to center-mount the node.

#### Front-Mount GigaVUE-HC1

##### Front-Mount Position (With Rack Ears Attached)

Rack ears face towards the front of the node for front-mounting.

##### Center-Mount Position

Reverse the rack ears so they face towards the rear of the node for center-mounting.



**Figure 2** Rack Ears for Front Mount (Reverse Rack Ears for Center Mount)

2. Make sure you have not installed any modules in the chassis yet. Gigamon recommends rack-mounting the GigaVUE-HC1 chassis before installing modules to make it easier to handle the chassis during the installation.
3. Select a suitable location for the rack that will hold the GigaVUE-HC1 chassis. Choose a location that is clean, Dust free, and well-ventilated. You will need access to grounded power sources. Avoid areas where heat, electrical wire, and electromagnetic fields are generated.

Plan for enough clearance in front of a rack so you can access the modules easily (approximately 25in [63.50cm]) and enough clearance in the back of the rack to allow sufficient airflow and installation of the rear components, such as power supply modules.

4. Locate an open 1RU rack space and lift the node into place. It takes two people to lift the GigaVUE-HC1 to place it on the rack. Insert a screw through the rack ear on each side into the rack, to hold the node in place. Tighten the screws.
5. Carefully lift the chassis into the rack and place a screw on each side to hold the chassis.
6. Tighten the screws and add additional screws to secure the node. **Use two screws on each rack ear.**

## Four-Post Rack Mounting

Use rack ears and full-length brackets to mount the GigaVUE-HC1 in a four-post rack. The rack ears attach at the front of the unit, and the brackets attach at the rear, as follows:

- Attach the rack ears so they face towards the front of the system for mounting in four-post racks.
- Attach the full-length brackets to the sides of the GigaVUE-HC1 with enough free play to position them to fit your rack's dimensions. After the brackets are attached to the rack's rear posts, tighten the bracket connections to the sides of the GigaVUE-HC1.

For the four-post rack installation using the extended brackets, refer to [Figure 3 Extended Bracket Installation](#)

Extended Bracket



**Figure 3** *Extended Bracket Installation*

## Installing and Removing Modules Procedure

The procedure for installing modules is to remove the filler panels, install the module, then fasten it with the ejector lever and tighten the thumb screw on top of the lever. The following procedure has the details.

### Hot Swapping Modules

Modules are hot-swappable – they can be installed or removed from the chassis with the power on. **To remove a module safely with the power on, you must follow the procedure in [Module Removal and Replacement Procedure \(Hot Removal\)](#).**

**Install proper software versions prior to inserting any new modules.**

Gigamon often makes new modules available for GigaVUE-HC1 nodes. New modules are usually introduced starting, with a new software release. Make sure you install the supporting software release before physically installing the new module.

If you do install a new module before its supporting release, the module will appear in the **show cards** output with an **Operational Status** of **unsupported**.

In some cases, if you subsequently upgrade the node to the release that supports the new module, it can appear persistently in the **show cards** output with an **Operational Status** of **inserted**. To make the module operational, you must unconfigure it with the **no card slot x** command, followed by configuring the module with **card slot x**.

### Module Installation Procedure


Use the following procedure to install GigaVUE-HC1 modules:

1. Make sure you are wearing an ESD-preventive wrist or ankle strap.
2. Locate the modules and remove them from their packaging.
3. Remove the protective filler panels from the target bays for all modules to be installed. Keep the filler panels so they can be easily reused if the module is ever removed. You can install modules in either of the two available front bays on the GigaVUE-HC1.

**NOTE:** To prevent any improper air flow and overheating the node, **do not leave any bays uncovered**.

4. Pull out the lever on the top of the module. Carefully slide the module into the bay. Push the lever back in and tighten using the thumb screw on the lever.



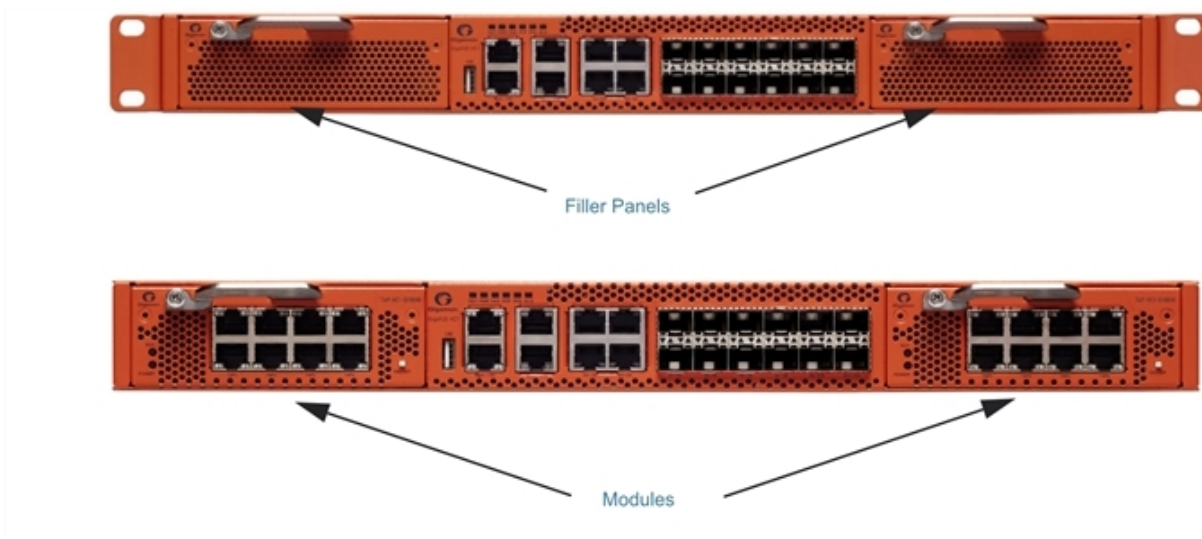

**Figure 4** *Installing Modules*

5. Install any additional modules by repeating the previous two steps.

**NOTE:** The first time you install a module in the node, you need to configure the node to recognize it with the **card** command and save your changes with **write memory**. Refer to [Configuring Basic GigaVUE HC Series Settings](#) for details.

**This completes the installation of the modules on the GigaVUE-HC1.**

## Module Removal and Replacement Procedure (Hot Removal)

Use the following procedure to remove a module from the GigaVUE-HC1 node with the power on.

**IMPORTANT:** Hot removal of modules without following the listed steps can cause system instability and require a reboot.

Before starting, make sure you are wearing an ESD-preventive wrist or ankle strap.

### Replacing a Module with the Same Type of Module

1. Shut down the module to prepare for removal with the following CLI command:  
**(config) # card slot <slot id> down**
2. Slide the module out of the chassis and store it in a static-safe location.
3. Insert the new module of the same type.

### Replacing a Module with a Different Type of Module

1. Remove all packet distribution configurations related to the module using the following CLI command:



**(config) # no card slot <slot ID>**

2. Slide the module out of the chassis and store it in a static-safe location.
3. Insert the new module of a different type.
4. Issue the following CLI command to make the card available for configuration:

**(config) # card slot <slot ID>**

## Fan Replacement Procedure

The replacement procedure would take less than 15 seconds. The fan modules are hot-swappable. To remove a fan, do the following:

1. Power down the GigaVUE-HC1 device.
2. Press the black tab toward the center of the fan module handle to release the latch and then pull.

To insert a fan module, proceed as follows:

1. Power down the GigaVUE-HC1 device.
2. Insert the fan module into the empty slot and slide it until it is flush with the rear of the chassis, and it will not slide in any further.

## Next Steps

Refer to [Configuring Basic GigaVUE HC Series Settings](#) for information on connecting with the GigaVUE-OS to make your initial configuration settings.

# Basic GigaVUE HC Series Connections and Configuration

This chapter describes how to establish your first configuration session with the GigaVUE-HC1 and set the basic initial configuration options necessary to get the node up and running.

Refer to the following sections for details:

- [Grounding the GigaVUE-HC1 Chassis](#)
- [Connecting Power to the GigaVUE-HC1](#)
  - [Connecting -48V DC Power Supply Modules](#)
- [Connecting Serial Console and Mgmt Ports](#)
- [Configuring Basic GigaVUE HC Series Settings](#)
  - [Access the Command-Line Interface over the Console Port](#)
  - [Run the Jump-Start Script](#)
  - [Configure Modules and Enable Ports](#)
- [Command-Line Basics](#)
  - [Command-Line Modes](#)
  - [Entering Commands in the CLI](#)
  - [Command-Line Syntax – Entering Commands](#)
- [The Basic Commands](#)
- [Completing the Initial GigaVUE HC Series Setup](#)

## Grounding the GigaVUE-HC1 Chassis



The GigaVUE-HC1 chassis is drilled for ground screws near the left corner at the rear of the chassis. Connect grounding wire with spade lugs to the ground screws on the chassis and earth ground using the following procedure.

1. LNear the left corner at the rear of the chassis, locate the grounding holes ([Figure 1 Holes for Ground Screws \(DC-Powered GigaVUE-HC1\) GigaVUE-HC1 node](#)).



**Figure 1** Holes for Ground Screws (DC-Powered GigaVUE-HC1)

2. Install ground screws meeting the following specifications:  
**#8 Panhead, Phillips-drive, Exterior SEM screw. Thread size = 3/2 Length = 1/2in (1.27cm)**
3. Connect grounding wire with spade lugs both to the ground screws and to the earth ground. The specifications for the ground wire and lugs are as follows:  
**Standard Wire 14 (AWG); Stud Size #6 (0.138in/0.351cm); Spade Width 0.32in/0.813cm**
4. Tighten the screws to secure both the chassis ground screws and the earth ground screws.

## Connecting Power to the GigaVUE-HC1


The GigaVUE-HC1 supports AC and DC power in a 1+1 redundant configuration. In all cases, only a single power supply module is required to operate the node. However, connecting both modules in a 1+1 configuration provides redundant power.

The procedure for connecting power to the GigaVUE-HC1 is similar to the other GigaVUE HC Series nodes:

GigaVUE HC Series Chassis Type	Number of Power Supply Modules
GigaVUE-HC1	2

1. Plug an approved C13 power cable into each of the power supply modules at the rear of the GigaVUE-HC1 chassis.

**Note:** For information on connecting the optional DC power supply modules, refer to [Figure 4 Connecting DC Power Supply Module](#).

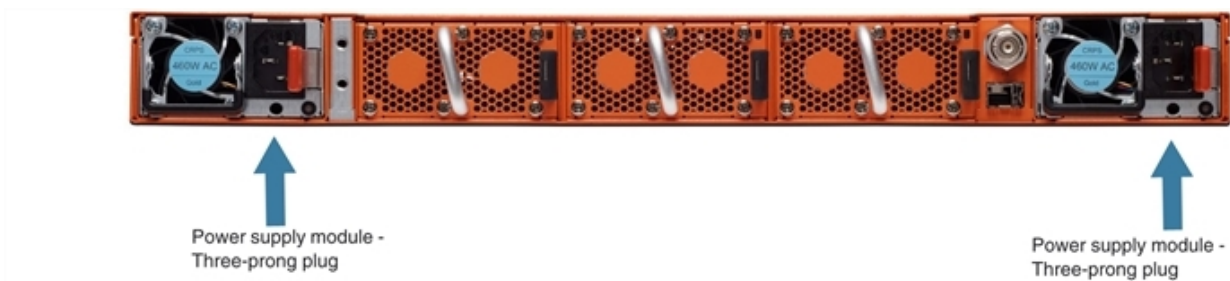

**Figure 2** Connecting AC Power (GigaVUE-HC1)

2. Plug the other end of the power cables into a power source that can supply adequate power. For optimal power protection, plug the power supply modules into separate circuits. When connecting to the external AC power source, ensure that a Surge Protective Device (SPD) is installed at the AC power inlet. For information on GigaVUE-HC1 power requirements refer to [AC- and DC-Powered GigaVUE-HC1](#).

**NOTE:** To avoid disk corruption, please ensure the "reload halt" command is executed before an ungraceful power shutdown or power supply module removal.


3. Power is turned on when the unit is plugged in and turned off when the unit is unplugged. To remove a power supply module, refer to [Removing a Power Supply Module](#).

**NOTE:** Once the power supply is powered OFF, wait for 1 minute (60 seconds) before powering the supply ON for GigaVUE-HC1.

**NOTE:** The ETA-USA power adapter has a switch; ensure it is turned ON. Refer to the [Unpacking the GigaVUE-HC1 Shipment](#) for more information.

## Removing a Power Supply Module

When removing a power supply module, refer to the following label on the chassis:

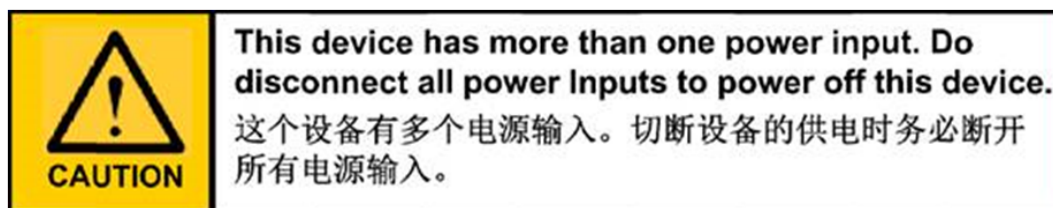

**Figure 3** Power Caution Label

To remove a power supply module:

1. Power down the module by disconnecting the power inputs.
2. Wait about 90 seconds for the node to stabilize.

3. Remove the power supply module.

**NOTE:** Do not remove a power supply module while inputs are still connected.

## Connecting -48V DC Power Supply Modules

The GigaVUE-HC1 is available with DC power supply modules. This section provides instructions for connecting a -48V DC power source to the DC power supply modules.

### To connect a -48V DC input to the DC power supply module:

1. Plug the DC power cable adapter into the DC power supply.

**NOTE:** Terminal block supports 10AWG.

2. If PSM grounding is required, connect earth ground to the SAFETY GROUND (green/yellow) terminal using a straight blade screwdriver.



**Figure 4** Connecting DC Power Supply Module

3. Connect the positive and negative power wires to the appropriate terminals using a straight-blade screwdriver.
  - o Connect positive source wire to the + RETURN (black) terminal using a straight blade screwdriver.
  - o Connect -48V source wire to the -48V (blue) terminal using a straight blade screwdriver.



**IMPORTANT:** The leads to the DC power supply modules on the GigaVUE-HC1 node should attach from the side of the chassis **away** from the terminal block. Run the wires to avoid obstructing airflow for the adjacent fans.

4. Repeat [Step 2](#) and [Step 3](#) for the other power supply module in the GigaVUE-HC1 chassis.

## Regional Compliance (Australia and New Zealand Standards)

This section provides guidance to ensure that the DC power cable complies with AS/NZS 5000 and AS/NZS 3015.


**NOTE:** For compliance with ANZ standards, the DC cable can be ordered using part number **PCD-00051**. PCD-00051 is supported on GigaVUE-TA25, GigaVUE-TA200, GigaVUE-HC1, and GigaVUE-HC1-Plus (with D-SUB DC connector). This requirement is optional and applicable only within the Australia/New Zealand region.

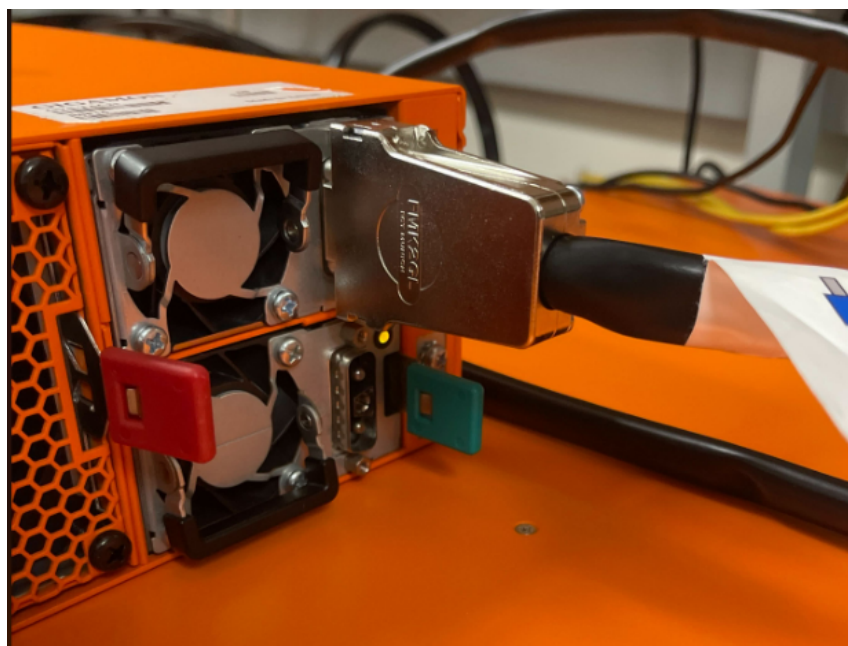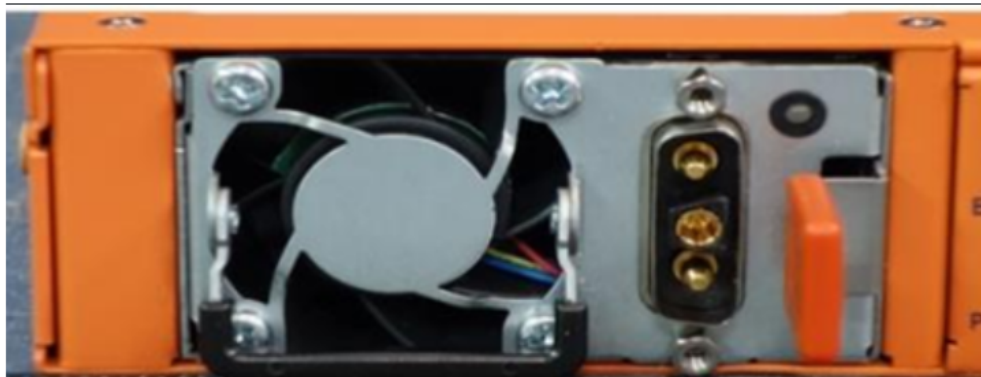

### To connect a -48V DC input to the DC power supply:

Establishing a reliable -48V DC input connection to the power supply involves connector assembly details, cable specifications, and insulation features for optimal performance.



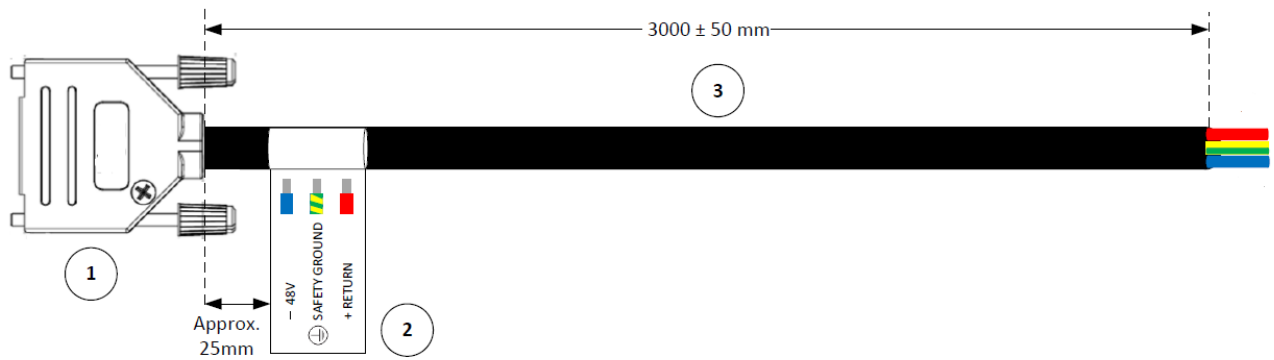

1. D-sub power cable connector assembly featuring a 3v3 type socket, contacts and backshell.
2. The table below outlines the colors and specifications of the negative cable, positive cable, and ground cables.

Cables	Color	Requirements
- 48V cable	Blue	<b>Insulation:</b> PVC <b>Conductor:</b> 10AWG, 6mm <sup>2</sup> , 30A
+ Return Cable	Red	<b>Insulation:</b> PVC <b>Conductor:</b> 10AWG, 6mm <sup>2</sup> , 30A
Safety ground cable	Green, Yellow	<b>Insulation:</b> PVC, <b>Conductor:</b> 10AWG, 6mm <sup>2</sup> , 30A

3. The cable features an outer sheath made of black PVC for enhanced durability and insulation. The cable measures 3000 mm, with a tolerance of  $\pm 50$  mm.

**NOTE:** Insulation material throughout the length of the cable must be rated for 105° C temperature.

## Connecting Serial Console and Mgmt Ports

### To make basic GigaVUE-HC1 connections (serial console and Mgmt ports):

1. Locate the DB9-to-RJ45 serial cable provided with the GigaVUE-HC1. This cable is called a *console cable*.

**NOTE:** This cable is Cisco-compatible. Refer to [Appendix D, Console Port Signaling and Cabling](#) for pinout details.

2. Connect the RJ45 end of the console cable to the **console** port on the left.
3. Connect the DB9 end of the console cable to a PC's COM port.
4. Connect a standard ethernet cable (Cat5e or better) to the 10/100/1000 **Mgmt** port on the chassis.
5. Connect the other end of the ethernet cable to an Ethernet network.

## Configuring Basic GigaVUE HC Series Settings

This section describes how to perform the initial configuration of basic GigaVUE HC Series node settings over a serial terminal connection to the console port.

The system administrator must initially log in with a default **admin** account using a default password and then must immediately change the password through the **jump-start** script. Refer to [Access the Command-Line Interface over the Console Port](#).

Once you have used the console port to configure the Mgmt port's network properties, you can configure the GigaVUE HC Series node remotely using the Mgmt port's network connection.

The same commands are available in the GigaVUE-OS command-line interface regardless of whether you are connected over the Mgmt or console port.


### Access the Command-Line Interface over the Console Port

Use the console port on the left side of the base chassis to access the GigaVUE-HC1 as follows:

1. Make the basic power and console cable connections described in [Connecting Serial Console and Mgmt Ports](#) and power on GigaVUE-HC1.
2. Start a terminal application on the PC. Common terminal applications include TeraTerm, PuTTY, and Hyperterminal.
3. Select the COM port connected to the console cable attached to the control module. For example, **COM1**.
4. Configure the port settings for the console connection as follows:
  - **Bits per second** – 115,200
  - **Data bits** – 8
  - **Parity** – None
  - **Stop bits** – 1
  - **Flow control** – None

[Figure 5 Setting COM Port Properties for the Console Connection](#) shows an example of how these settings are configured in Hyperterminal.



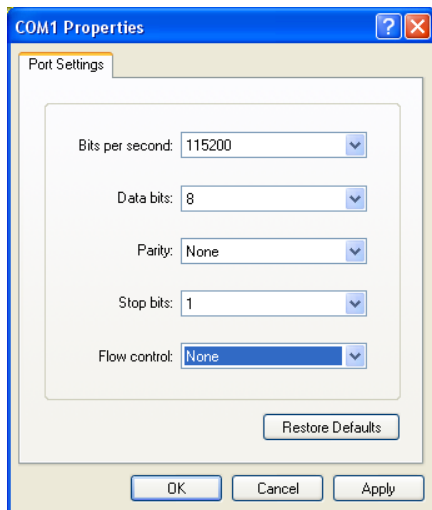

**Figure 5** Setting COM Port Properties for the Console Connection

5. Start the terminal connection. You may need to press **Enter** a few times before you see the **login:** prompt.
6. Log in to the command-line interface with the following default user account and password:

**User:admin**

**Password:admin123A!**

The **configuration jump-start** automatically starts and forces a password change. The system administrator must change the password on the default **admin** account through the **jump-start** script. The default password (admin123A!) is no longer allowed. Refer to [Run the Jump-Start Script](#) for details.

A password must meet the following standards:

- include 8-64 characters
- include at least one numeral
- include at least one upper case letter
- include at least one lower case letter
- include at least one special character (for example, !, @, #, \$, %, ^, &, or \* – ASCII 0x21, 0x2F, 0x3A, 0x40, 0x5B, 0x5F, 0x7B, 0x7E)
- Must not include the user name or parts of full-name.

At the Admin password? prompt in the **jump-start** script, enter a new password that meets the standards, then confirm the password.

You will also configure some Admin and Monitor level users with the procedure described in [Initial User Account Configuration](#).

## Run the Jump-Start Script

Gigamon provides GigaVUE HC Series nodes with a **jump-start** script that walks you through the process of configuring basic settings. Run this script as follows:

1. Switch to **Configure** mode.

The GigaVUE HC Series provides three command entry modes with increasingly powerful rights – **Standard**, **Enable**, and **Configure**. The jump-start script is only available in Configure mode:

- a. Type **en <Enter>** to switch to Enable mode.

The system prompts changes from **[hostname] >** to **[hostname] #**.

- b. Type **config t <Enter>** to switch to Configure mode.

The system prompts changes from **[hostname] #** to **[hostname] (config) #**.

2. Run the jump-start script with the following command:

**(config) # config jump-start**

3. Follow the jump-start script's prompts to configure the settings listed in the following table.

**NOTE:** If you change your mind about a particular setting, you will have a chance to change it at the end of the script.

<b>Hostname</b>	The hostname appears in the system prompt and is used to identify the chassis in SNMP traps.
<b>Management Port Network Settings</b>	<p>Use either DHCP or specify a static IP address and netmask. If you do not use DHCP, you are prompted to configure the following additional options:</p> <ul style="list-style-type: none"> <li>■ <b>Default Gateway</b> Supply the IP address of the default gateway for the node.</li> <li>■ <b>DNS Server</b> Supply the IP address of the DNS server for the node. A valid DNS server is required for successful use of TACACS+.</li> <li>■ <b>Domain Name</b> Supply the domain name for the node (for example, mycompany.com).</li> </ul>
<b>Enable IPv6?</b>	You can enable the use of IPv6 for the management port. IPv6 is used in addition to IPv4 if you enable this option. If you enable the IPv6, you have the option of enabling IPv6 auto-configuration or specifying a static address.

<b>Security Settings</b>	<p>Enable the following security settings:</p> <ul style="list-style-type: none"> <li>■ <b>secure cryptography mode</b></li> <li>■ <b>secure passwords mode</b></li> <li>■ <b>minimum password length</b></li> </ul> <p>Refer to the <b>GigaVUE-OS CLI Reference Guide</b> for security information .</p>
<b>Admin Password</b>	The password for the <b>admin</b> account must be changed to a non-default password.
<b>Cluster Enable?</b>	<p>Enable cluster support if this node will be a part of a cluster of connected GigaVUE HC Series nodes. If you enable cluster support, the jump-start script prompts you to supply the <b>Cluster ID</b>, <b>Cluster Name</b>, and <b>Cluster Mgmt Virtual IP Address</b>. You can join an existing cluster by supplying values that match existing settings.</p> <p><b>Note:</b> For clustered nodes configured to use the eth1 port on a control card as both the Mgmt and Cluster Management port, keep in mind that NTP is also used over the eth0 Mgmt port on the GigaVUE HC Series node. In a case like this, you can only use one or the other.</p> <p>If clustering is enabled, you will not be prompted for a box ID in the next step.</p> <p>Refer to the <i>GigaVUE-OS CLI Reference Guide</i> for information on setting up a cluster.</p>
<b>Box ID for the Node</b>	<p>Supply a numerical box ID for the node. This box ID is used to identify network/tool ports in the node – the format is box ID/ slot ID/port ID.</p> <p>You will only be prompted for a box ID if clustering was not enabled in the previous step.</p>

4. Review your settings. You can change a setting by specifying its listed line number and re-entering the setting.
5. When you are satisfied with your settings, exit the script as prompted. GigaVUE HC Series automatically saves your settings.
6. Restart the node with the **reload** command.

## Need to Change Any Settings?

If you need to change any of the settings you made in the jump-start script, you can either run the script again or change individual settings using the following commands in the Configure command mode:

- **Hostname** command to change the node's hostname.

- **Interface eth0** command to reconfigure or fine-tune Mgmt port settings, including basic IP settings (DHCP or static address and subnet mask) and physical parameters (duplex, MTU, and speed).
- **Ip** command to change the default gateway, DNS server, and domain name.
- You can also use the **username admin password <password>** command to change the **admin** user's password.

Refer to [The Basic Commands](#) for a quick summary of the available GigaVUE HC Series commands.

## Configure Modules and Enable Ports

Modules must be configured and ports enabled before they can be used on the GigaVUE-HC1. Use the following procedure to bring up all modules and enable ports before starting to issue commands in the CLI:

1. Connect to the console port as described in the previous section.
2. Wait at least two minutes after the system prompt appears for the modules to be initialized, and then switch to **Configure** mode.

The GigaVUE HC Series provides three command entry modes, each with increasingly powerful rights – **Standard**, **Enable**, and **Configure**. The jump-start script is only available in Configure mode:

- a. Type **en <Enter>** to switch to Enable mode.

The system prompt changes from **[hostname] >** to **[hostname] #**.

- b. Type **config t <Enter>** to switch to Configure mode.

The system prompt changes from **[hostname] #** to **[hostname] (config) #**.

3. Reset the terminal settings to match the current window with the following command:

**(Config) # terminal resize**

4. Use the following command to check module status:

**(Config) # show cards**

5. Verify the following in the **show cards** output:
  - **Box ID** is not empty.
  - **Config** shows **yes** for all cards.
  - **Oper Status** shows **up** (or **inserted**) for all modules.
6. If **Config** does not show **yes** for all modules after two minutes, take the action corresponding to your **show cards** output, as follows:

show cards Output:	Corrective Action
<b>Config</b> does not show <b>yes</b> for any modules (including base chassis)	<b>(config) # chassis box-id &lt;integer&gt;(config) # card all</b>
<b>Config</b> shows <b>yes</b> for base chassis but not one or more modules	<b>(config) # card all</b>

The **card all** command configures the node for all currently unconfigured modules. However, it can only be used after the node's box ID has been configured as reported at the top of the **show cards** command output.

- Use the **show cards** command again to verify the output.

The **show cards** command output for a GigaVUE-HC1 displays the properly configured modules.

```
HC1(config)# show cards
```

```
Box ID: 1
```

Slot	Config	Oper Status	HW Type	Product Code	Serial Num	HW Rev
cc1	yes	up	HC1-Main-Board	132-00D6	1D60-1122	2.0-23
1	yes	up	HC1-X12G4	132-00D7	1D60-1122	2.0-23
2	yes	up	TAP-HC1-G10040	132-00D8	1D80-000B	2.0-78
3	yes	up	TAP-HC1-G10040	132-00D8	1D80-002B	2.0-78

- Issue a **show port** command to determine the port numbers that need to be enabled.
- Use the **port** command with the **admin** argument to enable ports on modules as well as ports on the base chassis. For example, the following command enables all ports on the 10Gb ports on the base chassis:

```
(config) # port 1/1/x1..x12 params admin enable
```

- Save your changes so that the cards and ports come up automatically at the next reboot:

```
(config) # write memory
```

## Command-Line Basics

This section provides a quick orientation to the GigaVUE-OS command-line interface – how to enter commands, get help, and so on.

### Command-Line Modes

The GigaVUE-OS can operate in one of three modes, each with its own set of available commands –

- Standard
- Enable

- Configure.

When you first launch the CLI, you start in Standard mode with access to a limited number of commands to review node status. As you move from **Standard** mode to **Enable** mode to **Configure** mode, the power and the number of commands available increase, as summarized in [Figure 6 GigaVUE-OS Command-Line Modes](#).

#### Differences in Commands for admin and default Level Users

The commands available in the GigaVUE-OS differ depending on whether you are logged in as **admin** or **default** level user. Commands listed in bold in [Figure 6 GigaVUE-OS Command-Line Modes](#) are only available to **admin** level users.



Figure 6 GigaVUE-OS Command-Line Modes

**NOTE:** If you are working simultaneously with multiple GigaVUE HC Series nodes, you may want to assign each a separate hostname so its easy to identify separate terminal sessions from the system prompt. Admin users can do this in Configure mode with the **hostname <name>** command.

## Entering Commands in the CLI

The GigaVUE-OS provides several conventions that make it easy to identify available commands and enter them quickly:

Technique	Description
Context-Sensitive Help	<p>The <b>?</b> symbol is the key to receiving help wherever you are in the CLI:</p> <ul style="list-style-type: none"> <li>Type <b>?</b> by itself to see a list of all available commands.</li> <li><b>Word Help</b> – Type a partial word with <b>?</b> mark immediately following the partially-typed word to see a list of all possible commands using the word entered so far. For example, if you typed <b>r?</b> in Configure mode, the CLI would return the following possible commands based on what you have entered so far: <b>radius-server Configure RADIUS server settings reload Reboot or shut down the system reset Reset this system to its factory state</b></li> <li><b>Command Help</b> – Type a command followed by a question mark to see all possible arguments for the command as entered. If the node returns <b>&lt;cr&gt;</b>, that means the command can be entered as-is. For example, if you entered <b>gigastream ?</b>, you would see <b>alias</b>. You can build your way through the entire command tree by entering <b>?</b> after each new argument. For example, after entering <b>gigastream alias myalias ?</b>, you would see the next valid argument – <b>port-list</b>.</li> </ul> <p><b>Note:</b> Typing <b>?</b> accesses the help system immediately – you do not need to press <b>&lt;Enter&gt;</b>.</p>
Partial Command Entry	<p>For all GigaVUE HC Series commands and arguments, you only need to enter enough characters to distinguish the command from all other available commands. So, for example, you do not have to enter the full command <b>debug</b> – there is only one command starting with the letter <b>d</b>, so you only have to enter <b>d</b>.</p>
Command Completion	<p>If you have partially typed a command, you can press <b>Tab</b>, and the CLI will attempt to complete the command based on what has been entered so far.</p> <p>Use the command completion feature with partial command entry – you can press <b>Tab</b> while entering a command to see a list of all available commands matching what you have</p>



Technique	Description
	<p>entered so far. For example, you can press <b>p&lt;Tab&gt;</b> and the node will return:</p> <p><b>ping ping6 port port-group port-pair ptp</b></p> <p>Based on this information, you only need to enter <b>pt</b> to distinguish the <b>ptp</b> command from the other commands beginning with the letter <b>p</b>.</p>

## Command-Line Syntax – Entering Commands

You enter all configuration commands for the GigaVUE-OS in the command-line interface. Enter commands by typing enough characters to uniquely identify the command and pressing **<Enter>**.

When entering commands, keep in mind the following rules:

- Successful commands return no response in the CLI; commands with errors return an error response beginning with **%**, followed by a short error description.
- All commands are case-sensitive.
- Aliases are case-sensitive and accept both lower and upper case – for example, **my\_alias** and **My\_Alias** refer to two separate maps.
- The **no** command is used to remove configuration settings. For example the **no connect alias myconnect** deletes the named **myconnect**.
- Port numbers are entered in **<chassis-id>/<slot-num>/<port-num>** format. For example, **1/1/x1** identifies the 10Gb/1Gb port x1 in slot 1 on box 1.
- Strings must consist entirely of alphanumeric characters with no spaces. The only exceptions are the underscore (**\_**) and hyphen (**-**) characters. Those are allowed.

For example, in Configure mode, **port 1/1/g1 alias My\_Alias** is legal, but **port 1/1/g1 alias My Alias** is not.

**NOTE:** Some string fields do accept spaces provided the input is made inside quotation marks (for example, the **banner login** command described in [Using a Custom Banner](#)).

### Configure Mode Syntax

Users of GigaVUE HC Series nodes may be accustomed to entering the word **config** before many commands – **config map**, **config port-filter**, and so on. When using the GigaVUE-OS, the “config” part of the command is implied whenever you are working in Configure mode. The system prompt helps you remember this by including the word **(config)** in parentheses. For example:

**(config) #**

So, instead of entering **config gigastream** to set up a GigaStream consisting of multiple ports, you just enter **gigastream** followed by the necessary arguments.

The **config** part is implied because you already work in the Configure mode. For example:


**(config) # gigastream alias mystream port-list 1/1/x1..x4**

## Paging through CLI Output

By default, the CLI returns output exceeding the configured terminal length in pages. The CLI provides the same features for working through the paged output as the Linux programs **less** and **more**. Press the **h** key when presented with the paging prompt at the base of the display to see paging options – [Figure 7 Viewing Paging Options](#) provides an example of how to do this.

If you prefer, you can disable paging either for the current session or by default:

- **Disable for Current Session(config) # no cli session paging enable**
- **Disable for All Sessions (Default)(config) # no cli default paging enable**

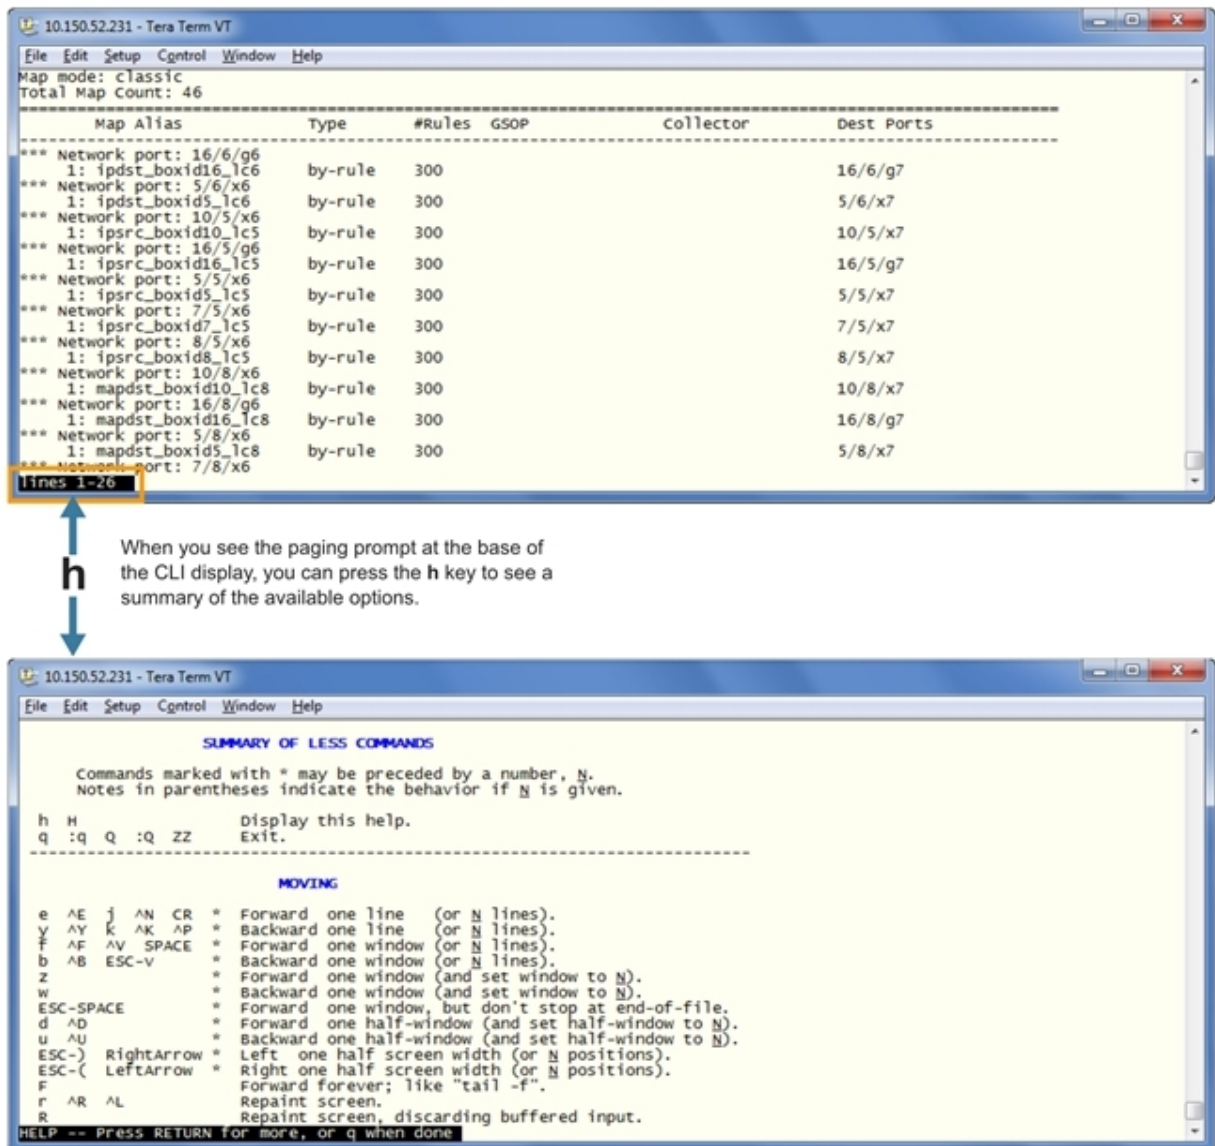

**Figure 7** Viewing Paging Options

## The Basic Commands

As described in [Entering Commands in the CLI](#), the commands available in Configure mode are a superset of those available in Standard and Enable modes.

Most commands have multiple supported arguments. You can see the exact arguments available at any point of command entry by typing it into the CLI followed by **?**.

The table below lists the top-level commands for the in Configure mode.

Table 1: CLI Commands

Command	Description
<b>aaa</b>	Configures authentication, authorization, and accounting setting
<b>apps</b>	Enables access to Gigamon Applications, such as Application Session Filtering (ASF), GTP backup, GTP whitelisting, inline SSL/TLS decryption, keystore, NetFlow, SIP whitelisting, and Passive SSL decryption. GigaSMART applications are not supported on the GigaVUE TA Series.
<b>banner</b>	Sets a node login banner.
<b>bond</b>	Configures bonded interface settings.
<b>boot</b>	Configures node boot parameters.
<b>card</b>	Configures a line card or module.
<b>chassis</b>	Configures the GigaVUE HC Series chassis.
<b>clear</b>	Resets statistics or clears caches.
<b>cli</b>	Configures CLI shell options.
<b>clock</b>	Sets the node clock or timezone.
<b>cluster</b>	Configures a cluster of connected GigaVUE-OS nodes.
<b>configuration</b>	Manages configuration files.
<b>configure</b>	Enter Configure mode.
<b>coreboot</b>	Installs new core boot software.
<b>crypto</b>	Manages X.509 certificates for the GigaVUE HC Series node's Web server.
<b>debug</b>	Generates a dump file for use in debugging issues with Gigamon Technical Support.
<b>disable</b>	Exits Enable mode and returns to Standard mode.
<b>email</b>	Configures email and event notification via email.
<b>enable</b>	Enters Enable mode.
<b>exit</b>	Exits Configure mode and returns to Enable mode or logs out of the CLI.
<b>file</b>	Manages TCP and debug dump files on disk.
<b>filter-template</b>	Configures flexible filter templates on GigaVUE-HC3 and GigaVUE-TA100.
<b>gigasmart</b>	Configures an interface address to a GigaSMART card or node.
<b>gigastream</b>	Configures a GigaStream—a group of ports acting as a single addressable tool port destination or stack-link.
<b>gsgroup</b>	Configures a GigaSMART group consisting of one or more internal GigaSMART ports.
<b>gsop</b>	Configures a GigaSMART operation consisting of one or more advanced processing applications.

Command	Description
<b><i>gsparams</i></b>	Configures GigaSMART parameters.
<b><i>halt</i></b>	Shuts down the node without powering it off.
<b><i>hb-profile</i></b>	Configures a heartbeat profile on GigaVUE HC Series nodes.
<b><i>help</i></b>	Views a description of the interactive help system.
<b><i>hostname</i></b>	Specify the node's hostname. The hostname appears in the system prompt and in SNMP traps.
<b><i>ib-pathway</i></b>	Reserved for future use.
<b><i>image</i></b>	Manages node software images.
<b><i>inline-network</i></b>	Configures an inline network on GigaVUE HC Series nodes.
<b><i>inline-network-group</i></b>	Configures an inline network group on GigaVUE HC Series nodes.
<b><i>inline-netlag</i></b>	Configure Inline-Netlag.
<b><i>inline-serial</i></b>	Configures an inline tool series on GigaVUE HC Series nodes.
<b><i>inline-tool</i></b>	Configures an inline tool on GigaVUE HC Series nodes.
<b><i>inline-tool-group</i></b>	Configures an inline tool group on GigaVUE HC Series nodes.
<b><i>interface</i></b>	Configures network interfaces.
<b><i>ip</i></b>	Configures IP settings for the eth0 Mgmt port.
<b><i>ipv6</i></b>	Configures IPv6 settings for the eth0 Mgmt port.
<b><i>job</i></b>	Configures scheduled jobs.
<b><i>ldap</i></b>	Configures LDAP server settings for authentication.
<b><i>license</i></b>	Activates features using license keys. Licensing is used for GigaSMART, Port, or Advanced Features License.
<b><i>logging</i></b>	Configures event logging.
<b><i>map</i></b>	Configures maps and map rules to manage GigaVUE HC Series traffic distribution.
<b><i>map-group</i></b>	Configures map groups for GTP forward listing and GTP flow sampling.
<b><i>map-passall</i></b>	Creates a pass-all map to send all traffic on a network port to a tool port irrespective of the other packet distribution in place on the port.
<b><i>map-scollector</i></b>	Configures shared collector map parameters.
<b><i>map-template</i></b>	Configures a map template.
<b><i>nhb-profile</i></b>	Configures a negative heartbeat on GigaVUE HC Series nodes.
<b><i>no</i></b>	Deletes or clears certain configuration options.
<b><i>notifications</i></b>	Configures notification settings.
<b><i>ntp</i></b>	Enables and disables the use of NTP, as well as adds NTP servers.
<b><i>ntpdate</i></b>	Sets node clock once from a remote server using NTP.
<b><i>ping</i></b>	Sends ICMP echo requests to a specified host.
<b><i>ping6</i></b>	Sends IPMPv6 echo requests to a specified IPv6 host.
<b><i>pld</i></b>	Upgrades programmable logic devices (PLDs) on GigaVUE-HC3 nodes.
<b><i>policy</i></b>	Configures an Active Visibility policy.

Command	Description
<b>port</b>	Configures port type, parameters, and filters.
<b>port-group</b>	Creates a group of ports.
<b>port-pair</b>	Configures a port-pair on a pair of network ports within the same GigaVUE HC Series node. A port-pair is a bidirectional connection in which traffic arriving on one port in the pair is transmitted out the other (and vice-versa) as a pass-through TAP.
<b>ptp</b>	Enables and disables the use of PTP.
<b>radius-server</b>	Configures RADIUS server settings for authentication.
<b>redundancy-profile</b>	Configures an inline redundancy profile on GigaVUE HC Series nodes.
<b>reload (reboot)</b>	Reboots or shuts down the node.
<b>rename</b>	Renames the map alias.
<b>reset</b>	Resets specified portions of the node configuration to their factory states.
<b>serial</b>	Sets options for the serial console port.
<b>sfp</b>	Reserved for future use.
<b>sffp</b>	Configure Subscriber Flow Forwarding Protocol profile
<b>show</b>	Displays configuration and status information for GigaVUE HC Series settings and entities.
<b>sleep</b>	Sleeps for a specified number of seconds.
<b>snmp-server</b>	Configures SNMP settings, including the local SNMP server, notification events, and notification destinations.
<b>spine-link</b>	Configures spine links in a cluster with a leaf and spine architecture.
<b>ssh</b>	Enables and disables SSH access, as well as manages settings.
<b>stack-link</b>	Configures a stack-link between two GigaVUE HC Series nodes in a cluster. Stack-links are used to carry data traffic between nodes in a GigaVUE HC Series cluster.
<b>sync</b>	Enables dynamic control card synchronization for a GigaVUE HC Series node.
<b>system</b>	Changes system settings.
<b>system-health</b>	Configures system health behaviors.
<b>tacacs-server</b>	Configures TACACS+ server settings for authentication.
<b>tcpdump</b>	Display packets on a network.
<b>terminal</b>	Sets terminal parameters, including width and length.
<b>timestamp</b>	Configures the timestamp source.
<b>tool-mirror</b>	Configures a tool-mirror connection between two tool ports. A tool-mirror connection sends all packets arriving on one tool port to a second tool port on the same node.
<b>traceroute</b>	Traces the route packets take to a destination.
<b>tunnel</b>	Reserved for future use.
<b>tunnel-endpoint</b>	Configures a tunnel endpoint, which is a destination for load-balanced traffic from an L2GRE encapsulation tunnel.
<b>tunneled-port</b>	Configures a tunnel port to be used for GigaSMART encapsulation/decapsulation operations.
<b>uboot</b>	Installs new uboot software.
<b>username</b>	Manages user accounts.

Command	Description
<b>vport</b>	Configures a virtual port.
<b>web</b>	Configures the Web server used for GigaVUE-FM GUI support on the GigaVUE HC Series node.
<b>write</b>	Saves the running configuration to persistent storage.

## Completing the Initial GigaVUE HC Series Setup

You have completed the following:

- Logged in to the GigaVUEOS command-line interface using the admin account.
- Configured the Mgmt port's network properties for SSH access.
- Explored the command-line interface structure.

You can perform a few more steps to complete the initial configuration. For example, setting up network ports, tool ports, and mapping traffic.

- Switch to the Configure mode. Refer to [Enter the Configure Command-Line Mode](#).
- Configure SSH access to the node. Refer to [SSH](#).
- Enable the GigaVUE HC Series Web server for Web-based GUI access. Refer to [Connecting to the GigaVUE HC Series Node from GigaVUE-FM](#).
- Configure some basic user accounts. Refer to [Initial User Account Configuration](#).
- Configure the GigaVUE HC Series name. Refer to [Configuring the GigaVUE HC Series Host Name](#).
- Configure the GigaVUE HC Series time and date options. Refer to [Configuring GigaVUE HC Series Time Options](#).
- Configure automatic email notifications for node events. Refer to [Configuring Automatic Email Notifications](#).
- Configure a custom login banner. Refer to [Using a Custom Banner](#).
- Save your changes! Refer to [Saving Changes](#).

## Enter the Configure Command-Line Mode

The GigaVUE-OS has three different command modes for the CLI – **Standard**, **Enable**, and **Configure**. The commands described in the following sections are all only available in Configure mode. Switch to Configure mode as follows:

Command	Notes
<b>&gt; enable</b>	You only need to supply enough of each command to positively identify it among the other available commands. So, in this example, you could just type <b>ena</b> and press Enter.
<b># configure</b>	Similarly, this command can be entered as <b>co t</b> .

Command	Notes
<b>terminal</b>	
<b>(config) #</b>	Notice how the system prompt changes with each command mode. Command modes offer greater control over the node as you ascend from <b>Standard</b> to <b>Enable</b> to <b>Configure</b> .

## SSH

SSH2 is available for remote connections to the **Mgmt** port of GigaVUE-HC1. By default, SSH2 is enabled. Use the **ssh** commands in Configure mode to enable or disable the corresponding connections. To disable the corresponding connection, you include **no** before the command, as displayed in the table below.

Command	Notes
Enable: <b>(config) # ssh server enable</b> Disable: <b>(config) # no ssh server enable</b>	When SSH2 is enabled, use any compliant SSH2 client to connect to the command-line interface remotely. For example, to connect using the popular SSH2 client, PuTTY: <ol style="list-style-type: none"> <li>Start PuTTY and enter the GigaVUE HC Series node's IP address in the Host Name field.</li> <li>Click the <b>SSH</b> protocol radio button.</li> <li>Click <b>Open</b> to open a connection. If this is your first connection PuTTY warns you that the host key presented by the GigaVUE HC Series node is not in your cache. You can add the key, connect without adding the key, or cancel the connection. Refer to <a href="#">Verifying Host Keys During Connection</a> for information on how to verify that the host key shown is the correct one.</li> <li>Log in with GigaVUE HC Series credentials.</li> </ol>

### Advantages of SSH2

SSH2 is a secure choice for remote connections, providing an encrypted channel instead of relying on clear text. It also provides stronger user authentication capabilities, including the use of a public **host key**. Host keys uniquely identify a server, helping guarantee that the server you are connecting to is the server you think it is.

GigaVUE HC Series includes default RSA v1/v2 and DSAv2-encrypted public host keys (SSH2 supports both RSA and DSA encryption algorithms).

The first time you connect to GigaVUE HC Series with an SSH2 client, the client:

- Warns you that the host keys are not in your local cache
- Shows you the actual host key presented by the GigaVUE-HC1.
- Gives you the option of trusting the key and adding it to your local cache.



- Alerts you, once you have trusted the key, if a different key is presented during connection.

### Verifying Host Keys During Connection

To verify that the host key presented during an SSH2 connection is, in fact the GigaVUE HC Series node:

- connect over the console port (refer to [Access the Command-Line Interface over the Console Port on page 37](#))
- Use the **show ssh server host-keys** command to see the current public host keys and fingerprints for the GigaVUE-HC1.
- Paste these in a file and keep them nearby when you connect via SSH2 the first time.

This way, you will be able to compare the actual host key to what your SSH2 client says is being presented. Once you have verified that they are the same, you can choose to trust the host key, allowing future connections to take place seamlessly.

### Changing Host Keys

Use the **ssh server host-key generate** command to change the default host keys provided with the GigaVUE-HC1. The command has the following syntax:

**ssh server host-key <rsa1 | rsa2 |dsa2> <private-key | public-key> generate**

For example, to configure a new RSAv1 public hostkey, you could use the following command:

**(config) # ssh server host-key rsa1 public-key generate**

## Connecting to the GigaVUE HC Series Node from GigaVUE-FM

Use the following procedure to connect to a GigaVUE HC Series node using GigaVUE-FM.

**NOTE:** You can configure whether the GigaVUE HC Series node redirects all incoming HTTP connections to the HTTPS port with the **web http redirect** command.

1. Open a supported browser. Refer to the **GigaVUE Fabric Management Guide**.
2. Enter one of the following URLs:  
**https://<GigaVUE HC Series Node IP Address>http://<GigaVUE HC Series Node IP Address>**
3. The first time you connect to GigaVUE-FM, your browser will prompt you regarding an invalid security certificate. Depending on the browser you are using, you can avoid these warnings either by installing a certificate or adding an exception. The following table has the details:



Browser	Add Exception?	Install Certificate?
Mozilla Firefox	Y	Y
Windows Internet Explorer	N	Y

**NOTE:** Gigamon provides the GigaVUE HC Series with self-signed certificates for use with GigaVUE-FM; you can also create and install a third-party certificate on these nodes.

Add an exception in Firefox as follows:

- Select the **Or you can add an exception** link.
- Select the **Add Exception** button.
- Select the **Get Certificate** button.
- Select the **Confirm Security Exception** button.

The GigaVUE-FM login page appears.

- Enter a valid user name and password and click **Login**.

### Configuring Internet Explorer for Use with GigaVUE-FM

GigaVUE-FM works best in Internet Explorer when the browser is configured to check for newer versions of stored pages every time pages are visited. Enable this option as follows:

- Open Internet Explorer.
- Select the **Tools > Internet Options** command.
- In the **General** tab, locate the **Browsing history** section and click its **Settings** button.
- Set the **Check for newer version of stored pages:** option to **Every time I visit the webpage**.
- Select **OK** on the Temporary Internet Files and History Settings dialog.
- Select **OK** on the Internet Options dialog.

### Next Steps?

Refer to the online help for details on configuring and operating the GigaVUE-HCI from the GigaVUE-FM interface. Keep in mind that each of the initial configuration settings described in the rest of this chapter can also be set in GigaVUE-FM.

## Initial User Account Configuration

Before you start mapping traffic, you must change the password for the **admin** account and add a few other accounts for use by different level users. (You may have already used the jump-start script to change the password for the **admin** account.)

## Changing the admin Account Password

To change the password for the **admin** account using the **username** command, refer to the following:

**(config) # username admin password <password>**

Passwords must meet the following standards:

- Include 8-64 characters.
- Include at least one numeral
- Include at least one capital letter
- Include at least one special character (for example, **!**, **@**, **#**, **\$**, **%**, **^**, **&**, or **\*** – ASCII 0x21, 0x2F, 0x3A, 0x40, 0x5B, 0x5F, 0x7B, 0x7E).

Enter a new password that meets the standards and confirm the password.

## Setting Up Some Basic Accounts

1. Set a few user accounts with different access levels.

The GigaVUE HC Series node has a local account database that can optionally integrate with an LDAP, RADIUS, or TACACS+ server for authentication. Any account you want to authenticate using an external AAA server must have a matching account name in the local database.

Authentication, user levels, and roles are discussed in detail in the **GigaVUE-OS CLI Reference Guide**.

For now, however, it is easiest to simply create a few basic user accounts with different privilege levels. In general, user privileges are as follows:

- **Admin** users have access to all command modes, including Standard, Enable, and Configure. They also have full permissions for all network, tool, and stack ports.
- **Operator** users have access to all command modes, including Standard, Enable, and Configure. However, they only have access to the network and tool ports associated with their user group.  
New users are created with the operator role by default. You can add additional roles with the **username <username> roles add <roles>** command.
- **Monitor** users have access to the Standard and Enable command modes. They cannot configure packet distribution (or any other global GigaVUE HC Series node options), but they can use the **show** command to review many of the settings in place on the node.

Run the following **username** commands create a new **admin** user and a new **operator** user:

Command	Comments
<pre>(config) # username psandoval password Nine9.Eight8! (config) # username psandoval roles add admin</pre>	Creates a new account named <b>psandoval</b> with a password, and grants it admin privileges.
<pre>(config) # username bcrawford password Seven7.Six6!</pre>	Creates a new account named <b>bcrawford</b> with a password. New users are automatically created with default operator level privileges, so there is no need to grant an additional role.

2. Run the **show usernames** and **show roles** commands to review your settings.

## Configuring the GigaVUE HC Series Host Name

As a best practice, configure the GigaVUE HC Series node's name, date, and time as part of your initial configuration. For setting options related to time and date, refer to [Configuring GigaVUE HC Series Time Options](#)

### Setting the Node Name

Run the hostname command to specify the node name. For example:

```
(config) # hostname GigaVUE HC Series-QA
```

## Configuring GigaVUE HC Series Time Options

The GigaVUE HC Series node includes a variety of features for setting the time, including:

Method	CLI Command	For more information:
System Clock	<b>clock set hh:mm:ss yyyy/mm/dd</b>	<a href="#">Setting Time Manually</a> on page 59
One-Time NTP Synchronization	<b>ntpdate &lt;ntpserver address&gt;</b>	<a href="#">Performing One-Time NTP Server Synchronization</a> on page 60
Persistent NTP Synchronization	Add server using <b>ntp server</b> command. Enable use of ntp with <b>ntp enable</b> command.	<a href="#">Using NTP Time Server for Clock Synchronization</a> on page 60
PTP Synchronization	Enable PTP with <b>ptp enable</b> command.	<a href="#">Refer to the GigaVUE-OS CLI Reference Guide (Reserved for future use)</a>

### Setting Time Manually

The easiest way to set the GigaVUE HC Series node's time is manually with the **clock set** command. For example:

```
(config) # clock set 05:18:38 2015/01/06
```

**NOTE:** Even if you are using NTP, configure time manually as well. The GigaVUE HC Series node will automatically fall back to the manual time setting if it is unable to synchronize with the specified time server.

The **show ntp** command shows the current state of the NTP server in use; the **show clock** command shows the current GigaVUE HC Series node's time.

## Performing One-Time NTP Server Synchronization

You can perform a one-time synchronization with an NTP server using the **ntpdate** command. For example:

```
(config) # ntpdate time.nist.gov
```

**NOTE:** This method does not provide updates to correct clock drift over time. It is generally preferable to use persistent NTP synchronization with the **ntp** commands.

## Using NTP Time Server for Clock Synchronization

The GigaVUE HC Series node can optionally use one or more NTP servers for its time setting. Use the following procedure to add an NTP server to the GigaVUE HC Series node's list and enable the use of NTP.

1. Specify the address of the time GigaVUE HC Series server. For example, if the time server is on 192.168.1.10, you would use the following command:

```
(config) # ntp server 192.168.1.10
```

**NOTE:** There are many public NTP servers available on the Internet.

2. Turn on NTP with the following command:

```
(config) # ntp enable
```

3. The GigaVUE HC Series node connects to the specified NTP server and synchronizes to its time.
4. NTP reports times in UTC. Because of this, it is a good idea to specify the GigaVUE HC Series node's timezone so that UTC can be converted to the local timezone.

You specify the timezone either in terms of the offset from UTC (either plus or minus) or with a particular location's name, depending on the argument you choose for the **clock timezone** command:


- **Offset from UTC** – Set the timezone as an offset from UTC with the **UTC-offset** argument. For example, the following command sets the timezone as eight hours earlier than UTC:  

```
(config) # clock UTC-offset UTC-8
```
- **Location** – You can specify a particular location's timezone to use. The easiest way to do this is to build the available list of cities by adding a space and a question mark after each subsequent zone word. For example, enter **(config) # clock timezone ?**

to see the list of available locations. Select a location and use the same question mark technique to see the next available zone words. This way, you can build out to the exact location you need. For example:

```
(config) # clock timezone America North United_States Pacific
(config) # clock timezone Asia Eastern Hong_Kong
```

Once you have finished configuring NTP options, use the **show ntp** command to check the status of clock synchronization (Figure 8 Checking NTP Status and Configuration).

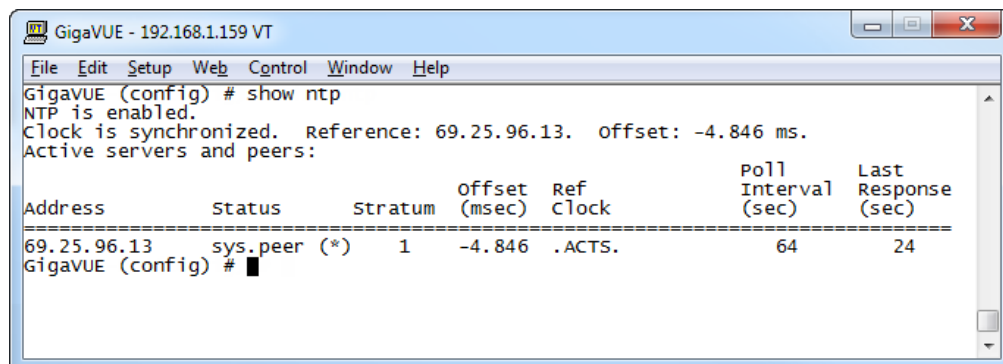

**Figure 8** Checking NTP Status and Configuration

## Configuring Automatic Email Notifications

The GigaVUE HC Series node provides powerful email notification capabilities, automatically sending emails to specified addresses when any of a wide variety of events take place on the node. Gigamon strongly recommends that you configure this feature so you have immediate visibility of events affecting node health.

You configure automatic email notifications with the **email** command and its arguments. Start by making sure the CLI is in Configure mode. If the **(config)** entry appears in the system prompt, you are in Configure mode. If not, use the **enable** and **configure terminal** commands sequentially to change to Configure mode. Then, configure email notifications as follows:

Description	Command
First, use the <b>email mailhub</b> command to specify the mail server to use for notification emails. In this example, we are using the email server named <b>smtp.emailsrvr.com</b> . You could also supply an IP address instead of a hostname.	<b>(config) # email mailhub smtp.emailsrvr.com</b>
Next, use the <b>email auth</b> command to supply the email account username and password. In this example, we are using <b>alerts@mycompany.com</b> with the password of <b>mypassword123</b> .	<b>(config) # email auth username alerts@mycompany.com</b> <b>(config) # email auth password mypassword123</b>
Now that we have set up the account to use, we will turn on email authentication.	<b>(config) # email auth enable</b>
Now that we have configured the settings	<b>(config) # email notify recipient</b>

Description	Command
that let the node send emails, set up who to send them to and when to send them. Use <b>email notify recipient</b> to configure the destinations for event notification emails. You can specify multiple destinations separated by commas with no spaces.	<b>cday@mycompany.com,mfelton@mycompany.com</b>
The <b>email notify event</b> command lets you configure which events will trigger automatic emails. There are quite a few events available – start by entering <b>email notify event ?</b> to see the list of available events. You can either enable individual events, or, use the <b>all</b> argument to enable them all. We are going to start with the <b>all</b> setting and tune settings as necessary later on.	<b>(config) # email notify event all</b>
It is a good idea to check your settings and make sure emails are sent successfully. You can do that with the <b>email send-test</b> command. If you do not receive the email, check the <b>show log</b> output to make sure the email was sent. Then, reconfigure email settings, if necessary.	<b>(config) # email send-test</b>
You may also want to configure and enable <b>autosupport</b> emails. Autosupport emails are sent directly to Gigamon's Technical Support department when specified events take place, enabling proactive problem resolution. The GigaVUE HC Series node is preconfigured with the correct destination address – you just need to enable the feature with the following command.  Use <b>show email events</b> to see the list of events for which auto support emails will be sent. You can change the list with the <b>(no) email autosupport event</b> command.	<b>(config) email autosupport enable</b>
Emails will now be sent automatically to the configured addresses when any selected events occur.  There are many other options for fine-tuning automatic email settings, including how to handle “dead letters” (emails that did not reach their recipient), how the email address of the GigaVUE HC Series node should appear, the port for the email server, the reply-to address, and so on. Refer to the <b>GigaVUE-OS CLI Reference Guide</b> for details.	

## Using a Custom Banner

The GigaVUE HC Series node can display a customizable text banner at node startup before a user logs in. This way, users connecting to the node see the banner before they log in, giving them an idea of which node they are logging in to. The banner also appears after a user logs out.

Use the **banner login “<string>”** command to configure the login banner. For example:

**(config) # banner login "Pacific Call Center"**

**NOTE:** You only need to use quotation marks for the <string> if it includes spaces.

The next time you log in or out of the GigaVUE HC Series node, you will see the customizable banner.


## Saving Changes

You can run the **write memory** command to save changes. When you start setting up packet distribution with connections and maps, your changes are:

- Added to the active configuration immediately.
- Not saved across a node reboot unless you use the write memory command to save your changes to flash.

**NOTE:** The name of the factory-provided configuration file is **initial**. You can see the name of the most recently booted configuration file by using the **show running-configuration** command (or **show configuration**) and look for the **## Running database** entry. In [Figure 9 Showing the Current Configuration File](#), you can tell that the GigaVUE HC Series node is currently operating with the **initial** configuration file.

Refer to the **GigaVUE-OS CLI Reference Guide** for details on using configuration files.

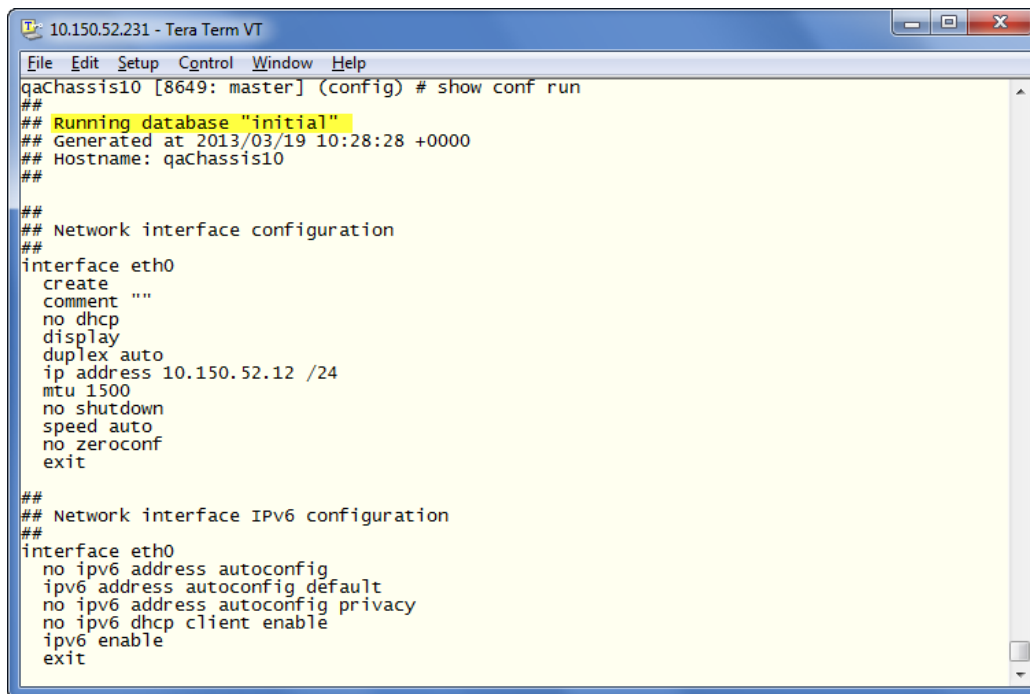

```

10.150.52.231 - Tera Term VT
File Edit Setup Control Window Help
qaChassis10 [8649: master] (config) # show conf run
##
## Running database "initial"
## Generated at 2013/03/19 10:28:28 +0000
## Hostname: qaChassis10
##
##
## Network interface configuration
##
interface eth0
  create
  comment ""
  no dhcp
  display
  duplex auto
  ip address 10.150.52.12 /24
  mtu 1500
  no shutdown
  speed auto
  no zeroconf
  exit
##
## Network interface IPv6 configuration
##
interface eth0
  no ipv6 address autoconfig
  ipv6 address autoconfig default
  no ipv6 address autoconfig privacy
  no ipv6 dhcp client enable
  ipv6 enable
  exit

```

**Figure 9** Showing the Current Configuration File



# Connecting GigaVUE-HC1 Ports

This chapter describes transceivers and port connections. In general, connecting GigaVUE-HC1 module ports to the network is as simple as installing a transceiver and connecting the correct cable to data sources or destinations. Refer to the following sections for details:

- [Transceiver—Rules and Notes](#)
- [Transceiver Installation Instructions](#)
- [Copper TAP Specifications](#)
- [Bypass Combo Module Specifications](#)
- [Connecting GigaVUE-HC1 Ports](#)

## Transceiver—Rules and Notes

Keep in mind the following rules and notes when you connect and use GigaVUE-HC1 nodes with transceivers:

- Always use transceivers purchased from Gigamon to ensure interoperability and performance. Gigamon does not support transceivers purchased from other vendors.
- After removing an optical transceiver, the best practice is to wait seventeen (17) or more seconds before re-inserting the same or different optical transceiver. This includes the intervals between removal/insertion/re-insertion.
- Use the **show port params all** command to see transceiver type information for each of the network/tool ports in the GigaVUE-HC1 node. Check the value of the **SFP type** field for the ports in question.
- Port numbers starting with x (for example, x10) are 10Gb or 1Gb depending, on the transceiver installed.

**NOTE:** For details about the supported transceivers, cable types, and connectivity specifications, refer to “*GigaVUE-OS Compatibility and Interoperability Matrix*”.

## Transceiver Installation Instructions

Gigamon transceivers are keyed and can only be installed in one direction. Transceivers are hot-swappable – they can be installed or removed with the power on or off. Use the following procedures to install and remove SFPs from GigaVUE HC Series modules.

**IMPORTANT:** Always use an ESD-preventive wrist or ankle strap and ensure that it makes good skin contact when installing or removing SFP/SFP+ transceivers. The strap can be connected to one of the following:

- ESD wrist strap connector.
- Captive installation screws on an installed module or power supply module.

- Any unpainted surface on the chassis.

## Installing Transceivers

1. Remove the dust cap from the port and set it aside for future use.
2. Orient the transceiver with the opening in the module and insert it into the slot.
3. Push gently but firmly until the transceiver is seated in the slot.
4. Close the latch on the SFP to lock it into the slot.

## Removing Transceivers

1. Disconnect the cable (if any) from the transceiver.
2. If you are removing a fiber-optic transceiver, install dust caps in the transceiver to protect the optical interfaces.
3. Open the latch on the transceiver and gently remove it from the slot.
4. If you are not installing a new transceiver, install a dust cap in the open slot on the module.

## Copper TAP Specifications

Refer to [Table 1: Internal Transceiver Specifications for Copper TAPs](#) for specifications for copper TAPs.

Table 1: Internal Transceiver Specifications for Copper TAPs

Module Type	Transceiver Type	Speed	Auto Negotiation	Duplex
<b>TAP-HC1-G10040 Copper (RJ45) 4 TAP Node</b>	N/A	10/100/1000Mb	Always ON	Full

## Bypass Combo Module Specifications

Refer to [Table 2: Internal Transceiver Specifications for Bypass Combo Modules](#) and [Table 3: Loss Summary per Bypass Combo Modules](#) for internal transceiver specifications and loss summaries for bypass combo modules.

Table 2: Internal Transceiver Specifications for Bypass Combo Modules

Module Type	Transceiver Type	Speed	Auto Negotiation	Duplex
<b>BPS-HC1-D25A24 SX/SR</b>	SFP+ 1Gb/10Gb Dual Rate 850nm MM	1Gb/10Gb	Always OFF	Full
<b>BPS-HC1-D25A60 SX/SR</b>	QSFP+ 40Gb 850nm MM (Breakout modes: 4x10Gb, 4x1Gb)	1Gb/10Gb	Always OFF	Full
<b>BPS-HC1-D35C60 LX/LR</b>	QSFP+ 40Gb 1310nm SM (Breakout modes: 4x10Gb, 4x1Gb)	1Gb/10Gb	Always OFF	Full

Table 3: Loss Summary per Bypass Combo Modules

Type	@	Operating Wavelength (nm)			Cable Type	Max Fiber Length	Max Receiver Sensitivity	Insertion Loss
		Min	Typical	Max				LC to LC (dB)
<b>BPS-HC1-D25A24 SX/SR</b>	<b>1Gb</b>	840	850	860	LC	550m	-17	1.2
	<b>10Gb</b>	840	850	860	LC	82m	-11.1	1.2
<b>BPS-HC1-D25A60 SX/SR</b>	<b>1Gb 10Gb</b>	840	850	860	LC Multi-mode	300m	-11.1 dBm	1.2
<b>BPS-HC1-D35C60 LX/LR</b>	<b>1Gb 10Gb</b>	1260	1310	1360	LC Single-mode	10km	-12.6 dBm	1.5

## Connecting GigaVUE-HC1 Ports

Connecting network and tool ports on GigaVUE-HC1 base chassis ports and modules is generally as simple as connecting a cable between the source/destination device and the GigaVUE-HC1 port. You just need to ensure that the modules and ports on the GigaVUE-HC1 node are enabled and their parameters are configured correctly.

Refer to the following sections for details:

- [Enabling Modules and Ports](#) – Make sure that the modules and ports you want to use are enabled. Newly installed modules must be configured with the **card** command and their ports enabled with **port <port-list> params admin enable**.
- [Setting Port Parameters Manually](#)– If both ends of the connection are using autonegotiation, no manual configuration is typically necessary. However, if autonegotiation is not used (or is not successful), you can use these instructions to configure port parameters manually.

## Enabling Modules and Ports

Perform the following steps to ensure that all modules are configured and ports enabled:

1. Connect to console port as described in [Access the Command-Line Interface over the Console Port](#).
2. Wait at least two minutes after the system prompt appears, and then switch to **Configure** mode.

The GigaVUE-HC1 node provides three command entry modes, each with increasingly powerful rights – **Standard**, **Enable**, and **Configure**. Module and port configuration commands are only available in Configure mode:

- a. Type **en <Enter>** to switch to Enable mode.

The system prompt changes from **[hostname] >** to **[hostname] #**.

- b. Type **config t <Enter>** to switch to Configure mode.

The system prompt changes from **[hostname] #** to **[hostname] (config) #**.

3. Use the following command to check module status:

**(config) # show cards**

4. Check the values in the **Config Status** and **Oper Status** columns for all modules and verify that they read **Yes** for configured and **Up** for inserted. This is your indication that the node is ready for further configuration.
5. If the **Config Status** does not show **Configured** for all modules after two minutes, take the action corresponding to your **show cards** output, as follows:

show cards Output:	Corrective Action
<b>Config Status</b> does not show <b>Configured</b> for any cards (including base chassis)	<b>(config) # chassis box-id &lt;integer&gt;(config) # card all</b>
<b>Config Status</b> shows <b>Configured</b> for base chassis but not one or more modules	<b>(config) # card slot x</b> <b>Note:</b> If all modules are unconfigured, you can also use the <b>card all</b> command. If some cards are already configured, however (for example, because you just installed a new card), it is better to use <b>slot x</b> for the unconfigured cards.

The **card** command initializes the unconfigured module. However, it can only be used after the node's box ID has been configured, as reported at the top of the **show cards** output (shown below).

6. Use the **show cards** command again to verify the following:
  - **Box ID** is not empty.
  - **Config Status** shows **configured** for all modules.

- o **Oper Status** shows **up** for all modules.

The **show cards** command output for a GigaVUE-HC1 displays the properly configured modules.

```
HC1(config)# show cards
```

```
Box ID: 1
```

Slot	Config	Oper Status	HW Type	Product Code	Serial Num	HW Rev
cc1	yes	up	HC1-Main-Board	132-00D6	1D60-1122	2.0-23
1	yes	up	HC1-X12G4	132-00D7	1D60-1122	2.0-23
2	yes	up	TAP-HC1-G10040	132-00D8	1D80-000B	2.0-78
3	yes	up	TAP-HC1-G10040	132-00D8	1D80-002B	2.0-78

7. Use the **port** command with the **admin** argument to enable the ports on the module. For example, the following two commands enable all ports on a TAP-HC1-G10040 module:

```
(config) # port 1/1/x1..x12 params admin enable
```

8. Save your changes so that the modules and ports come up automatically at the next reboot:

```
(config) # write memory
```

## Setting Port Parameters Manually

If autonegotiation is not enabled on the other end of the connection, you must manually configure the **port params** of the GigaVUE-HC1 module port to match, followed by a **write** to save the current settings.

The **port params** commands are available in the Configure mode. The syntax is as follows:

```
port <port-list> params      admin <disable | enable>      autoneg <disable |
enable>      discovery <cdp | lldp | all | disable>      duplex
<full>      forcelinkup <disable | enable>      speed <10 | 100 | 1000 |
10000>      taptx <active | passive>
```

The following table summarizes these options:

Argument	Description
<b>admin</b> <b>&lt;disable   enable&gt;</b>	Enables/disables ports administratively. Use the <b>show port params</b> command to see which ports are enabled and disabled. Refer to <a href="#">Forcelinkup and Enabling/Disabling Ports on page 80</a> for a summary of how this argument interacts with the <b>admin</b> argument.
<b>autoneg</b> <b>&lt;disable   enable&gt;</b>	Enables and disables autonegotiation for a port. When autonegotiation is enabled, duplex and speed settings are ignored (they are set via autonegotiation). Refer to <a href="#">Forcelinkup and Enabling/Disabling Ports on page 80</a> for a summary of how this argument interacts with the <b>admin</b> argument. Autonegotiation is always disabled for 10Gb ports. For 1Gb speeds over copper, Auto-negotiation must be enabled, per the IEEE 802.3 specification. Gb optical ports cannot enable autoneg.
<b>discovery</b>	Configures port discovery options, as follows:

Argument	Description
<b>&lt;cdp   lldp   all   disable&gt;</b>	<p>cdp—Enables CDP port discovery.</p> <p>lldp—Enables LLDP port discovery.</p> <p>all—Enables all port discovery protocols (meaning both CDP and LLDP).</p> <p>disable—Disables port discovery.</p> <p>Discovery is disabled by default. To enable discovery, configure one or more protocols.</p>
<b>duplex &lt;full&gt;</b>	<p>Specifies the port's duplex configuration. Only full duplex is supported.</p> <p>Starting in software version 5.2, half duplex support is removed from allGigaVUE HC Series nodes. If half duplex was configured in a previous software version, it will remain intact following the upgrade to 5.2 or higher release. Update to full duplex, if required.</p>
<b>forcelinkup &lt;disable   enable&gt;</b>	<p>Forces connection on an optical port. Use this option when an optical tool port is connected to a legacy optical tool that does not transmit light.</p> <p>Available as follows:</p> <p>Optical 1Gb/10Gb tool ports</p> <p>Not available for 10Gb-capable ports with a 1Gb SFP installed. 10Gb-capable optical tool ports only support <b>forcelinkup</b> when a 10Gb SFP+ is installed.</p>
<b>speed &lt;10   100   1000   10000&gt;</b>	Sets the port speed in Mbps if autonegotiation is off.
<b>tapx &lt;active   passive&gt;</b>	<p>Open or close the relays for the ports used to tap the link in the TAP-HC1-G10040 module.</p> <p>Once the relays are opened, verify that the green link LEDs for both ports in the pair have illuminated.</p>

## Forcelinkup and Enabling/Disabling Ports

The GigaVUE-HC1 node includes both **forcelinkup** and **admin** arguments for the **port params** command. The **forcelinkup** argument forces the link state on an optical tool port connected to a legacy tool that does not transmit the light required to bring the link up. The following table summarizes how traffic flows for different combinations of **port params admin** and **port params forcelinkup** applied to an optical tool port.

	<b>forcelinkup = disable</b>	<b>forcelinkup = enable</b>
<b>admin = enable</b>	No traffic passed if Auto-negotiation is not successful.	Traffic is passed.
<b>admin = disable</b>	No traffic passed.	No traffic passed.

# GigaVUE-HC1 Specifications

This appendix provides the physical specifications, power requirements, and environmental specifications for GigaVUE-HC1 nodes. Compliance for safety, emissions, and immunity are also provided.

Refer to the following sections for details:

- [Physical Dimensions and Weight](#)
- [Power Requirements](#)
- [Environmental Specifications](#)
- [Standards and Protocols](#)
- [Compliance](#)
- [Warranty](#)

## Physical Dimensions and Weight

The following table summarizes the dimensions and weight of the GigaVUE-HC1 nodes and their modules:

Node	Height	Width	Depth	Weight
GigaVUE-HC1 (with power supply modules, fans, base chassis)	1RU1.75in (4.45cm)	Metal to Metal <sup>1</sup> 17.26in (43.84cm)	Metal to Metal <sup>1</sup> 19.5in (49.53cm)	20.88lb (9.47kg)
		With ears mounted 19.0in (48.26cm)	With PSU handle and card ejector 20.92in (53.14cm)	21.12lb (9.58kg)
TAP-HC1-G10040Copper (RJ-45)4 TAP Module	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	1.51lb(0.68kg)
BPS-HC1-D25A24Bypass Combo Module	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	2.2lb(1kg)
PRT-HC1-X12 Module	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	1.55lb (0.70kg)
PRT-HC1-Q04x08	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	1.4lb (0.64kg)
SMT-HC1-S Module	1.6in (4.06cm)	4.65in (11.81cm)	10.13in (25.73cm)	2.54lb (1.15kg)
BPS-HC1-D25A60 Bypass Module	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	2.2lb(1kg)
BPS-HC1-D35C60 Bypass Module	1.6in (4.06cm)	4.65in(11.81cm)	10.13in(25.73cm)	2.2lb(1kg)



**1 Metal to Metal** refers to the physical chassis dimensions measured from front to rear panels, excluding any external projections such as card ejectors, thumb screws, handles, or connectors.

## Battery Caution

A disposable, non-rechargeable, Real Time Clock (RTC) Lithium metal coin cell battery is in the GigaVUE-HC1. Note the following:

- A risk of fire exists if the battery is replaced with an incorrect type.
- Use only CR-2032L type Lithium metal coin cell battery and replace with the same.

## Compliance

This section provides compliance information for GigaVUE-HC1.

### Safety

GigaVUE-HC1 is compliant with the following safety regulations:

- UL 60950-1, 2nd Edition
- CAN/CSA C22.2 No. 60950-1-07, 2nd Edition
- EN 60950-1:2006/A11:2009/A1:2010/A12:2011/A2:2013
- IEC 60950-1:2005 (2nd Edition) + Am 1:2009 + Am 2:2013

### Emissions

GigaVUE-HC1 is compliant with the following emissions regulations:

- FCC Part 15, Class A
- VCCI Class A. Refer to [Class A Information Technology Equipment \(ITE\)](#).
- EN55022/CISPR-22 Class A
- Australia/New Zealand AS/NZS CISPR-22 Class A:RCM
- EU:CE Mark EN 55022 Class A
- CCC China
- BSMI Taiwan
- KCC Korea
- EAC Russia

Class A Information Technology Equipment (ITE)

<p>この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。</p>	<p>VCCI-A</p>
---	---------------

Translation of Statement for Class A VCCI-certified Equipment:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective action.

### Class A Korea Caution

The following caution applies to Korea Class A Equipment.

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Translation of Caution Statement for Korea Class A Equipment:

This equipment is Industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home.

## Immunity

GigaVUE-HC1 is compliant with the following immunity regulations:

- ETSI EN300 386 V1.6.1:2012
- EN61000-3-2
- EN61000-3-3
- EN61000-4-2
- EN61000-4-3
- EN61000-4-4
- EN61000-4-5
- EN61000-4-6
- EN61000-4-8
- EN61000-4-11

## Environmental

GigaVUE-HC1 is compliant with the following environmental regulations:

- EU RoHS 6, EU directive 2011/65/EU
- NEBS Level 3. Refer to [NEBS Level 3 Compliance](#).

## Security

- Common Criteria (Certification pending). Refer to “Common Criteria” in the **GigaVUE-OS CLI Reference Guide**.
- FIPS 140-3. Refer to “FIPS 140-3 Compliance” in the **GigaVUE-OS CLI Reference Guide**.

## Power Requirements

The following table summarizes the electrical characteristics of GigaVUE-HC1 nodes.

**NOTE:** Refer to [Figure 2 Connecting AC Power \(GigaVUE-HC1\)](#) and [Figure 4 Connecting DC Power Supply Module](#) for instructions on how to connect AC and DC power supply modules.

Power Specification	Specification
<b>Power Configuration</b>	1 + 1 Power: 2 Power Supply Modules
<b>Max Power Consumption/Heat Output</b>	360 Watts / 1,227.6 BTU/hr Fully populated system with all ports at 100% traffic load
<b>AC Power Supply Modules</b>	Min/Max Voltage: 100 to 127V AC, 200 to 240V AC, 50/60Hz Max PSM Input Current: 5.8A@100V, 2.9A@200V
<b>DC Power Supply Modules</b>	Min/Max Voltage: -40.5V to -60V DC Max PSM Input Current: 24A @ -40.5V

## Environmental Specifications

The following table summarizes the environmental specifications for GigaVUE-HC1 nodes.

Specification	GigaVUE-HC1 Node
<b>Operating Temperature</b>	32°F to 104°F (0°C to 40°C)
<b>Operating Relative Humidity</b>	20% to 80%, non-condensing
<b>Recommended Storage Temperature</b>	-4°F to 158°F (-20°C to 70°C)
<b>Recommended Storage Relative Humidity</b>	15% to 85%, non-condensing
<b>Altitude</b>	Up to 10,000ft (3.05km)

## Standards and Protocols

IEEE 802.3-2012, IEEE 802.1Q VLAN, IEEE 802.3 10BASE-T, IEEE 802.3u 100BASE-TX, IEEE 802.3ab 1000BASE-T, IEEE 802.3z 1000BASE-X, IEEE 802.3ae 10000BASE-X, IEEE 802.3ba, RFC 783 TFTP, RFC 791 IP, RFC 793, TCP, RFC 826 ARP, RFC 768 UDP, RFC 792 ICMP, SNMP v2c/v3, RFC 2131 DHCP client, RFC 1492 TACACS+, and support for IPv4 and IPv6.


## Warranty

Gigamon offers a range of premium support and extended services. For details regarding warranty, visit: <https://www.gigamon.com/support-and-services/warranty>

# Console Port Signaling and Cabling

This appendix provides the pin-outs for the RJ45-to-RJ45 rollover cable and RJ45-to-DB-9 adapter provided with the GigaVUE-HC1 node for connections from the node's console port to a PC's COM port.

The following figure shows how to connect the RJ45-to-RJ45 rollover cable from the GigaVUE-HC1 node's console port to a COM port on a PC using the RJ45-to-DB-9 adapter.

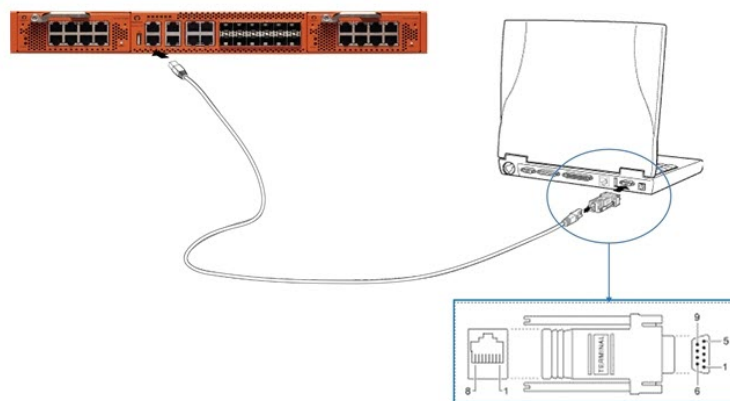

The following table lists the pinouts for this connection.

Console Port from GigaVUE-HC1 RJ45 Jack	RJ45-to-RJ45 Rollover Cable		RJ45-to-DB-9 Terminal Adapter	Console Device on PC
Signal	RJ45 Pin	RJ45 Pin	DB-9 Pin	Signal
N/A	1	8	8	N/A
N/A	2	7	6	N/A
TxD	3	6	2	RxD
GND	4	5	5	GND
GND	5	4	5	GND
RxD	6	3	3	TxD
N/A	7	2	4	N/A
N/A	8	1	7	N/A

# NEBS Level 3 Compliance

This appendix provides installation instructions for GigaVUE-HC1 Network Equipment-Building System (NEBS) Level 3 compliance.

## Installation Instructions GigaVUE-HC1

The following sections detail installation instructions for GigaVUE-HC1.

### Intrabuilding or Intra-connection

**WARNING:** The intra-building ports:

- BNC Coaxial PPS
- RJ45: PTP-1588, Management port, Console port, Stack port
- RJ45: 10/100/1000 ports: G1 - G4
- 1Gb/10Gb SFP+: X1 - X12
- TAP-HC1-G10040
  - TAP 1Gb Copper 4 pairs: G1 - G8
- BPS-HC1-D25A24
  - 1Gb/10Gb SFP/SFP+: X1 - X4
  - BPS SX/SR (50/125µm) 2 pairs: X5 - X8
- PRT-HC1-X12
  - 1Gb/10Gb SFP/SFP+: X1 - X12
- P/S port on the rear of chassis: (Reserved for future use)
- PRT-HC1-Q04x08
  - 40Gb QSFP+: Q1-Q4
  - 1Gb/10Gb SFP /SFP+ : X1- X8
- BPS-HC1-D25A60 SX/SR
  - BPS SX/SR (50/125µm) 6 pairs: X1 - X12
- BPS-HC1-D35C60 LX/LR
  - BPS LX/LR (50/125µm) 6 pairs: X1 - X12

GigaVUE-HC1 equipment or sub-assembly are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intra-building port(s) of the equipment or subassembly MUST NOT be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intra-building interfaces only (Type 2 or

Type 4 ports as described in GR-1089-CORE, Issue 6) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallicity to OSP wiring.

## Intrabuilding Ports (RJ45)

**WARNING:** Ensure the intrabuilding ports (RJ45) are connected to shielded and grounded cables at both ends.

## Class A2 Voltage Accessibility

Ensure the GigaVUE-HC1 is located in a restricted access location where only crafts personnel are allowed access.

## Class B Voltage Accessibility

Ensure the GigaVUE-HC1 is located in a restricted access location where only crafts personnel are allowed access.

## Equipment Grounding Systems

Ensure the GigaVUE-HC1 is installed and connected to the (CBN).

## Communication Equipment Grounding

The GigaVUE-HC1 is suitable for connection to the (Central Office and CPE).

## Bonding of Battery Return (BR) Input Terminals

Ensure the battery returns of the GigaVUE-HC1 be connected as (DC-I).

## Connections

- a. Ensure GigaVUE-HC1 is grounded via a copper ground conductor #6 AWG for CPE installation.
- b. Before connections are made, ensure all bare grounding connection points to GigaVUE-HC1 are cleaned and coated with an antioxidant solution..
- c. Ensure all unplated surfaces on the GigaVUE-HC1 are brought to a bright finish and treated with an antioxidant solution before connections are made.
- d. Ensure all non-conductive surfaces on the GigaVUE-HC1 are removed from all threads and connection points to ensure electrical continuity.



- e. The same bolt assemblies shall not secure multiple connectors.
- f. Unplated connection surfaces to be intentionally joined to form a bonding or grounding path shall be brought to a bright finish and then coated with an antioxidant before joining (electrical connections).
- g. Ensure that the listing fastening hardware is compatible with the joined materials and preclude loosening, deterioration, and electrochemical corrosion of the hardware and joined materials.
- h. Ensure that the non-conductive coatings (such as paint, lacquer, and enamel) on the equipment to bond or ground are removed from threads and other contact surfaces to ensure electrical continuity.

aGigaVUE-HC1utilizes a Spade width of 0.32in/.81cm with a Standard Wire 14-16 (AWG) that utilizes 5in-lbs of torque to secure it to the frame and EUT. Only listed two-hole compression-type connectors shall be used to connect to flat surfaces (such as bus bars, frames, racks, or cabinets). Torquing and bolt assembly requirements for securing the connector shall be as specified by the connector supplier.

## Maintenance

**CAUTION:** Remove all power sources before servicing. (TO COMPLETELY REMOVE POWER FROM THE UNIT, FIRST TURN OFF THE POWER SWITCH AND REMOVE BOTH POWER CABLES).

# Additional Sources of Information

This appendix provides additional sources of information. Refer to the following sections for details:

- [Documentation](#)
- [Documentation Feedback](#)
- [Contact Technical Support](#)
- [Contact Sales](#)
- [The VÜE Community](#)

## Documentation

This table lists all the guides provided for GigaVUE HC Series software and hardware. The first row provides an All-Documents Zip file that contains all the guides in the set for the release.

**NOTE:** In the online documentation, view [What's New](#) to access quick links to topics for each of the new features in this Release; view [Documentation Downloads](#) to download all PDFs.

Table 1: Documentation Set for Gigamon Products

GigaVUE HC Series 6.12 Hardware and Software Guides	
<b>DID YOU KNOW?</b>	If you keep all PDFs for a release in common folder, you can easily search across the doc set by opening one of the files in Acrobat and choosing <b>Edit &gt; Advanced Search</b> from the menu. This opens an interface that allows you to select a directory and search across all PDFs in a folder.
<b>Hardware</b>	how to unpack, assemble, rackmount, connect, and initially configure ports the respective GigaVUE HC Series devices; reference information and specifications for the respective GigaVUE HC Series devices
<b>GigaVUE-HC1 Hardware Installation Guide</b>	
<b>GigaVUE-HC3 Hardware Installation Guide</b>	
<b>GigaVUE-HC1-Plus Hardware Installation Guide</b>	
<b>GigaVUE-HCT Hardware Installation Guide</b>	
<b>GigaVUE-TA25 Hardware Installation Guide</b>	
<b>GigaVUE-TA25E Hardware Installation Guide</b>	
<b>GigaVUE-TA100 Hardware Installation Guide</b>	

<b>GigaVUE HC Series 6.12 Hardware and Software Guides</b>	
<b>GigaVUE-TA200 Hardware Installation Guide</b>	
<b>GigaVUE-TA200E Hardware Installation Guide</b>	
<b>GigaVUE-TA400 Hardware Installation Guide</b>	
<b>GigaVUE-TA400E Hardware Installation Guide</b>	
<b>GigaVUE-OS Installation Guide for DELL S4112F-ON</b>	
<b>G-TAP A Series 2 Installation Guide</b>	
<b>GigaVUE M Series Hardware Installation Guide</b>	
<b>GigaVUE-FM Hardware Appliances Guide</b>	
<b>Software Installation and Upgrade Guides</b>	
<b>GigaVUE-FM Installation, Migration, and Upgrade Guide</b>	
<b>GigaVUE-OS Upgrade Guide</b>	
<b>GigaVUE V Series Migration Guide</b>	
<b>Fabric Management and Administration Guides</b>	
<b>GigaVUE Administration Guide</b>	covers both GigaVUE-OS and GigaVUE-FM
<b>GigaVUE Fabric Management Guide</b>	how to install, deploy, and operate GigaVUE-FM; how to configure GigaSMART operations; covers both GigaVUE-FM and GigaVUE-OS features
<b>GigaVUE Application Intelligence Solutions Guide</b>	
<b>Cloud Guides</b>	
how to configure the GigaVUE Cloud Suite components and set up traffic monitoring sessions for the cloud platforms	
<b>GigaVUE V Series Applications Guide</b>	
<b>GigaVUE Cloud Suite Deployment Guide - AWS</b>	
<b>GigaVUE Cloud Suite Deployment Guide - Azure</b>	
<b>GigaVUE Cloud Suite Deployment Guide - OpenStack</b>	
<b>GigaVUE Cloud Suite Deployment Guide - Nutanix</b>	
<b>GigaVUE Cloud Suite Deployment Guide - VMware (ESXi)</b>	
<b>GigaVUE Cloud Suite Deployment Guide - VMware (NSX-T)</b>	
<b>GigaVUE Cloud Suite Deployment Guide - Third Party Orchestration</b>	

GigaVUE HC Series 6.12 Hardware and Software Guides	
<b>Universal Cloud TAP - Container Deployment Guide</b>	
<b>Gigamon Containerized Broker Deployment Guide</b>	
<b>GigaVUE Cloud Suite Deployment Guide - AWS Secret Regions</b>	
<b>GigaVUE Cloud Suite Deployment Guide - Azure Secret Regions</b>	
Reference Guides	
<b>GigaVUE-OS CLI Reference Guide</b>	library of GigaVUE-OS CLI (Command Line Interface) commands used to configure and operate GigaVUE HC Series and GigaVUE TA Series devices
<b>GigaVUE-OS Security Hardening Guide</b>	
<b>GigaVUE Firewall and Security Guide</b>	
<b>GigaVUE Licensing Guide</b>	
<b>GigaVUE-OS Cabling Quick Reference Guide</b>	guidelines for the different types of cables used to connect Gigamon devices
<b>GigaVUE-OS Compatibility and Interoperability Matrix</b>	compatibility information and interoperability requirements for Gigamon devices
<b>GigaVUE-FM REST API Reference in GigaVUE-FM User's Guide</b>	samples uses of the GigaVUE-FM Application Program Interfaces (APIs)
<b>Factory Reset Guidelines for GigaVUE-FM and GigaVUE-OS Devices</b>	
Sanitization guidelines for GigaVUE Fabric Management Guide and GigaVUE-OS devices.	
Release Notes	
<b>GigaVUE-OS, GigaVUE-FM, GigaVUE-VM, G-TAP A Series, and GigaVUE Cloud Suite Release Notes</b>	
new features, resolved issues, and known issues in this release ;	
important notes regarding installing and upgrading to this release	
<b>Note:</b> Release Notes are not included in the online documentation.	
<b>Note:</b> Registered Customers can log in to <a href="#">My Gigamon</a> to download the Software and Release Notes from the Software and Docs page on to <a href="#">My Gigamon</a> . Refer to <a href="#">How to Download Software and Release Notes from My Gigamon</a> .	
In-Product Help	
<b>GigaVUE-FM Online Help</b>	
how to install, deploy, and operate GigaVUE-FM.	

## How to Download Software and Release Notes from My Gigamon

Registered Customers can download software and corresponding Release Notes documents from the **Software & Release Notes** page on to [My Gigamon](#). Use the My Gigamon Software & Docs page to download:

- Gigamon Software installation and upgrade images,
- Release Notes for Gigamon Software, or
- Older versions of PDFs (pre-v5.7).

### To download release-specific software, release notes, or older PDFs:

1. Log in to [My Gigamon](#).
2. Click on the **Software & Release Notes** link.
3. Use the **Product** and **Release** filters to find documentation for the current release. For example, select Product: "GigaVUE-FM" and Release: "5.6," enter "pdf" in the search box, and then click **GO** to view all PDF documentation for GigaVUE-FM 5.6.xx.

**NOTE:** My Gigamon is available to registered customers only. Newer documentation PDFs, with the exception of release notes, are all available through the publicly available online documentation.

## Documentation Feedback

We are continuously improving our documentation to make it more accessible while maintaining accuracy and ease of use. Your feedback helps us to improve. To provide feedback and report issues in our documentation, send an email to:

[documentationfeedback@gigamon.com](mailto:documentationfeedback@gigamon.com)

Please provide the following information in the email to help us identify and resolve the issue. Copy and paste this form into your email, complete it as able, and send. We will respond as soon as possible.

Documentation Feedback Form		
About You	Your Name	
	Your Role	
	Your Company	

<b>For Online Topics</b>	<b>Online doc link</b>	<i>(URL for where the issue is)</i>
	<b>Topic Heading</b>	<i>(if it's a long topic, please provide the heading of the section where the issue is)</i>
<b>For PDF Topics</b>	<b>Document Title</b>	<i>(shown on the cover page or in page header )</i>
	<b>Product Version</b>	<i>(shown on the cover page)</i>
	<b>Document Version</b>	<i>(shown on the cover page)</i>
	<b>Chapter Heading</b>	<i>(shown in footer)</i>
	<b>PDF page #</b>	<i>(shown in footer)</i>
<b>How can we improve?</b>	<b>Describe the issue</b>	<i>Describe the error or issue in the documentation. (If it helps, attach an image to show the issue.)</i>
	<b>How can we improve the content?</b> <b>Be as specific as possible.</b>	
	<b>Any other comments?</b>	

## Contact Technical Support

For information about Technical Support: Go to **Settings**  **> Support > Contact Support** in GigaVUE-FM.

You can also refer to <https://www.gigamon.com/support-and-services/contact-support> for Technical Support hours and contact information.

Email Technical Support at [support@gigamon.com](mailto:support@gigamon.com).

## Contact Sales

Use the following information to contact Gigamon channel partner or Gigamon sales representatives.

**Telephone:** +1.408.831.4025

**Sales:** [inside.sales@gigamon.com](mailto:inside.sales@gigamon.com)

**Partners:** [www.gigamon.com/partners.html](http://www.gigamon.com/partners.html)

## Premium Support

Email Gigamon at [inside.sales@gigamon.com](mailto:inside.sales@gigamon.com) for information on purchasing 24x7 Premium Support. Premium Support entitles you to round-the-clock phone support with a dedicated Support Engineer every day of the week.

## The VÜE Community

The **VÜE Community** is a technical site where Gigamon users, partners, security and network professionals and Gigamon employees come together to share knowledge and expertise, ask questions, build their network and learn about best practices for Gigamon products.

Visit the VÜE Community site to:

- Find knowledge base articles and documentation
- Ask and answer questions and learn best practices from other members.
- Join special-interest groups to have focused collaboration around a technology, use-case, vertical market or beta release
- Take online learning lessons and tutorials to broaden your knowledge of Gigamon products.
- Open support tickets (Customers only)
- Download the latest product updates and documentation (Customers only)

The VÜE Community is a great way to get answers fast, learn from experts and collaborate directly with other members around your areas of interest.

**Register today at** [community.gigamon.com](http://community.gigamon.com)

**Questions?** Contact our Community team at [community@gigamon.com](mailto:community@gigamon.com).



# Glossary

## D

---

### decrypt list

need to decrypt (formerly blacklist)

### decryptlist

need to decrypt - CLI Command (formerly blacklist)

### drop list

selective forwarding - drop (formerly blacklist)

## F

---

### forward list

selective forwarding - forward (formerly whitelist)

## L

---

### leader

leader in clustering node relationship (formerly master)

## M

---

### member node

follower in clustering node relationship (formerly slave or non-master)

## N

---

### no-decrypt list

no need to decrypt (formerly whitelist)

## nodecryptlist

no need to decrypt- CLI Command (formerly whitelist)

## P

---

## primary source

root timing; transmits sync info to clocks in its network segment (formerly grandmaster)

## R

---

## receiver

follower in a bidirectional clock relationship (formerly slave)

## S

---

## source

leader in a bidirectional clock relationship (formerly master)