



GigaVUE Cloud Suite for VMware— GigaVUE V Series Guide

GigaVUE Cloud Suite

Product Version: 6.2

Document Version: 1.0

Last Updated: Wednesday, March 8, 2023

(See Change Notes for document updates.)

Copyright 2023 Gigamon Inc.. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. No part of this publication may be reproduced, transcribed, translated into any language, stored in a retrieval system, or transmitted in any form or any means without the written permission of Gigamon Inc..

Trademark Attributions

Gigamon and the Gigamon logo are trademarks of Gigamon in the United States and/or other countries. Gigamon trademarks can be found at www.gigamon.com/legal-trademarks. All other trademarks are the trademarks of their respective owners.

Gigamon Inc.
3300 Olcott Street
Santa Clara, CA 95054
408.831.4000

Change Notes

When a document is updated, the document version number on the cover page will indicate a new version and will provide a link to this Change Notes table, which will describe the updates.

Product Version	Document Version	Date Updated	Change Notes
6.2.00	1.0	02/15/2023	The original release of this document with 6.2.00 GA

Contents

GigaVUE Cloud Suite for VMware–GigaVUE V Series Guide	1
Change Notes	3
Contents	4
GigaVUE Cloud Suite for VMware–GigaVUE V Series	7
Overview of GigaVUE V Series Node	8
Volume-Based License	8
Base Bundles	8
Add-on Packages	9
How GigaVUE-FM Tracks Volume-Based License Usage	9
Manage Volume-Based License	10
Default Trial Licenses	10
Supported Hypervisors for VMware	11
Cloud Overview Page	12
Virtual Dashboard Widgets	13
Configure V Series Node on ESXi	15
VMware ESXi System Requirements	16
Network Firewall Requirements	16
Required VMware Virtual Center Privileges	17
Prerequisites for Integrating V Series Nodes with ESXi	18
Recommended Form Factor (Instance Types)	19
Default Login Credentials	19
Integrate GigaVUE V Series nodes with VMware ESXi	20
Deploy GigaVUE V Series Nodes using ESXi	20
Deploy GigaVUE V Series Nodes using GigaVUE-FM	21
Step 1: Upload V Series node Image into GigaVUE-FM	21
Step 2: Connect to VMware vCenter	21
Step 3: Deploy GigaVUE V Series Nodes on VMware ESXi	22
Step 4: Configure Monitoring Sessions	30
Upgrade GigaVUE V Series Node in GigaVUE-FM for ESXi	45
Configure VMware Settings	46
Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware ESXi	47
Configure Environment	48
Connect to VMware ESXi	49
Create Connection	50

Create Source Selectors	52
Create Tunnel Specifications	54
User Defined Application	56
Configure Application Intelligence Session	62
Configure V Series Node on NSX-T	66
Prerequisites for Integrating V Series Nodes with NSX-T	67
Network Firewall Requirements	67
Recommended Form Factor (Instance Types)	69
Required VMware Virtual Center Privileges	69
Default Login Credentials	69
Integrate V Series nodes with NSX-T	70
Deploy GigaVUE V Series Nodes using GigaVUE-FM	70
Deploy GigaVUE V Series Nodes using VMware NSX-T Manager	71
Step 1: Create Users in VMware vCenter and GigaVUE-FM	71
Step 2: Upload V Series node Image into GigaVUE-FM	73
Step 3: Connect to VMware vCenter in GigaVUE-FM	74
Step 4: Create a Service Segment in NSX-T	77
Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T	77
Step 6: Configure Monitoring Sessions	84
Step 7: Create NSX-T Group and Service Chain	96
Upgrade GigaVUE V Series Nodes for VMware NSX-T	97
Configure VMware Settings	99
Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware NSX-T	100
Configure Environment	101
Connect to VMware NSX-T	102
Create Connection	103
Create NSX-T Group and Service Chain	106
Create Tunnel Specifications	106
User Defined Application	108
Configure Application Intelligence Session	114
Remove Gigamon Service from NSX-T and GigaVUE-FM	118
Step 1: Remove the Service Chains	118
Step 2: Delete the Monitoring Session	118
Step 3: Undeploy GigaVUE Cloud Suite - V Series VMs	118
Step 4: Delete the NSX-T Manager and vCenter Connections	118
Cloud Health Monitoring	119
Configuration Health Monitoring	119
Traffic Health Monitoring	120
Create Threshold Template	121
Apply Threshold Template	121
Edit Threshold Template	122

Clear Thresholds	123
Supported Resources and Metrics	123
View Health Status	125
View Health Status of the Entire Monitoring Session	125
View Health Status of an Application	125
View Health Status for Individual V Series Nodes	126
View Application Health Status for Individual V Series Nodes	126
View Health Status on the Monitoring Session Page	127
Health	127
V Series Node Health	127
Target Source Health	127
Fabric Health Analytics for Virtual Resources (BETA)	128
Virtual Inventory Statistics and Cloud Applications Dashboard	128
Sharing the Same Host across Different Monitoring	
Domains	134
GigaVUE V Series Deployment Clean up	134
Remove Service Profiles	134
Remove Service Deployments	135
Remove Service Reference	137
Remove Service Manager	137
Remove Vendor Template and Service Definition	138
Additional Sources of Information	139
Documentation	139
How to Download Software and Release Notes from My Gigamon	142
Documentation Feedback	142
Contact Technical Support	144
Contact Sales	144
Premium Support	144
The VUE Community	144
Glossary	146

GigaVUE Cloud Suite for VMware–GigaVUE V Series

GigaVUE Cloud Suite GigaVUE V Series provides an intelligent filtering technology that allows virtual machine (VM) traffic flows of interest to be selected, forwarded, and delivered to the monitoring infrastructure centrally attached to the Gigamon Visibility Platform, thereby eliminating any traffic blind spots in the enterprise private clouds or service provider NFV deployments.

This guide describes how to install, deploy, and operate the GigaVUE V Series nodes in VMware.

Topics:

- [Overview of GigaVUE V Series Node](#)
- [Configure V Series Node on ESXi](#)
- [Configure V Series Node on NSX-T](#)

Overview of GigaVUE V Series Node

A V Series node is a virtual machine running in your infrastructure that processes and distributes network traffic. It plays the same role as an H Series appliance in a physical deployment, running many of the same GigaSMART applications and feeding data to tools in a similar manner. V Series nodes reside in a virtualized environment. The outbound traffic is tunneled and the inbound traffic can be in the form of raw packets or can be tunneled (because there are no physical device ports).

Volume-Based License

All the V Series 2 nodes connected to GigaVUE-FM periodically reports statistics on the amount of traffic that flows through the V Series Nodes. The statistics give information on the actual data volume that flows through the V Series Nodes. All licensed applications, when running on the node, generate usage statistics. In the Volume-Based Licensing (VBL) scheme, a license entitles specific applications on your devices to use a specified amount of total data volume over the term of the license. The distribution of the license to individual nodes or devices becomes irrelevant for Gigamon's accounting purpose. GigaVUE-FM tracks the total amount of data processed by the various licensed applications and provides visibility into the actual amount of data, each licensed application is using on each node, and track the overuse if any. Volume-based licensing has a service period of 1 month. Service period is the period of time for which the total usage or overage is tracked. There is a grace period for each license that is encoded in the license file. The license effectively provides data allowance for this additional time after the official end time of the license.

For purchasing licenses with the Volume-Based License (VBL) option, contact our Sales. Refer to [Contact Sales](#).

Base Bundles

GigaVUE-FM has the following three base bundles:

- SecureVUEPlus (highest)
- NetVUE (intermediate)
- CoreVUE (lowest)

The number in the SKU indicates the total volume allowance of the SKU. For example, VBL-250T-BN-CORE has a volume allowance of 250 terabytes.

Bundle Replacement Policy

You can always upgrade to a higher bundle but you cannot move to a lower version. You cannot have two different base bundles at the same time however, you can have multiple base bundles of the same type. Once upgraded to a higher bundle, the existing lower bundles will be automatically deactivated.

Add-on Packages

GigaVUE-FM allows you to add additional packages called add-on packages to the base bundles. These add-on packages allow you to add additional applications to your base bundles. Add-on packages have their own start/end date and volume specifications.

Rules for add-on packages:

- Add-on packages can only to be added when there is an active base bundle available in GigaVUE-FM.
- The base bundle limits the total volume usage of the add-on package.
- If your add-on package has volume allowance less than the base bundle, then your add-on package can only handle volume allocated for add-on package.
- When the life term of an add-on package extends beyond the base bundle, then when the base bundle expires, the volume allowance of the add-on package will be reduced to zero until a new base bundle is added.

The list of the available add-on SKUs are:

- VBL-50T-ADD-5GC
- VBL-250T-ADD-5GC
- VBL-2500T-ADD-5GC
- VBL-25KT-ADD-5GC

How GigaVUE-FM Tracks Volume-Based License Usage

GigaVUE-FM tracks the license usage for each V series node as follows:

- When you create and deploy a monitoring session, GigaVUE-FM allows you to use only those applications that are licensed at that point.
- When a license goes into grace period, you will be notified, along with a list of monitoring sessions that would be affected after the expiry of the grace period.
- When a license expires (and has not been renewed yet), the monitoring sessions using the corresponding license will be undeployed, but not deleted from the database.
- When a license is renewed or newly imported, the undeployed monitoring sessions will be redeployed.

Manage Volume-Based License

To manage active Volume-Based License:

1. On the left navigation pane, click .
2. Go to **System > Licenses**. From the top navigation bar, select the **VBL Active** from the **FM/Cloud** drop-down.

This page lists information like SKUs, Bundles, Start date, End date, Type, and Activation ID of the Volume-Based Licenses that are active. The expired licenses are automatically moved to the **VBL Inactive** page, which can be found under the **FM/Cloud** drop-down in the top navigation bar.

Click on the individual SKU to view the list of applications available for that particular SKU.

Use the following buttons to manage your active VBL.


Button	Description
Activate Licenses	Use this button to activate a Volume-Based License. Refer Activate Licenses for more information.
Email Volume Usage	Use this button to send the volume usage details to the email recipients.
Filter	Use this option to narrow down the list of active Volume-Based Licenses that are displayed on the VBL active page.
Export	Use this button to export the details in the VBL active page to a CSV or XLSX file.

For more detailed information on dashboards and reports generation for Volume-Based Licensing refer the following table:

For details about:	Reference section	Guide
How to generate Volume-Based License reports	Generate VBL Usage Reports	GigaVUE Administration Guide
Volume-Based Licensed report details	Volume Based License Usage Report	GigaVUE Administration Guide
Fabric health analytics dashboards for Volume-Based Licenses usage	Dashboards for Volume Based Licenses Usage	GigaVUE-FM User Guide

Default Trial Licenses

After you install GigaVUE-FM, a default free 1TB of CoreVUE trial volume-based license (VBL) is provided one-time for 30 days (from the date of installation).

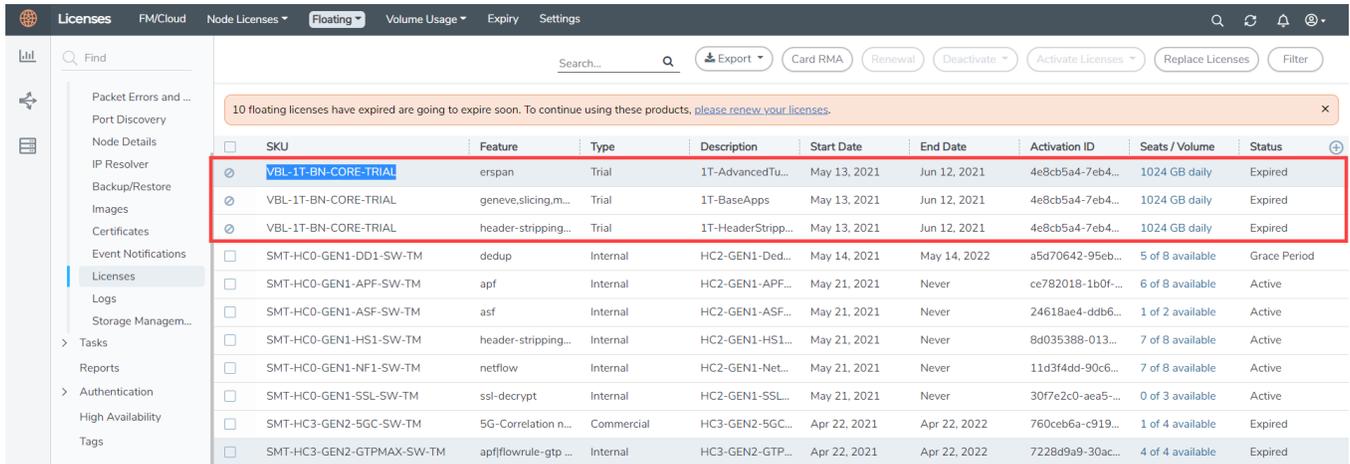

SKU	Feature	Type	Description	Start Date	End Date	Activation ID	Seats / Volume	Status
VBL-1T-BN-CORE-TRIAL	erspan	Trial	1T-AdvancedTu...	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
VBL-1T-BN-CORE-TRIAL	geneve,slicing,m...	Trial	1T-BaseApps	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
VBL-1T-BN-CORE-TRIAL	header-stripping...	Trial	1T-HeaderStripp...	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
SMT-HC0-GEN1-DD1-SW-TM	dedup	Internal	HC2-GEN1-Ded...	May 14, 2021	May 14, 2022	a5d70642-95eb...	5 of 8 available	Grace Period
SMT-HC0-GEN1-APF-SW-TM	apf	Internal	HC2-GEN1-APF...	May 21, 2021	Never	ce782018-1b0f...	6 of 8 available	Active
SMT-HC0-GEN1-ASF-SW-TM	asf	Internal	HC2-GEN1-ASF...	May 21, 2021	Never	24618ae4-ddb6...	1 of 2 available	Active
SMT-HC0-GEN1-HS1-SW-TM	header-stripping...	Internal	HC2-GEN1-HS1...	May 21, 2021	Never	8d035388-013...	7 of 8 available	Active
SMT-HC0-GEN1-NF1-SW-TM	netflow	Internal	HC2-GEN1-Net...	May 21, 2021	Never	11d3f4dd-90c6...	7 of 8 available	Active
SMT-HC0-GEN1-SSL-SW-TM	ssl-decrypt	Internal	HC2-GEN1-SSL...	May 21, 2021	Never	30f7e2c0-aea5...	0 of 3 available	Active
SMT-HC3-GEN2-5GC-SW-TM	5G-Correlation n...	Commercial	HC3-GEN2-5GC...	Apr 22, 2021	Apr 22, 2022	760ceb6a-c919...	1 of 4 available	Expired
SMT-HC3-GEN2-GTPMAX-SW-TM	apfflowrule-gtp...	Internal	HC3-GEN2-GTP...	Apr 22, 2021	Apr 22, 2022	7228d9a9-30ac...	4 of 4 available	Expired

This license includes the following applications:

- ERSPAN
- Geneve
- Slicing
- Masking
- Trailer
- Tunneling
- Load Balancing
- Enhanced Load Balancing
- Flowmap
- Header-stripping
- Add header

NOTE: There is no grace period for the trial license. If you do not have any other Volume-based licenses installed, then after 30 days, on expiry of the trial license, any deployed monitoring sessions will be undeployed from the existing V series 2.0 nodes.

To deactivate the trial VBL refer to Delete Default Trial Licenses section for details.

Supported Hypervisors for VMware

The following table list the supported hypervisor for VMware vSphere ESXi and VMware vSphere NSX-T

V Series 2 Supported Hypervisors	Tested Platforms			
		vCenter Server	ESXi	GigaVUE-FM
vSphere ESXi	v6.7	v6.7U3	v6.7U3	v5.10.02, v5.11.01, v5.12.00, v5.13.00, v5.13.01
	v7.0	v7.0	v7.0	v5.10.02, v5.11.01, v5.12.00, v5.13.00, v5.13.01, v5.14.00, v5.15.00, v5.16.00, v6.0.00, v6.1.00
	v7.0	v7.0U3	v7.0U3	v5.15.00, v5.16.00, v6.0.00, v6.1.00, v6.2.00
vSphere NSX-T	v2.5.1	v6.7U3	v6.7U3	v5.10.02
	v3.0	v7.0	v7.0	v5.10.02
	v2.5.2	v6.7U3	v6.7U3	v5.11.01
	v3.0.2	v7.0	v7.0	v5.11.01, v5.12.00
	v3.0.3	v7.0	v7.0	v5.13.00, v5.13.01, v5.14.00
	v3.1.0	v7.0	v7.0	v5.11.01, v5.12.00
	v3.1.2	v7.0	v6.7U3, v7.0U1	v5.12.00, v5.13.00, v5.13.01
	v3.1.3	v7.0	v6.7U3, v7.0U1	v5.13.01, v5.14.00, v6.0.00
	v3.2.0	v7.0, v7.0U3	v6.7U3, v7.0U1, v7.0U3	v5.14.01, v5.15.00, v5.16.00, v6.0.00
	v3.2.1	v7.0U3	v6.7U3, v7.0U1, v7.0U3	v6.0.00, v6.1.00, v6.2.00
v4.0.0	v7.0U3	v7.0U3	v6.0.00, v6.1.00, v6.2.00	

Cloud Overview Page

The overview page is a central location to view and monitor all the monitoring sessions in a single place. You can use this overview page to spot issues which will help in troubleshooting, or perform basic actions like view, edit, clone, and delete. This page provides a quick overview of basic statistics, V Series Alarms, Connection Status and Volume Usage vs Allowance and a table to summarize the active monitoring sessions details. You can also edit the monitoring session from this page instead of navigating to the monitoring session page in each platform.

Go to **Traffic > Virtual > Orchestrated Flows > Overview**. The Cloud Homepage appears.

Virtual Dashboard Widgets

This section describes the widgets that can be viewed on the overview page.

- Overview
- V Series Alarms
- Connection Status
- Usage (VBL)
- Summary (Monitoring Session details)

Overview

The overview dashboard displays the number of GigaVUE V Series Nodes active in GigaVUE-FM, number of Monitoring sessions and connections configured in all the platforms, and the number of alarms triggered in V Series Nodes.

V Series Alarms

The V Series Alarms widget presents a pie chart that helps you to quickly view the V Series alarms generated. Each type of alarm triggered is assigned a color in the graph, which is specified by the legend. Hovering the mouse over an area in the chart displays the total number of V Series alarms triggered.

Connection Status

The connection status presents a pie chart that helps you to quickly view the connection status of connections configured in the monitoring domain. Each type of connection status is assigned a color in the graph, which is specified by the legend. Hovering the mouse over an area in the chart displays the total number of connected.

Usage

The Usage widget displays the amount of traffic that flows through the GigaVUE V Series Nodes. Each bar in the graph indicates the volume usage on a particular day. Hovering the mouse over a bar in the graph displays the volume allowance and volume usage on that particular day.

Summary

This widget allows you to view the list of all the available monitoring session along with the respective monitoring domain, platform, connection, their health status, V Series Node health status and the deployment status of the connection. You can click on the monitoring

session name to view the **Edit Monitoring session** page of the respective monitoring session.

Configure V Series Node on ESXi


This document provides an overview of the V Series fabric node deployment on the VMware ESXi platforms and describes the procedure for setting up the traffic monitoring sessions using the V Series fabric nodes. The V Series fabric nodes support traffic visibility on the following VMware networking elements:

- vSphere standard switch
- vSphere distributed switch

GigaVUE-FM creates, updates, and deletes the V Series fabric nodes in the ESXi hosts based on the configuration information provided by the user. The VMs and V Series nodes are located in the same ESXi host and the traffic mirrored from VMs is sent to V Series nodes. You can deploy only one V Series node on a single ESXi host. GigaVUE-FM can communicate directly with the V series fabric nodes.

NOTE: Ensure the source Virtual Machine and the tool is connected to different standard switches. When the source Virtual Machine and the tool are connected in the same standard switch, the traffic is looped.

The following diagram provides a high-level overview of the deployment:

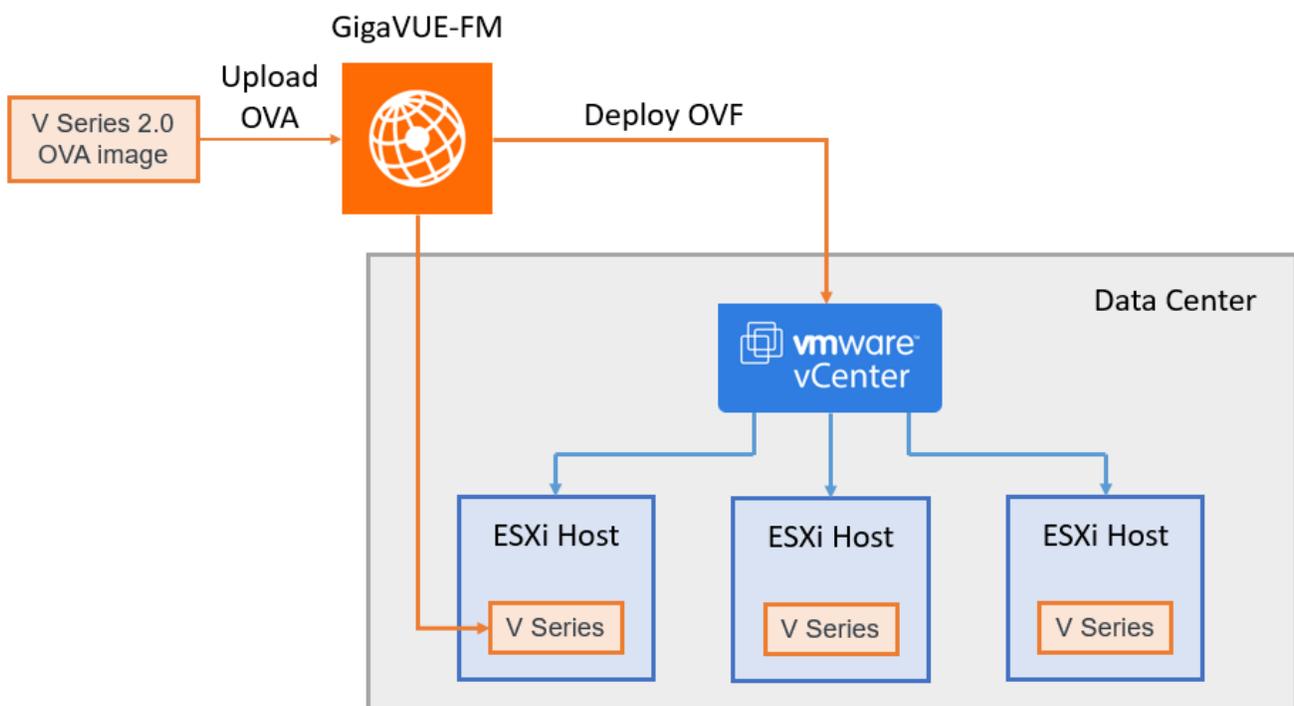

The chapter includes the following major sections:

- [Prerequisites for Integrating V Series Nodes with ESXi](#)
- [Integrate GigaVUE V Series nodes with VMware ESXi](#)

NOTE: These steps assume that VMware ESXi is installed and configured.

Refer [Deploying GigaVUE Cloud Suite on VMware vCenter in a multi-tier DC Environment](#) for more detailed information.

VMware ESXi System Requirements

To support internationalized characters in the VMware vCenter environment ensure that the vCenter character encoding is set to UTF-8.

Network Firewall Requirements

Following are the Network Firewall Requirements for V Series 2 node deployment.

Source	Destination	Source Port	Destination Port	Protocol	Service	Purpose
GigaVUE-FM	ESXi hosts	Any (1024-65535)	443	TCP	https	Allows GigaVUE-FM to communicate with vCenter and all ESXi hosts to import the V Series OVA files
	vCenter					
GigaVUE-FM	V Series Nodes	Any (1024-65535)	8889	TCP	Custom API	Allows GigaVUE-FM to communicate with V Series node
GigaVUE-FM	V Series Nodes	Any (1024-65535)	5671	TCP	Custom TCP	Allows GigaVUE V Series 2 Nodes to send traffic health updates to GigaVUE-FM
Administrator	GigaVUE-FM	Any (1024-65535)	443	TCP	https	Management connection to GigaVUE-FM
			22		ssh	

Remote Source	V Series Nodes	Custom Port (VXLAN and UDPGRE),N/A for GRE	4789	UDP	VXLAN	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes (Applicable for Tunnel Ingress option only)
			N/A	IP 47	GRE	
			4754	UDP	UDPGRE	
V Series Nodes	Tool/ HC Series instance	Custom Port (VXLAN),N/A for GRE	4789	UDP	VXLAN	Allows V Series node to communicate and tunnel traffic to the Tool
			N/A	IP 47	GRE	
V Series Nodes	Tool/ HC Series instance	N/A	N/A	ICMP	Echo Request	Allows V Series node to health check tunnel destination traffic (Optional)
					Echo Response	
V Series Nodes	GigaVUE-FM	Any (1024-65535)	Any (1024-65535)	TCP	Custom TCP	Allows GigaVUE V Series 2 Nodes to send traffic health updates to GigaVUE-FM

Required VMware Virtual Center Privileges

This section lists the minimum privileges required for the GigaVUE-FM user in Virtual Center. You assign privileges to Virtual Center users by selecting **Administration** from the left navigation pane. Then select **Roles** under the **Access Control**. Roles should be applied at the vSphere Virtual Center level and not the Data Center or Host levels.

The following table lists the minimum required permissions for GigaVUE-FM to manage the virtual center user with roles specified above.

Category	Required Privilege	Purpose
Datastore	Allocate space	V Series Node Deployment
Distributed Switch	VSPAN Operation	VDS Tapping

Category	Required Privilege	Purpose
Folder	Create Folder	V Series Node Deployment
Host	Configuration <ul style="list-style-type: none"> Network Configuration 	VSS Tapping
	Inventory <ul style="list-style-type: none"> Modify Cluster 	Pin V Series Node to the host in cluster configurations. This prevents automatic migration.
Network	<ul style="list-style-type: none"> Assign network Configure 	<ul style="list-style-type: none"> V Series Node Deployment/VSS Tapping V Series Node Deployment
Resource	Assign virtual machine to resource pool	V Series Node Deployment
vApp	<ul style="list-style-type: none"> Import vApp instance configuration 	V Series Node Deployment
Virtual machine	Configuration <ul style="list-style-type: none"> Add new disk Add or remove device Modify device settings Rename 	V Series Node Deployment V Series Node Deployment/VSS Tapping
	Interaction <ul style="list-style-type: none"> Connect devices Power on Power Off 	V Series Node Deployment
	Inventory <ul style="list-style-type: none"> Create from existing Remove 	V Series Node Deployment
	Provisioning <ul style="list-style-type: none"> Clone virtual machine 	V Series Node Deployment

Prerequisites for Integrating V Series Nodes with ESXi

The following are the prerequisites for integrating V Series nodes with ESXi:

- VMware vCenter ESXi Standard Version must be
 - a. 6.7 u3 or later 6.7.x versions (or)
 - b. 7.0 or later 7.0.x versions.
- ESXi hosts must have the minimum vCPU and memory resources for hosting the GigaVUE V Series Nodes. Refer to [Recommended Form Factor \(Instance Types\)](#) for more information.
- V Series 2 device OVA image file.
- All the target VMs must have VMware guest tools or Open VM tools if you use IP based filtering.
- Port 8889 must be available for GigaVUE-FM to access V Series nodes.
- TCP Port 443 must be open between the GigaVUE-FM instance and the ESXi host to upload the OVA files.

The V Series 2 Node OVA image files can be downloaded from [Gigamon Customer Portal](#).

Recommended Form Factor (Instance Types)

The form factor (instance) size of the V Series is configured on the OVF file and packaged as part of the OVA image file. The following table lists the available form factors (instance types) and sizes based on memory and the number of vCPUs for a single V series node. Instance sizes can be different for V Series nodes in different ESXi hosts and the default size is Small.

Type	Memory	vCPU	Disk space	vNIC
Small	4GB	2vCPU	8GB	1 Management interface, 1 Tunnel interface, and 8 vTAP interfaces
Medium	8GB	4 vCPU		
Large	16GB	8 vCPU		

Default Login Credentials

You can login to the GigaVUE V Series Node, GigaVUE V Series proxy, and G-vTAP Controller by using the default credentials.

Product	Login credentials
GigaVUE V Series Node	You can login to the GigaVUE V Series Node by using ssh. The default username and password is: Username: gigamon Password: Gigamon123!

Integrate GigaVUE V Series nodes with VMware ESXi

To integrate V Series nodes with ESXi, perform the following steps:

- [Step 1: Upload V Series node Image into GigaVUE-FM](#)
- [Step 2: Connect to VMware vCenter](#)
- [Step 3: Deploy GigaVUE V Series Nodes on VMware ESXi](#)
- [Step 4: Configure Monitoring Sessions](#)
- [Upgrade GigaVUE V Series Node in GigaVUE-FM for ESXi](#)

This section provides detailed information on the multiple ways in which GigaVUE Cloud Suite for VMware can be configured to provide visibility for physical and virtual traffic. Based on the method in which you want to deploy the GigaVUE V Series Nodes, there are two ways in which you can configure GigaVUE Cloud Suite for VMware (ESXi). Refer to the [VMware ESXi System Requirements](#) and [Prerequisites for Integrating V Series Nodes with ESXi](#) sections for prerequisites that are required to be configured. For more detailed information and the work flow refer the following topics:

- [Deploy GigaVUE V Series Nodes using ESXi](#)
- [Deploy GigaVUE V Series Nodes using GigaVUE-FM](#)

Deploy GigaVUE V Series Nodes using ESXi

Step No	Task	Refer the following topics
1	Upload the GigaVUE V Series Node Image (OVA File) into GigaVUE-FM	Step 1: Upload V Series node Image into GigaVUE-FM
2	Create a Monitoring Domain	Step 2: Connect to VMware vCenter
3	Configure GigaVUE V Series Node using ESXi Host	Step 3: Deploy GigaVUE V Series Nodes on VMware ESXi Refer to <i>Deploy GigaVUE V Series Nodes using VMware ESXi Host</i> section.
4	Create Monitoring session	Create a Monitoring Session
5	Create a Raw End Point to tap traffic	Create Raw Endpoint
6	Add Applications to the Monitoring Session	Add Applications to Monitoring Session
7	Deploy Monitoring Session	Deploy Monitoring Session
8	View Monitoring Session Statistics	View Monitoring Session Statistics


Deploy GigaVUE V Series Nodes using GigaVUE-FM

Step No	Task	Refer the following topics
1	Upload the GigaVUE V Series Node Image (OVA File) into GigaVUE-FM	Step 1: Upload V Series node Image into GigaVUE-FM
2	Create a Monitoring Domain	Step 2: Connect to VMware vCenter
3	Deploy GigaVUE V Series Nodes using GigaVUE-FM	Step 3: Deploy GigaVUE V Series Nodes on VMware ESXi Refer to <i>Deploy GigaVUE V Series Nodes using GigaVUE-FM</i> section.
4	Create Monitoring session	Create a Monitoring Session
5	Create a Ingress and Egress Tunnels to tunnel traffic	Create Ingress and Egress Tunnel
6	Add Applications to the Monitoring Session	Add Applications to Monitoring Session
7	Deploy Monitoring Session	Deploy Monitoring Session
8	View Monitoring Session Statistics	View Monitoring Session Statistics

Step 1: Upload V Series node Image into GigaVUE-FM

To upload the V Series image into GigaVUE-FM:

1. Go to **Inventory > VIRTUAL > VMware V Series ESXi**, and then click **Settings > OVA Files**. The OVA Files page appears.

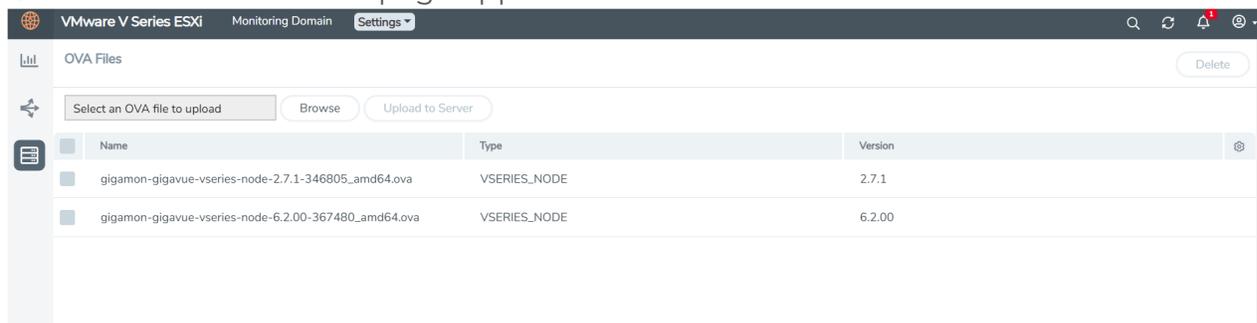

2. In the OVA Files page, click **Browse** to select the *gigamon-gigavue-vseries-node-x.x.x-0-xxxxxx.ova* file.
3. Click **Upload to Server** to upload the selected OVA image file to GigaVUE-FM server.

Step 2: Connect to VMware vCenter

This chapter describes how to create a monitoring domain for deploying V Series node in VMware ESXi hosts. You must establish a connection between GigaVUE-FM and your vCenter environment before you can perform the configuration steps for V Series node.

To configure VMware vCenter in GigaVUE-FM:

1. Go to **Inventory > VIRTUAL > VMware V Series ESXi**, and then click **Monitoring Domain**. The **Monitoring Domain** page appears.
2. On the **Monitoring Domain** page, click on the **ESXi** tab. Then, click **New**. The **VMware Configuration** page appears.

3. In the **VMware Configuration** page, enter or select the following details:

Field	Description
Monitoring Domain	Name of the monitoring domain
Connection Alias	Name of the connection
Virtual Center	IP address or FQDN of the vCenter
Username	Username of the vCenter user with minimum privileges as described in Required VMware Virtual Center Privileges section.
Password	vCenter password used to connect to the vCenter
Traffic Acquisition Method	Select a Tapping method. NOTE: When using AMX application select the traffic acquisition Method as Customer Orchestrated Source.

4. Click **Save**.

Step 3: Deploy GigaVUE V Series Nodes on VMware ESXi

This section provides step-by-step information on how to deploy GigaVUE V Series Nodes.

GigaVUE V Series Nodes can be deployed on VMware ESXi in two ways. You can either directly use VMware ESXi host system to deploy your GigaVUE V Series Nodes or use GigaVUE-FM to deploy your V Series nodes.

Refer to the following section for more detailed information:


- [Deploy GigaVUE V Series Nodes using GigaVUE-FM](#)
- [Deploy GigaVUE V Series Nodes using VMware ESXi Host](#)

Deploy GigaVUE V Series Nodes using GigaVUE-FM

After establishing a connection between GigaVUE-FM and VMware ESXi, GigaVUE-FM launches the configuration for the GigaVUE V Series Node.

To deploy GigaVUE V Series Nodes using GigaVUE-FM, follow the steps given below:

1. After VMware Configuration in GigaVUE-FM, you are navigated to the **VMware Fabric Launch Configuration** page.
2. You can also open **VMware Fabric Launch Configuration** page from the monitoring domain. To launch the **VMware Fabric Launch Configuration** from the Monitoring Domain, click **Actions** and then select **Deploy Fabric** from the drop-down. The **VMware Fabric Launch Configuration** page appears.

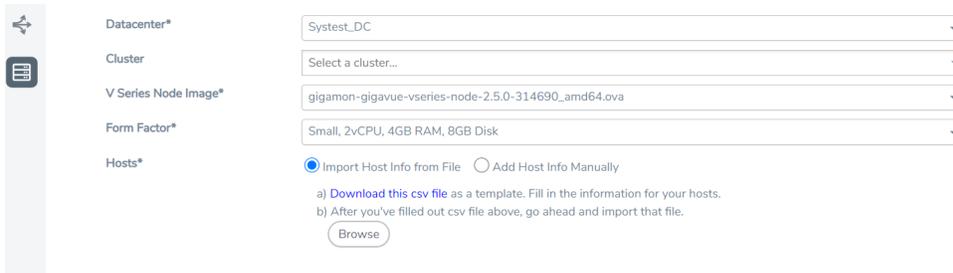

The screenshot shows a configuration interface for adding V Series nodes to an ESXi environment. On the left is a vertical sidebar with two icons: a top icon with a right-pointing arrow and a bottom icon with a list of three items. The main configuration area contains the following fields and options:

- Datacenter***: A dropdown menu with the value "Systest_DC".
- Cluster**: A dropdown menu with the value "Select a cluster...".
- V Series Node Image***: A dropdown menu with the value "gigamon-gigavue-vseries-node-2.5.0-314690_amd64.ova".
- Form Factor***: A dropdown menu with the value "Small, 2vCPU, 4GB RAM, 8GB Disk".
- Hosts***: Two radio buttons: "Import Host Info from File" (selected) and "Add Host Info Manually".

Below the radio buttons, there are two instructions:

- Download [this csv file](#) as a template. Fill in the information for your hosts.
- After you've filled out csv file above, go ahead and import that file.

A "Browse" button is located below the instructions.

3. On the **VMware Fabric Launch Configuration** page, enter or select the following details:

Field	Description
Datacenter	vCenter Data Center with the ESXi hosts to be provisioned with V Series nodes
Cluster	Cluster where you want to deploy V Series nodes
Hosts	<p>Select the ESXi hosts for V Series deployment.</p> <p>Select Import Host Info from file or Add Host Info Manually.</p> <p>Import Host Info from file:</p> <p>To import host details from a .csv file:</p> <ol style="list-style-type: none"> Download the .csv template file. Enter the required values in the Excel sheet and save the file. Click Browse and select the .csv file saved in the previous step. <p>Add Host Info Manually:</p> <p>Select the ESXi hosts for V Series deployment.</p> <p>The Common Configuration drop-down wizard appears. Select the Datastores or Datastore Clusters and enter the required values. Click Apply to all to apply the selected values to all the selected hosts.</p> <p>Select the IP type as Static if you wish to deploy a node using a Static IP address.</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>NOTE: The Tunnel Gateway IP field is optional.</p> </div>

Field	Description
	<div style="border: 1px solid #ccc; padding: 10px;"> <div style="background-color: #f0f0f0; padding: 5px; margin-bottom: 10px;"> ▼ Common Configuration </div> <div style="display: flex; justify-content: flex-end; margin-bottom: 10px;"> <input checked="" type="radio"/> Datastores <input type="radio"/> Datastore Clusters </div> <div style="margin-bottom: 10px;"> Datastore Select a datastore... ▾ </div> <div style="margin-bottom: 10px;"> V Series Node Name Prefix V Series - </div> <div style="margin-bottom: 10px;"> V Series Node Name Suffix _____ </div> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 10px;"> <div style="background-color: #f0f0f0; padding: 2px; margin-bottom: 5px;">Management</div> <div style="margin-bottom: 5px;"> Network* Select a switch or port group... ▾ </div> <div style="margin-bottom: 5px;"> IP Type Select IP type... ▾ </div> </div> <div style="border: 1px solid #ccc; padding: 5px;"> <div style="background-color: #f0f0f0; padding: 2px; margin-bottom: 5px;">Tunnel</div> <div style="margin-bottom: 5px;"> Network* Select a switch or port group... ▾ </div> <div style="margin-bottom: 5px;"> IP Type DHCP ▾ </div> <div style="margin-bottom: 5px;"> Gateway IP* _____ </div> <div style="margin-bottom: 5px;"> CIDR* _____ </div> <div style="margin-bottom: 5px;"> Use IPv6 <input type="checkbox"/> No </div> </div> <div style="margin-bottom: 10px;"> Virtual Disk Format Thin Provision ▾ </div> <div style="margin-bottom: 10px;"> Deployment Folder / </div> <div style="margin-bottom: 10px;"> User Password* (<i>gigamon</i>) _____ </div> </div>
V Series Node Image	Select the OVA file uploaded in the Step 1: Upload V Series node Image into GigaVUE-FM , from the drop-down menu.
Form Factor	Instance size of the V Series node. Refer Prerequisites for Integrating V Series Nodes with ESXi for more information.

- Click **Deploy**. After the V series node is deployed in vCenter, it appears on the Monitoring Domain page under Fabric tab of the selected Monitoring Domain.

To view the fabric launch configuration specification of a fabric node, click on a V Series fabric node, and a quick view of the Fabric Launch Configuration appears on the Monitoring Domain page.

Deploy GigaVUE V Series Nodes using VMware ESXi Host


You can use your own VMware ESXi host system to deploy GigaVUE V Series nodes and use GigaVUE-FM to configure the advanced features supported by these nodes. These nodes register themselves with GigaVUE-FM using the information provided by the user in the virtual machine creation wizard. Once the nodes are registered with GigaVUE-FM, you can configure monitoring sessions and related services in GigaVUE-FM.

This section describes how to deploy GigaVUE V Series Nodes under Third Party Orchestration Monitoring Domain using VMware ESXi Host.



- The nodes will be deployed under the Monitoring Domain created in Third Party Orchestration.
- When registering GigaVUE V Series nodes in GigaVUE-FM, the connection name under each monitoring domain must be unique.

1. Login to VMware ESXi host using your web browser.
2. On the left navigation pane, select Virtual Machines and click **Create/Register VM**. The New Virtual Machine dialog box appears.

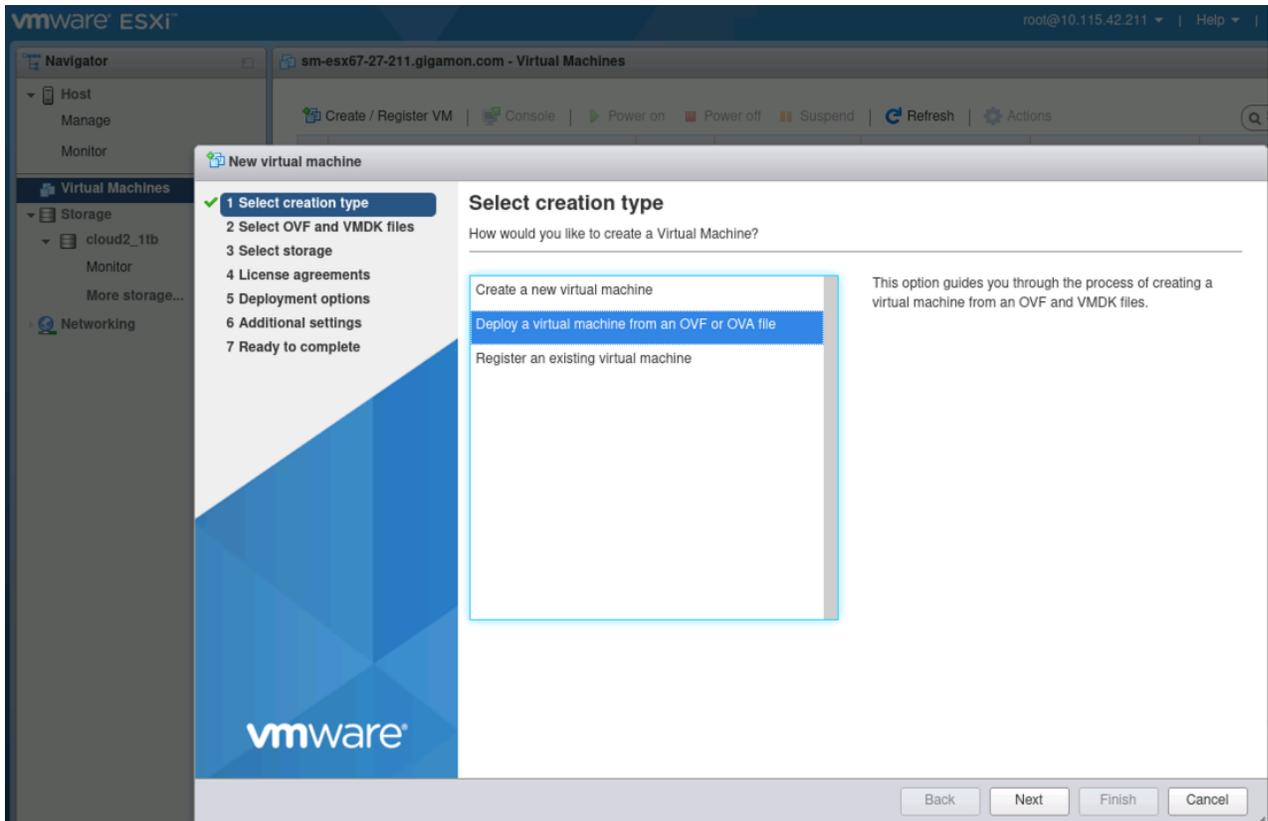

3. On the **Select Creation Type** page, select **Deploy a Virtual Machine from an OVF or OVA file**.

4. The **Select OVF and VMDK files** page appears. Provide a name for the Virtual machine. Upload the OVF and VMDK files. Click Next.

 When deploying GigaVUE V Series Nodes using VMware ESXi,

- you cannot use OVA files.
- you must only select any of the following OVF files:
 - a. files vseries-node-file7.ovf (Small form factor)
 - b. files vseries-node-file8.ovf (Medium form factor)
 - c. files vseries-node-file9.ovf (Large form factor)

5. Then, the **Select Storage** page appears, select the storage type and data store. Click Next.
6. Under the **Deployment Options**, provide the necessary details given below.
 - a. Select the network port group associated with the host, network ports and tunneling port details from the **Network Mappings** drop-down.
 - b. Select Thick/Thin from the **Disk provisioning** field.
 - c. Select **Management Port DHCP** from the **Deployment type** drop-down.
 - d. (optional) Enable the **Power on automatically** check-box to power on the Virtual Machine automatically.

7. Under the additional settings page, provide the user data as shown in the figure.

New virtual machine - vseries-node-51301

1 Select creation type
 2 Select OVF and VMDK files
 3 Select storage
 4 Deployment options
 5 Additional settings
 6 Ready to complete

Additional settings

Additional properties for the VM

Options		
Hostname	vseries-node-51301	i
Administrative Login Password	*****	i
Administrative Login Password confirm	*****	i
Administrative Login Public Key		i
Oauth Login Public Key		i
Management Port DHCP	<input checked="" type="checkbox"/>	i
Management Port IP Address		i
Management Port IP Netmask		i
Management Port IP Gateway		i
Tool Port DHCP	<input type="checkbox"/>	i
Tool Port IP Address		i
Tool Port IP Netmask		i
Tool Port IP Gateway		i
GroupName	ssl-md	i
SubGroupName	ssl-vpc	i
User	orchestration	i
Password	*****	i
Password confirm	*****	i
RemoteIP	10.10.10.10	i
RemotePort	443	i

Back Next Finish Cancel

Enter the following values in the additional settings:

- Hostname: <Host Name>
- Administration Password: <Your Password>
- GroupName: <Monitoring domain name>
- SubGroupName: < Connection name>
- User: <Username>
- Password: <Password>
- remoteIP: <IP address of the GigaVUE-FM>
- remotePort: 443

NOTE: User and Password provided in the registration data must be configured in the **User Management** page. Refer to [Configure Role-Based Access for Third Party Orchestration](#) for more detailed information. Enter the Username and Password created in the **Add Users** Section.

8. Review the setting selection in the **Ready to Complete page**, then click Finish.

The V Series Node deployed in VMware ESXi host appears in Third Party Orchestration Monitoring Domain page of GigaVUE-FM.

Monitoring Domain	Connections	Name	Management IP	Type	Version	Status
MD1	Connection1		10.115.182.94	V Series Node	2.6.0	Ok
MD2	Connection2		10.115.182.23	V Series Node	2.6.0	Ok

Step 4: Configure Monitoring Sessions

GigaVUE-FM collects inventory data on all V series nodes deployed in your environment through vCenter connections. You can design your monitoring session to include or exclude the target VMs that you want to monitor. You can also choose to monitor egress, ingress, or all traffic. When a new target VM is added to your environment, GigaVUE-FM automatically detects it and based on the selection criteria, the detected target VMs are added into your monitoring session. Similarly, when a traffic monitoring target VM is removed, it updates the monitoring sessions to show the removed instance. Before deploying a monitoring session, you need to deploy a V Series node in each host where you want to monitor the traffics.

NOTE:

- Link transformation and multiple links between two entities are not supported in V Series nodes of ESXi.
- Pre-filtering is not supported on VMware ESXi running with V Series nodes.

Refer to the following topics for details:

- [Create a Monitoring Session](#)
- [Create a New Map](#)
- [Add Applications to Monitoring Session](#)
- [Deploy Monitoring Session](#)
- [View Monitoring Session Statistics](#)

- [Visualize the Network Topology](#)
- [Configure VMware Settings](#)

Create a Monitoring Session

GigaVUE-FM automatically collects inventory data on all target instances available in your cloud environment. You can design your monitoring session to include or exclude the instances that you want to monitor. You can also choose to monitor egress, ingress, or all traffic.

When a new target instance is added to your cloud environment, GigaVUE-FM automatically detects and adds the instance into your monitoring session. Similarly, when an instance is removed, it updates the monitoring sessions to show the removed instance.

NOTE: You can have multiple monitoring sessions per monitoring domain.

You can create multiple monitoring sessions within a monitoring domain.

To create a new monitoring session:

1. In GigaVUE-FM, on the left navigation pane, select **Traffic > Virtual > Orchestrated Flows > VMware**. The **Monitoring Sessions** page appears.
2. Click **New** to open the **Create a New Monitoring Session** page.

Create A New Monitoring Session

Alias	MS1
Monitoring Domain	MD
Connection	<input checked="" type="radio"/> Select All <input type="radio"/> Select None
	<input type="text" value="Scope-2 x"/>

- Enter the appropriate information for the monitoring session as described in the following table.

Field	Description
Alias	The name of the monitoring session.
Monitoring Domain	The name of the monitoring domain that you want to select.
Connection	The connection(s) that are to be included as part of the monitoring domain. You can select the required connections that need to be part of the monitoring domain.

- Click **Create**. The Monitoring Session details page appears displaying the specified session information and target VMs.

NOTE: In a Monitoring Session, if a selected VM is connected to VSS and VDS, then the GigaVUE-FM can create tapping for both VSS and VDS network.

The Monitoring Session page also has the following buttons:

Button	Description
Undeploy	Undeploys the selected monitoring session.
Clone	Duplicates the selected monitoring session.
Edit	Opens the Edit page for the selected monitoring session. NOTE: In case of an error while editing a monitoring session, undeploy and deploy the monitoring session again.
Delete	Deletes the selected monitoring session.

Create Ingress and Egress Tunnel

Traffic from the V Series 2 node is distributed to tunnel endpoints in a monitoring session. A tunnel endpoint can be created using a standard L2GRE, VXLAN, UDPGRE, or ERSPAN tunnel.

To create a new tunnel endpoint:

- After creating a new monitoring session, or click **Actions > Edit** on an existing monitoring session, the GigaVUE-FM canvas appears.
- In the canvas, select **New > New Tunnel**, drag and drop a new tunnel template to the workspace. The **Add Tunnel Spec** quick view appears.

3. On the New Tunnel quick view, enter or select the required information as described in the following table.

Field	Description
Alias	The name of the tunnel endpoint. NOTE: Do not enter spaces in the alias name.
Description	The description of the tunnel endpoint.
Type	The type of the tunnel. Select ERSPAN, or L2GRE, or VXLAN, or UDPGRE to create a tunnel.
Traffic Direction	The direction of the traffic flowing through the V Series node. <ul style="list-style-type: none"> Choose In (Decapsulation) for creating an Ingress tunnel, traffic from the source to the V Series node. Enter values for the Key. Choose Out (Encapsulation) for creating an Egress tunnel from the V Series node to the destination endpoint. Select or enter values for MTU, Time to Live, DSCP, PREC, Flow Label, and Key. <ul style="list-style-type: none"> ERSPAN, L2GRE, UDPGRE, and VXLAN are the supported Ingress tunnel types. You can configure Tunnel Endpoint as your first level entity in Monitoring Session. L2GRE and VXLAN are the supported Egress tunnel types.
IP Version	The version of the Internet Protocol. Select IPv4 or IPv6.
Remote Tunnel IP	For Ingress tunnel, Remote Tunnel IP is the IP address of the tunnel source. For Egress tunnel, Remote Tunnel IP is the IP address of the tunnel destination endpoint.

4. Click **Save**.

To delete a tunnel, select the required tunnel and click **Delete**.


After configuring the tunnels and deploying the monitoring session, you can view the names of egress tunnels configured for a monitoring session, on the Monitoring Session details page. The Egress Tunnel column displays the name of the egress tunnel configured for a particular monitoring session. When multiple egress tunnels are configured for a monitoring session, then the Egress Tunnel column displays the number of egress tunnels configured in that monitoring session. Hover over the number of egress tunnels to display the names of the egress tunnels used in that particular monitoring session.

Create Raw Endpoint

Raw End Point (REP) is used to pass traffic from an interface. You can optionally use this end point to send traffic to the applications deployed in the monitoring session.

To add Raw Endpoint to the monitoring session:

1. Drag and drop **New RAW** from **NEW** to the graphical workspace.
2. Click the **New RAW** icon and select **Details**. The **RAW** quick view page appears.
3. Enter the alias and description. In the **Alias** field, enter a name for the Raw End Point and click **Save**.

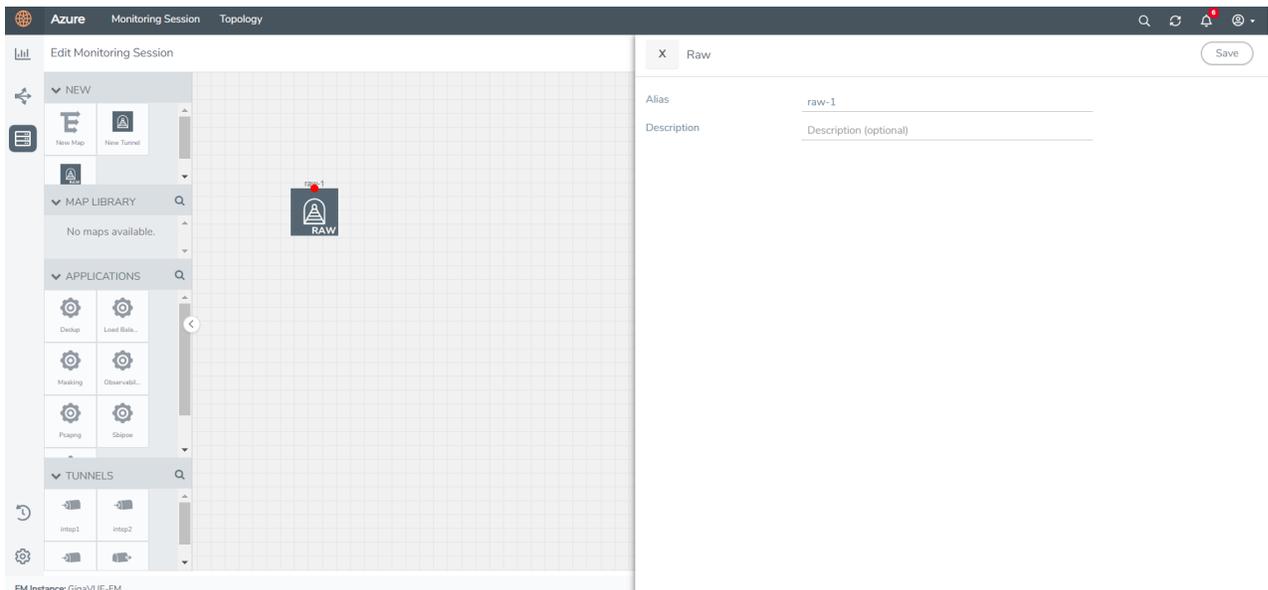

4. To deploy the monitoring session after adding the Raw Endpoint click the **Deploy** button in the edit monitoring session page.
5. The **Select nodes to deploy the Monitoring Session** dialog box appears. Select the V Series Nodes for which you wish to deploy the monitoring session.
6. After selecting the V Series Node, select the interfaces for each of the REPs and the TEPs deployed in the monitoring session from the drop-down menu for the selected individual V Series Nodes. Then, click **Deploy**.

Create a New Map

You must have the flow map license to deploy a map in monitoring session.

For new users, the free trial bundle will expire after 30 days and the GigaVUE-FM prompts you to buy a new license. For detailed information on GigaVUE-FM licenses, refer to "Licenses" section in the *GigaVUE Administration Guide*.


A map is used to filter the traffic flowing through the GigaVUE V Series Nodes. It is a collection of one or more rules (R). The traffic passing through a map can match one or more rules defined in the map.

Keep in mind the following when creating a map:

Parameter	Description
Rules	A rule (R) contains specific filtering criteria that the packets must match. The filtering criteria lets you determine the targets and the (egress or ingress) direction of tapping the network traffic.
Priority	A priority determines the order in which the rules are executed. The priority value can range from 1 to 5, with 1 being the highest and 5 is the lowest priority.
Pass	The traffic from the virtual machine will be passed to the destination.
Drop	The traffic from the virtual machine is dropped when passing through the map.
Traffic Filter Maps	A set of maps that are used to match traffic and perform various actions on the matched traffic.
Inclusion Map	An inclusion map determines the instances to be included for monitoring. This map is used only for target selection.
Exclusion Map	An exclusion map determines the instances to be excluded from monitoring. This map is used only for target selection.
Automatic Target Selection (ATS)	<p>A built-in feature that automatically selects the cloud instances based on the rules defined in the traffic filter maps, inclusion maps, and exclusion maps in the monitoring session.</p> <p>The below formula describes how ATS works:</p> <p>Selected Targets = Traffic Filter Maps \cap Inclusion Maps - Exclusion Maps</p>
Group	A group is a collection of maps that are pre-defined and saved in the map library for reuse.

To create a new map:

1. After creating a new monitoring session, or click **Actions > Edit** on an existing monitoring session, the GigaVUE-FM canvas appears.
2. In the canvas, select **New > New Map**, drag and drop a new map template to the workspace. The New Map quick view appears.

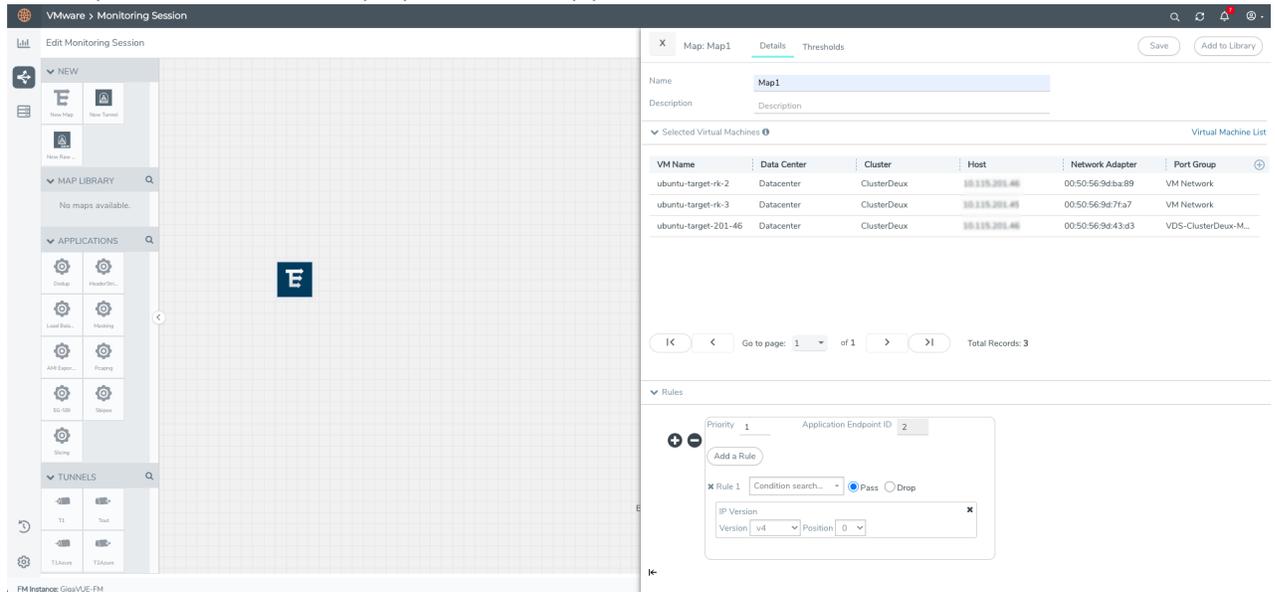

3. On the New Map quick view, enter or select the required information as described in the following table.

Field	Description
Name	Name of the new map
Description	Description of the map

Field	Description
<p>Selected Virtual Machines</p> <p>Using this option, you can select an individual Network adapter of a virtual machine as a target. You can also view and filter the list of virtual machines available. When using this option, you cannot use Automatic Target Selection (ATS).</p>	<p>Virtual Machine List</p> <p>Click on the Virtual Machine List button. The Virtual Machine List quick view opens. Select the virtual machines you wish to use as the target and click on the Apply button in the Virtual Machine List quick view to save your changes. You can also use the filter button to filter the virtual machines. To filter the list of virtual machines:</p> <p>Click on the Filter button to filter the virtual machines based on any of the following criteria:</p> <ul style="list-style-type: none"> • Data Center • Cluster • Host Name • VM Name • VM Tag Category • VM Tag Name <p>After selecting the details, click on the Apply button in the filter dialog box to apply the filters. The list of virtual machines appears based on the filter criteria. Select the virtual machines you wish to use as the target and click on the Apply button in the Virtual Machine List quick view to save your changes.</p>
<p>Map Rules</p>	<p>The rules for filtering the traffic in the map. Through the map, packets can be dropped or passed based on the highest to lowest rule priority. You can add 5 rule sets on a map. Use the + and - buttons to add or remove a rule set in the map. Each rule set can have only 25 rules per map and each map can have multiple conditions. To add ATS rules for an Inclusion/Exclusion map, you must select at least one rule condition. To add a map rule:</p> <ol style="list-style-type: none"> a. Enter a Priority value from 1 to 5 for the rule with 1 being the highest and 5 is the lowest priority. b. Click Add a Rule. The new rule field appears for the Application Endpoint. c. Select a required condition from the drop-down list. d. Select the rule to Pass or Drop through the map. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p> If two rules with same condition are configured as pass and drop,</p> <ul style="list-style-type: none"> • on a same tunnel endpoint, the traffic filtering precedence will be based on the priority value. • on two different tunnel endpoints, the traffic will be passed or dropped to the respective tunnel endpoints. <p>For detailed information on filtering fragmented and unfragmented</p> </div>

Field	Description
	 packets, refer to "GigaSMART Adaptive Packet Filtering (APF)" section on the <i>GigaVUE Fabric Management Guide</i> .

-  • VMware tools are not required to discover targets, since GigaVUE-FM can discover targets with ATS using the tags attached to the VMs.
- Targets can be selected by providing the VM's node name or the hostname as selection criteria. A host is selected when the hostname matches all the active targets.
- Pass and Drop rule selection with Automatic Target Selection (ATS) differ with the Map type as follows:
 - Traffic Map—Only Pass rules for ATS
 - Inclusion Map—Only Pass rules for ATS
 - Exclusion Map—Only Drop rules for ATS

4. To reuse the map, click **Add to Library**. Save the map using one of the following ways:
 - a. Select an existing group from the **Select Group** list or create a **New Group** with a name.
 - b. Enter a description in the **Description** field, and click **Save**.
5. Click **Save**.

NOTE: If a packet is fragmented then all the fragments will be destined to the same application end point. You can find the stats of mapped fragmented traffic in GigaVUE-FM. Refer to "Map Statistics" section in *GigaVUE Fabric Management Guide* for detailed information.

To edit a map, select the map and click **Details**, or click **Delete** to delete the map.

You can also perform the following action in the Monitoring session canvas.

- Click a map and select **Details** to edit the map or select **Delete** to delete the map.
- Click the **Show Targets** button to view the monitoring targets highlighted in orange.
- Click  to expand the **Targets** dialog box. Click  to change the view from the list view to topology view. To view details about a GigaVUE V Series Node, click the arrow next to the VM.
- In the Instances window, click  to filter the list of instances.

Example- Create a New Map using Inclusion and Exclusion Maps

Consider a monitoring session with 5 cloud instances. Namely target-1-1, target-1-2, target-1-3, target-2-1, target-2-2.

1. Drag and drop a new map template to the workspace. The New map quick view appears.
2. Enter the name as Map 1 and enter the description. Enter the priority and Application Endpoint ID.
3. Select the condition as VM Name and enter the **target**. This includes the instances, target-1-1, target-1-2, target-1-3, target-2-1, and target-2-2.
4. Click on the Expand icon on the bottom of the Monitoring session canvas. The Inclusion Maps and Exclusion Maps sections appears.
5. Drag and drop a new map template to the Inclusion Maps region. The New Map quick view appears. Enter the Name and Description for the map.
 - a. Enter the name as Inclusionmap1 and enter the description. Enter the priority and Application Endpoint ID.
 - b. Select the condition as VM Name and enter the VM Name as **target-1**. Then the instance with VM name **target-1-1**, **target-1-2**, and **target-1-3** will be included.
6. Drag and drop a new map template to the Exclusion Maps region. The New Map quick view appears. Enter the details as mentioned in above section.
 - a. Enter the name as Exclusionmap1 and enter the description. Enter the priority and Application Endpoint ID.
 - b. Select the condition as VM Name and enter the VM Name as **target-1-3**. Then the instance **target-1-3** will be excluded.

Based on this configuration, the Automatic Target Selection will select the instances target-1-1 and target-1-2 as target.

Add Applications to Monitoring Session

GigaVUE Cloud Suite with GigaVUE V Series 2 node supports the following GigaSMART applications in the GigaVUE-FM canvas:

- Slicing
- Masking
- De-duplication
- Load Balancing
- PCAPng Application
- Application Metadata Exporter

For more detailed information on how to configure these application, refer to *GigaVUE V Series Applications Guide*.

You can also configure the following GigaSMART operations from the **Traffic > Solutions > Application Intelligence**:

- Application Metadata Intelligence
- Application Filtering Intelligence

For more information, refer to these GigaSMART Operations in the *GigaVUE Fabric Management Guide*.

Deploy Monitoring Session

To deploy the monitoring session:

1. Drag and drop the following items to the canvas as required:
 - Maps from the **MAP LIBRARY** section
 - Inclusion and Exclusion maps from the Map Library to their respective section at the bottom of the workspace.
 - GigaSMART apps from the **APPLICATIONS** section
 - Egress tunnels from the **TUNNELS** section
2. After placing the required items in the canvas, hover your mouse on the map, click the red dot, and drag the arrow over to another item (map, application, or tunnel).

NOTE: You can drag multiple arrows from a single map and connect them to different maps.

The screenshot shows the 'Monitoring Session' configuration interface. On the left, there is a sidebar with sections: 'NEW' (New Map, New Tunnel), 'MAP LIBRARY' (Map1), 'APPLICATIONS' (Slicing, Masking), and 'TUNNELS' (Tunnel1, Tunnel2). The main workspace contains a diagram with 'Tunnel1' (a blue box with a red dot), 'Map1' (a blue box with an 'E'), and 'Tunnel2' (a blue box with an arrow). Arrows connect Tunnel1 to Map1 and Map1 to Tunnel2. A 'Show Targets' button is in the top right. On the right, the 'MONITORING SESSION INFO' panel shows 'TARGETS' with a dropdown menu and a diagram of subnets and monitored instances. The subnets are 10.10.30.0/24 and 10.110.40.0/24, and the monitored instances are 10.110.50.0/24 and 10.114.4bee::/64.

3. (Not applicable for NSX-T solution and Customer Orchestrated SourceTraffic Acquisition Method) Click **Show Targets** to view details about the subnets and monitored instances. The instances and the subnets that are being monitored are highlighted in orange.

4. Click **Deploy** to deploy the monitoring session. The status is displayed as **Success** in the Monitoring Sessions page. The session is successfully deployed on all the V Series nodes. Click on the status link in the Status column on the Monitoring Session page to view the Monitoring Session Deployment Report. When you click on the Status link, the Deployment Report is displayed. If the monitoring session is not deployed properly, then one of the following errors is displayed in the Status column.
 - Partial Success—The session is not deployed on one or more instances due to V Series node failure.
 - Failure—The session is not deployed on any of the V Series nodes.The **Monitoring Session Deployment Report** displays the errors that appeared during deployment.

View Monitoring Session Statistics

The Monitoring Session Statistics page lets you analyze the incoming and outgoing traffic on an hourly, daily, weekly, and monthly basis. The traffic can be viewed based on kilobits/second, megabits/second or gigabits/second.

On the Monitoring Sessions page, click **View** in the Statistics column to view the Monitoring Session Statistics page. The **Monitoring Session Statistics** page appears where you can analyze incoming and outgoing traffic.

NOTE: If there are multiple monitoring sessions with different target selection, then the incoming maps will not show true statistics and it shows the aggregate traffic from all the targets.



You can also perform the following actions on the Monitoring Session Statistics page:

- Directly below the graph, you can click on **IncomingMbps**, **Outgoing Mbps**, or **Ratio (Out/In) (Mbps)** to view the statistics individually.
- At the bottom of the Monitoring Session Statistics page, you can click on **View Monitoring Session Diagram**. The Monitoring Session Diagram quick view appears.
- On the **Monitoring Session Diagram** page, you can expand any map, or tunnel to open a **Details** quick view of that item to see more details about the incoming and outgoing traffic for that item.
- You can also scroll down the Map **Details** quick view to view the Map Rules, Action Sets, and Map Info for this map. You can select Map Rules or Action Sets to view the traffic matching the selected rule on the graph in the quick view.
- You can also view the statistics of the monitoring session deployed in the individual V Series Nodes. To view the statistics of the individual V Series Node, select the name of the V Series Node for which you want to view the statistics from the V Series Node drop-down menu on the top left-corner of the Monitoring Session Statistics page.
- Hover over the V Series Node drop-down to view the number of the applications, end points, and other application environments configured for a particular V Series Node. It also displays the error message related to configuration for the particular V Series Node.



Raw EndPoint (REP) is a part of the monitoring session but can also receive the bypassed traffic that is not filtered by the map, so it is recording more packets than expected. For example, if the map has a rule as IPv4, but the REP can receive the


bypassed (non-ipv4) traffic. The recorded number of packets from the V Series node can be more than expected.

Visualize the Network Topology

You can have multiple connections in GigaVUE-FM. Each connection can have multiple monitoring sessions configured within them. You can select the connection and the monitoring session to view the selected subnets and instances in the topology view.

To view the topology diagram in GigaVUE-FM:

1. On the Monitoring Session page, select **Topology** tab. The Topology page appears.
2. Select a monitoring domain from the **Select monitoring domain...** list.
3. Select a connection from the **Select monitoring session...** list.
4. Select a monitoring session from the **Select connection...** list. The topology view of the monitored subnets and instances in the selected session are displayed.

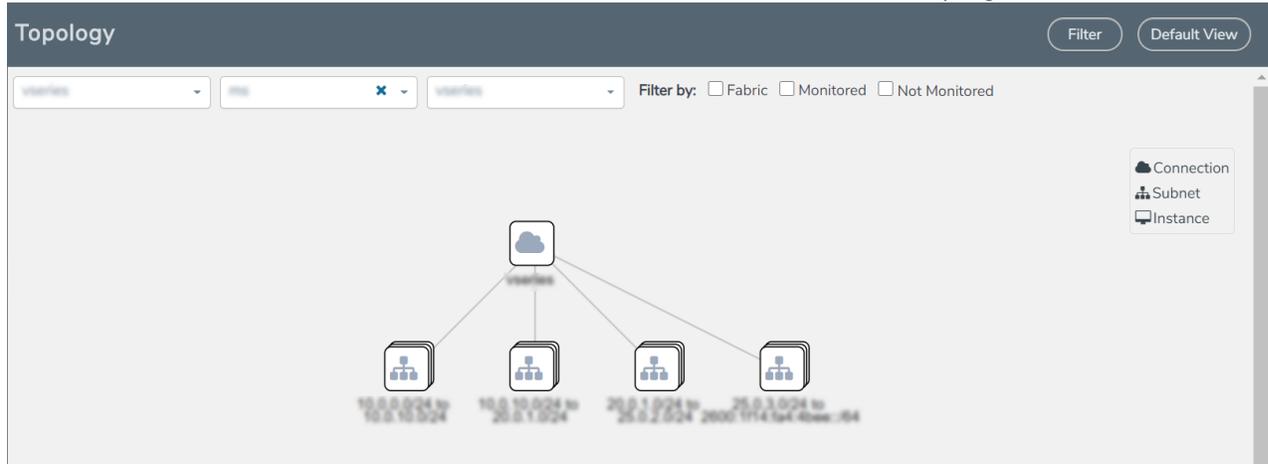

5. (Optional) Hover over or click the subnet or VM Group icons to view the subnets or instances present within the group.

In the topology page, you can also do the following:

- Use the **Filter** button to filter the instances based on the VM name, VM IP, Subnet ID, or Subnet IP, and view the topology based on the search results.
- Use the **Default View** button to view the topology diagram based on the source interfaces of the monitoring instances.
- Use the arrows at the right-bottom corner to move the topology page up, down, left, or right. Click the **Fit-to-Width** icon to fit the topology diagram according to the width of the page.
- Use **+** or **-** icons to zoom in and zoom out the topology view.

Upgrade GigaVUE V Series Node in GigaVUE-FM for ESXi

To upgrade V Series Node in GigaVUE-FM:



Before upgrading the V Series Nodes, ensure the following:

- All the current V Series nodes are of same version.
- Latest V Series Node OVA image must be uploaded to GigaVUE-FM. Refer to [Step 1: Upload V Series node Image into GigaVUE-FM](#) for detailed information.

1. Go to **Inventory > VIRTUAL > VMware V Series ESXi**, and then click **Monitoring Domain**. The **Monitoring Domain** page appears.
2. Select a deployed monitoring domain and click **Actions**. From the drop-down list, select **Upgrade Fabric**, the **V Series Node Upgrade** dialog box appears.
The V Series Node Upgrade dialog box displays the current version of the V Series Node image. Select the latest V Series Node OVA image from the Image drop-down list. If you want to modify the form factor (instance) size, click the **Change Form Factors** check box. When you are upgrading more than one V Series node, you can modify the form factors of each V Series nodes individually using the drop-down list.

V Series Node Upgrade

Current Version 2.3.0

Image

Select an Image...

Change Form Factors

V Series Node	Form Factor
VSeries-vp-ind-node-10-115-41-76	Medium, 4vCPU, 8GB RAM, 8GB Disk ▾
VSeries-vp-ind-node-10-115-41-77	Small, 2vCPU, 4GB RAM, 8GB Disk ▾

Upgrade

Cancel

NOTE: All the V Series node with Static IP address retain their old IP address even after the upgrade.

3. Enter the required information for all the available V Series nodes and click **Upgrade** to launch the V Series Node upgrade.

NOTE: Both the new and the current V Series nodes appear in the same Monitoring Domain until the new nodes replaces the current and the status changes to **Ok**.

You can view the status of the upgrade in the Status column of the ESXi **Monitoring Domain** page.

Monitoring Domain	Connection	Name	Management IP	Type	Version	Status
iron-md						Upgrade in progress
						Connected
		VSeries-up-demo-static-10-115-41-77	10.115.44.232	V Series Node	2.3.1	upgrading
		VSeries-up-demo-static-10-115-41-76	10.115.44.234	V Series Node	2.3.1	upgrading
		VSeries-up-demo-static-10-115-41-77-upgrade		V Series Node	2.3.2	launching
		VSeries-up-demo-static-10-115-41-76-upgrade		V Series Node	2.3.2	launching

To view the detailed upgrade status click **Upgrade in progress** or **Upgrade successful**, the **V Series Node Upgrade Status** dialog box appears.

V Series Node Upgrade Status

Monitoring Domain:

Summary

Success: 0 Failed: 0 In Progress: 2 Total: 2

Node Statuses

Node	Status
VSeries-up-demo-static-10-115-41-77-upgrade	launching
VSeries-up-demo-static-10-115-41-76-upgrade	launching

Close

- Click **Clear** to delete the monitoring domain upgrade status history of successfully upgraded nodes.
- If the V Series Node Upgrade failed or interrupted for any reason, under **Actions** drop-down click **Continue Fabric Upgrade** to continue the V Series Node upgrade process.

NOTE: You cannot modify the form factor or the V Series image when you are using the **Continue Fabric Upgrade** option. GigaVUE-FM uses the same values defined in the initial fabric upgrade configuration.

Configure VMware Settings

This section provides information on how to configure the maximum number of connections, refresh intervals for instance and non-instance inventory, and maximum batch size for monitoring session updates.

To configure the VMware Settings:

Go to **Inventory > VIRTUAL > VMware V Series ESXi**, and then click **Settings > Advanced Settings** to edit the VMware V Series ESXi settings.

Advanced Settings

Maximum number of vCenter connections allowed	20
Refresh interval for VM target selection inventory (secs)	300
Refresh interval for fabric deployment inventory (secs)	1800

Refer to the following table for details:

Settings	Description
Maximum number of vCenter connections allowed	Specifies the maximum number of vCenter connections you can establish in GigaVUE-FM
Refresh interval for VM target selection inventory (secs)	Specifies the frequency for updating the state of target VMs in VMware vCenter
Refresh interval for fabric deployment inventory (secs)	Specifies the frequency for updating the state of GigaVUE-FM fabrics deployed in VMware vCenter

Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware ESXi

To configure the Application Intelligence solution on the GigaVUE V Series Nodes, create a virtual environment with the required connections. After creating the connections, configure the sources and the required destinations for the traffic flow. Refer the following topics for step by step instructions on how to configure Application Intelligence solution for GigaVUE V Series Nodes:

- [Configure Environment](#)
- [Connect to VMware ESXi](#)
- [Create Source Selectors](#)
- [Create Tunnel Specifications](#)
- [Configure Application Intelligence Session](#)



Important Notes:

- You can deploy multiple GigaVUE V Series Nodes in a connection.
- You can use **V Series Node API Proxy Server** (VPS) to scale and manage multiple V Series Nodes. Refer to the GigaVUE-FM REST API Reference in GigaVUE-FM User's Guide for detailed information.



- You can use tool templates while creating an Application Metadata Intelligence session. To create a custom tool template for GigaVUE V Series Node, signature is required from the node. Refer to the Tool Templates section in the *GigaVUE Fabric Management Guide* for more detailed information.
- To delete a GigaVUE V Series Node deployed in a Application Intelligence solution, you must delete the resources in the following order:
 1. Delete the Application Intelligence solution.
 2. Delete the GigaVUE V series Node and Connection.
 3. Delete the Environment.

Configure Environment


The Environments page allows you to create the following:

- **Environments:** The physical or the virtual environment in which the Application Intelligence solution is to be deployed.
- **Connections:** Connection between GigaVUE-FM and the cloud platform.

Create Environment

To configure the Environment:

1. Select **Inventory > Resources > Environments**.
2. On the **Environments** page, on the **Environments** tab, click **Create**.

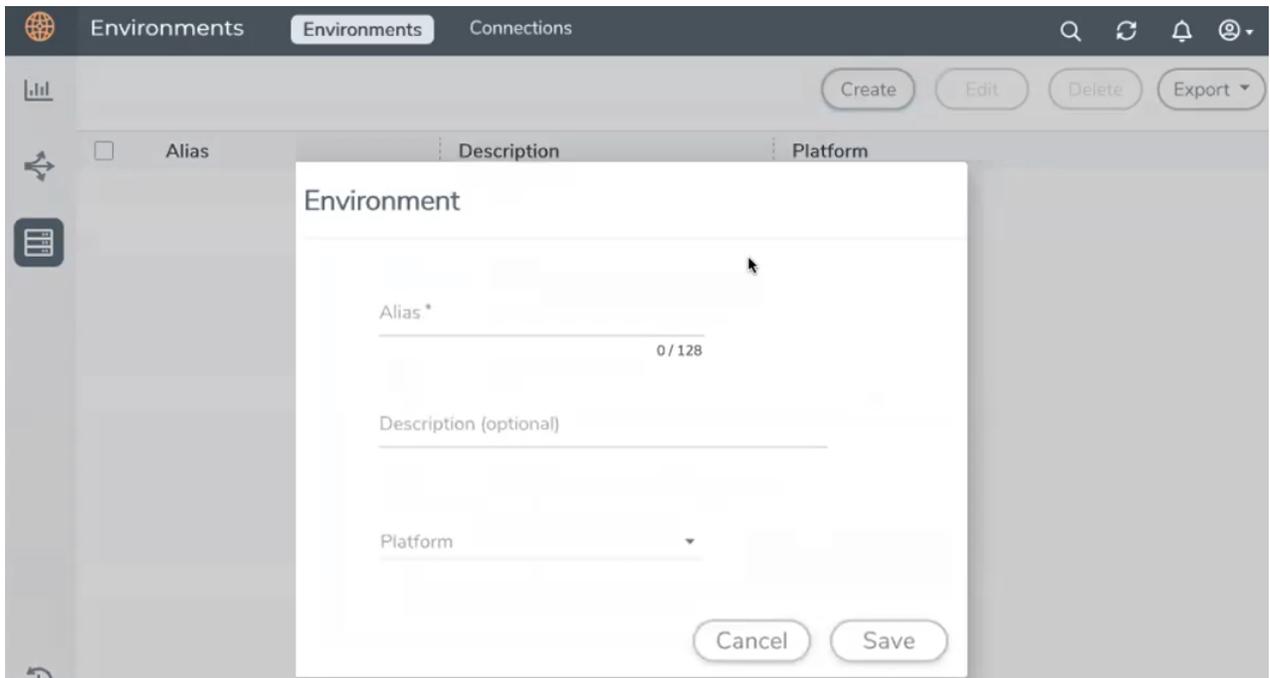

3. Select or enter the following details:

Field	Description
Alias	Alias name used to identify the Environment.
Description	Brief description about the Environment.
Platform	Select the cloud platform.

4. Click **Save**. The environment is added to the list view.

Use the following buttons to manage your environment:

Button	Description
Delete	Use to delete an Environment.
Edit	Use to edit the details in an Environment.
Export	Export the details from the Environment page in an XLS or CSV file.


Connect to VMware ESXi

After creating an environment create a connection between the VMware ESXi and GigaVUE-FM. Refer to the following step given below for detailed information on how to create a new connection.

Create Connection

To create a new Connection:

1. Select **Inventory > Resources > Environment**.
2. On the **Environments** page, on the **Connections** tab, click **Create**.

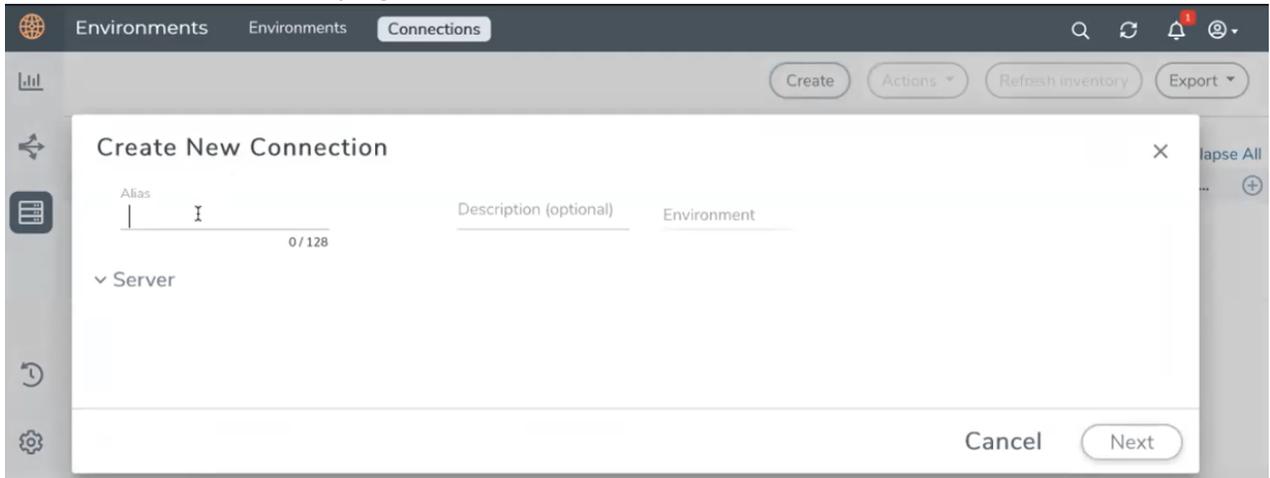

3. The **Create New Connection** dialog box opens. Enter the details as mentioned in the below section.

NOTE: When creating a connection in the connections page, the corresponding monitoring domain created for internal use in GigaVUE-FM will not be displayed in the Monitoring Domain list page.

To establish a connection to the VMware ESXi, select or enter the following details:

Field	Description
Alias	Alias name used to identify the connection.
Description	Brief description about the connection.
Environment	Select the required environment. Refer to Connect to VMware ESXi
Server	The IP address of the virtual server.
vCenterUserName	Valid user name
vCenterPassword	Password for the user

After the connection is established, select or enter the following details in the fabric launch configuration page and click **Next**:

NOTE: During V Series Node upgrade, the old node gets deleted and the new V Series Node is deployed. However, when the node upgrade fails due to deployment issues,

the old node gets deleted and the new node is not deployed on the **Connection** page. This may led to loss of traffic. To avoid this you will have to redeploy the nodes again.

Field	Description
Datacenter	vCenter Data Center with the ESXi hosts to be provisioned with V Series nodes
Cluster	The Cluster on which the V Series nodes are to be deployed. From the drop-down list, select the required cluster or click All to select all the available clusters.
V Series Node Image	Web Server URL of the directory where V Series node ova files are available. NOTE: Before VMware Configuration, the V Series OVA files must be extracted as OVF files and placed in the same directory.
Form Factor	Instance size of the V Series node. Refer Prerequisites for Integrating V Series Nodes with ESXi for more information.
Hosts	Select the ESXi host for V Series deployment. Click Select All or Select None to select or unselect multiple hosts. NOTE: You can configure multiple hosts in a single connection (GigaVUE V Series Node). Select the Datastore and enter the required values. Click Apply .

Field	Description
V Series Node Name	Name of the V Series Node
Datastore	Network datastore of the selected host
Management Network	Management network for V Series nodes
IP Type	IP type, can be IPv4 or IPv6.
Tunnel Network	Tunnel Network for the V Series nodes
IP Type	IP type of the tunnel, can be IPv4 or IPv6.
Tunnel Gateway IP	IP address of the Tunnel Gateway
Netmask Length	CIDR value of the Tunnel
User Password: (gigamon)	SSH Password of the V Series node
Form Factor	Instance size of the V Series node
IPv6	Use the toggle option to configure IPv6 tunnels. Provide the IPv6 prefix length value. The value must be greater than zero. NOTE: Ensure to enable this option before deploying the solution with IPv6 address as tool address.

Use the following buttons to manage your VMware ESXi connections :

Configure V Series Node on ESXi

Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware ESXi

Button	Description
Create	Use to create new connection.
Actions	<p>Provides the following options:</p> <ul style="list-style-type: none"> • Edit Connection - Use to edit a connection. • Deploy Node - Use to deploy a node. <div style="border: 1px solid #ccc; padding: 5px; margin: 10px 0;"> <p>NOTE: You cannot add new V Series Nodes to a Connection which already has nodes. To add new V Series Nodes you will have to delete the existing V Series Node and the related Monitoring Session, and deploy all the V Series Nodes again.</p> </div> <ul style="list-style-type: none"> • Delete Connection - Use to delete a connection. • Delete Node - Use to delete a node. • Force Delete - This option is enabled when an upgrade fails due to infrastructure issues. Use this option to force delete the connection. • Upgrade Fabric - Use to upgrade fabric components. • Continue Upgrade Fabric - If the upgrade is failed or interrupted for any reason, use this option to continue the upgrade process.
Refresh Inventory	Use to refresh the selected connection.
Export	Use to export the details from the Connections page into an XLS or a CSV file.

To create Application Intelligence sessions, refer to [Create an Application Intelligence Session in Virtual Environment](#).

Create Source Selectors

When setting up a traffic flow, it is important to define the selection criteria for the source of traffic. Use the Source Selectors page for configuring the source of traffic to the GigaVUE V Series nodes.

NOTE: When deploying the Application Intelligence using Source Selector, if the GigaVUE V Series Node is down, you will not be able to view the Selected Targets and G-vTAP Agents.

To configure the Source Selectors:

1. Select **Inventory > Resources > Source Selectors**.
2. On the **Source Selectors** page, on the **VM** tab, click **Create**. The **Create Source Selector** wizard appears.

Create Source Selector ✕

Alias 0 / 128

Description 0 / 128

Filters

Criteria 1 ⊖

Filter

Operator

+ -

+ New Criteria

Cancel
Save

3. Enter or select the required information:

Field	Description
Alias	Name of the source
Description	Description of the source
Filters	You can create a filter template from the Filters option
Criteria 1	Criteria to filter the traffic source. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;">NOTE: You can create multiple criteria.</div>
Filter	The criteria based on which the traffic is filtered. Select from the list of available filters. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;">NOTE: Ensure that the registered traffic agents match the filter criteria.</div>
Operator	Select the required operator based on the filter selected. Options are: <ul style="list-style-type: none"> Starts with Ends with excludes equals between
Values	The values for the filter.

4. Click Save to save the source selector.



Note: You can create multiple filter criteria. Within each criterion, you can configure multiple filters.

- If you have configured multiple filters in a criterion, then the traffic will be filtered only if all the filter rules are true.
- If you have configured multiple criteria, then the traffic will be filtered even if one of the criteria is true.

Create Tunnel Specifications

A tunnel endpoint can be created using a standard L2GRE, VXLAN, or ERSPAN tunnel. The tunnel can be an ingress tunnel or an egress tunnel.

NOTE: VXLAN is the only supported tunnel type for Azure.

To configure the tunnels:

1. Select **Inventory > Resources > Tunnel Specifications**.
2. On the **Tunnel Specifications** page, navigate to **VM** tab and click **Create**. The Create Tunnel Specification wizard appears.

Create tunnel specification



Alias Description

Alias * Description (optional) Tunnel type

Cancel

Save

3. Enter or select the following information:

Field	Description
Alias	<p>The name of the tunnel endpoint.</p> <p>NOTE: Do not enter spaces in the alias name.</p>
Description	The description of the tunnel endpoint.
Tunnel Type	<p>The type of the tunnel.</p> <p>Select ERSPAN, or L2GRE, or VXLAN to create a tunnel.</p> <p>Do not select UDPGRE tunnel type.</p> <p>NOTE: VXLAN is the only supported tunnel type for Azure.</p>
Traffic Direction	<p>The direction of the traffic flowing through the V Series node.</p> <ul style="list-style-type: none"> Choose In (Decapsulation) for creating an Ingress tunnel, Tunnel Spec for the Source should always have the Traffic Direction as IN, signifying an ingress tunnel. Enter values for the Key. Choose Out (Encapsulation) for creating an Egress tunnel from the V Series node to the destination endpoint. Select or enter values for MTU, Time to Live, DSCP, PREC, Flow Label, and Key. <p> ERSPAN, L2GRE, and VXLAN are the supported Ingress tunnel types. You can configure Tunnel Endpoint as your first level entity in Monitoring Session.</p> <ul style="list-style-type: none"> L2GRE and VXLAN are the supported Egress tunnel types. For Azure connection, VXLAN is the supported Ingress and Egress tunnel type.
IP Version	The version of the Internet Protocol. Select IPv4 or IPv6.
Remote Tunnel IP	<p>For Ingress tunnel, Remote Tunnel IP is the IP address of the tunnel source.</p> <p>For Egress tunnel, Remote Tunnel IP is the IP address of the tunnel destination endpoint.</p>

4. Click **Save** to save the configuration.

User Defined Application

This feature gives you the ability to classify applications not classified automatically by the DPI engine. This allows unclassified TCP, UDP, HTTP, and HTTPS applications to be identified and named with the help of user defined application signatures.

To configure User Defined Application signatures :

Step Number	Task	Refer the following
1	Create rules under User Defined Application Section	Create rules under User Defined Application
2	Configure Application Intelligence Session	For Physical: Application Intelligence Session For Virtual: Configure Application Intelligence Session
3	Monitor User Defined Application	View the Application Intelligence Dashboard

Create Rules under User Defined Application

1. Click **Inventory**.
2. Click **User Defined Applications** to create rules based on a set of **Supported Protocols and Attributes**. For information on **Supported protocols and Attributes** refer **User Defined Application** topic. This helps the physical or virtual node to classify the traffic based on the protocols and attributes selected in the created rule.
3. Click **New** in the **User Defined Applications** screen to create a new rule.
4. Enter **Application Name**.
5. Enter **Priority**. The value must be between 1 and 120.
Note: The least value will have the highest priority.
6. In the created rule:
 - a. Choose the **Protocol** from the list of protocols.
 - b. Choose the **Attributes** from the list of attributes.
 - c. Choose the **Values** from the list of values.

7. Click **Apply**. The rule is now created. For information on the limitations for creating rules refer Configuration Limitations section.
8. Click the application listed under the **Applications** column.
9. Click the **Rule** tab.
10. Select a rule to view its protocol details.

Supported Protocols and Attributes

The DPI engine will match the rules defined based on the following protocols and attributes within the first 500 bytes of a packet payload.

For supported Regexp patterns, refer [Supported RegExp Syntax](#)

Protocol	Attributes	Attribute Labels	Description	Direction	Supported Data Type	Example Value
http	cts-uri	Request URI	Partially Normalized URL (path + request)	Client to Server Only	REGEXP	/fupload/(create_file new_slice upload_slice)\?.*upload_token=.*
	cts-server	Server Name	Web Server Name from URI or Host	Client to Server Only	REGEXP	(.*\.)?gigamon\.com
	mime_type	MIME Type	Content type of Request or the Web page	Both, Client to Server or Server to Client	REGEXP	http
	cts-user_agent	User Agent	Software / Browser used for request	Client to Server Only	REGEXP	mozilla

	cts-referer	Referer URI	Source address where client got the URI	Client to Server Only	REGEXP	http://gigamon.com/
	stc-server_agent	Server Agent	Software used for the server	Server to Client Only	REGEXP	NWS_TCloud_PX
	stc-location	Redirect Location	Destination address where the client is redirected to	Server to Client Only	REGEXP	.*\football\.*
	cts-cookie	Cookie (Raw)	Raw value of the HTTP Cookie header line	Client to Server Only	REGEXP	.*tEstCoOkie.*
	content	Content	Message body content	Both, Client to Server or Server to Client	REGEXP	.*GIGAMON.* mindata = 206 Refer Mindata
ssl	common_name	Domain Name	Domain name from Client Hello message or the certificate		REGEXP	(.*\.)?gigamon\.com

	stc-subject_alt_name	Subject Alt Name (s)	List of host names which belong to the same certificate	Server to Client Only	REGEXP	(.*\.)?gigamon\.com
rtmp	cts-page_url	Page URL	URL of the webpage where the audio/video content is streamed	Client to Server Only	REGEXP	http://www.music.tv/recorded/1234567
tcp	stream	Payload Data	Data payload for a packet, excluding the header.		REGEXP	.*GIGAMON.* mindata = 70 Refer Mindata
	port	Server Port	Server (listen) port number		UINT16 RANGE as REGEXP String	80-4350
udp	stream	Payload Data	Data payload for a packet, excluding the header		REGEXP	.*GIGAMON.* mindata = 100 Refer Mindata
	port	Server	Server		UINT16	80-4350

Configure V Series Node on ESXi

Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware ESXi

		Port	(listen) port number		RANGE as REGEXP String	
sip	user_agent	User Agent	Software used	Both, Client to Server or Server to Client	REGEXP	GVUE-release 6.2.0
icmp	code	Message Code	Code of the ICMP message	Both, Client to Server or Server to Client	UINT8 as REGEXP String	200
	typeval	Message Type	Type of ICMP message	Both, Client to Server or Server to Client	UINT8 as REGEXP String	10
ip	address	Server IP Addresses	IP address of the server		IPV4 as REGEXP String	62.132.12.30\24
	dscp	DSCP Value	DSCP from Differentiated Service (DS) Field in IP		UINT8 as REGEXP String	33

			header			
	resolv_name	DNS Name	Server's DNS name		REGEXP	gigamon.com
ipv6	address	Server IP Address	IP address of the server		IPV6 as REGEXP String	2001:0:9d38:6ab8:307b:16a4:9c66:5f4 2001:0:9d38::9c66:5f4/64
	dscp	DSCP Value	DSCP from Differentiated Service (DS) Field in IP header		UINT8 as REGEXP String	43

Mindata

The mindata value is the number of payload bytes to buffer and match a given pattern. You can configure mindata value for HTTP content, TCP stream, and UDP stream. The buffer size is calculated from the start of the payload and the default buffer size is different for each protocol (HTTP - 206, TCP - 67, and UDP - 48.)

For example, for pattern `".*TEST.*"` that may be present within the first 67 bytes of TCP payload, you can specify the mindata value as 4 (which is the length of the input string) or as 67 (which is the default buffer size of TCP payload). In case, the pattern is present in between 65 to 68 bytes of the payload and the mindata is specified as 4 or 67, it will not match. For this case, you must specify the mindata value as 68.

Supported RegExp Syntax

Pattern	Description
.	Matches any symbol
*	Searches for 0 or more occurrences of the symbol or character set that precedes it
+	Searches for 1 or more occurrences of the symbol or character set that precedes it

?	Searches for 0 or 1 occurrence of the symbol or character set that precedes it
()	Groups a series of expressions together
[]	Matches any value included within the bracket at its current position Example: [Dd]ay matches Day and day
 [<start>-<end>]	Separates values contained in (). Searches for any one of the values that it separates. Example: The following expression matches dog or cat: (dog cat). Matches any value contained within the defined range (a hyphen indicates the range). You can mix character class and a hexadecimal range Example: [AaBbCcDdEeFf0-9]
\O <octal_ number>	Matches for a direct binary with octal input
\x<hexadecimal- number>\x	Matches for a direct binary with hexadecimal input
\[<character- set>\]	Matches a character set while ignoring case. WARNING: Not performance friendly

Limitations

- The maximum number of user defined application that can be configured is 120 per FM. These applications can be spread across one or more application intelligence sessions.
- The maximum number of rules that can be created per application is 8.
- The maximum number of protocols that can be configured per rule is 3.

Configure Application Intelligence Session

Application Visualization (earlier known as Application Monitoring) gathers the application statistics, and sends this information to GigaVUE-FM, which acts as an application monitor. The monitoring reports are sent to GigaVUE-FM through the destination port 2056. The

application statistics appear as an array of monitoring reports that provide application-usage data in an easy-to-read graphical interface. This provides you with greater insight and control over how your network is being used and what applications are utilizing the most resources. To perform Application Monitoring, you must create the required application intelligence sessions on the nodes managed by GigaVUE-FM.

Prerequisites

- The environment on which the Application Intelligence solution is to be deployed must already be created and the nodes must be deployed on it.
- In virtual environment, the destination tunnels for the Application Filtering Intelligence Map must already be created.

NOTE: For Application Visualization and Application Metadata Intelligence, the destination(s) are defined internally by the solution.

Create an Application Intelligence Session in Virtual Environment

Complete the following prerequisites before creating an Application Intelligence solution in the virtual environment:

To create an Application Intelligence Session:

1. On the left navigation pane, select **Traffic > Solutions > Application Intelligence**.
2. Click **Create New**. The **Create Application Intelligence Session** page appears.

3. In the **Basic Info** section, enter the name and description, and in the Environment select **Virtual** for the session to be created:
 - Virtual- connects to the specific environment.
4. In the Environment section, select the **Environment Name**, and the **Connection Name**. To create an Environment and connection, refer to [Configure Environment](#).
5. In the **Configurations** section, complete the following:

- a. Select an **Export Interval** during which you want the Application Intelligence session to generate the reports for application visualization. The valid range is 60–900 seconds.
- b. Select the required interface. By default, **Management Interface** is enabled. To export the data through tunnel interface, uncheck the Management Interface check box.
- c. Enter a value for the **Scale Unit**. The scale unit represents the number of flows supported by the application. If the scale unit value is 1, the maximum active flow limit will be 100k.

Refer to the following table for the maximum scale unit supported for VMware, AWS, and Azure platforms.

NOTE: Scale Unit is not applicable for the OpenStack platform.

Cloud Platform	Instance Size	Maximum Scale Unit
VMware	Large (8 vCPU and 16 GB RAM)	3
	Medium (4 vCPU and 8 GB RAM)	1
AWS	Large (c5n.2xlarge)	4
	Medium (t3a.xlarge)	3
Azure	Large (Standard_D8s_V4)	9
	Medium (Standard_D4s_v4)	3

6. In the **Source Traffic** section, select anyone of the following:
 - **Source Selector**- Select the source from the drop-down list box. To create new source, select **New Source Selector** and add the filters. For more information on creating a New Source Selector, refer to [Create Source Selectors](#).

NOTE: You cannot configure Source Selectors when you deploy the GigaVUE V Series Nodes using the Third Party Orchestration in VMware ESXi host.

- **Tunnel Specification**- Select the tunnel from the drop-down list box. To create new tunnel, select **New Source Tunnel Spec** and add the details for the tunnel. For more information on creating a new tunnel, refer to [Create Tunnel Specifications](#).

NOTE: Select the ens192 interface for the Tunnel Specifications from the drop-down menu when using third party orchestration.

- **Raw End Point**- Select the Raw End Point Interface from the drop-down menu which will trap the traffic for application monitoring.

NOTE: This field is applicable only when you deploy your GigaVUE V Series Nodes using third party orchestration in VMware ESXi Host, Nutanix and Google Cloud Platform.



- Tunnel Specification for the source must always be configured with Traffic Direction as IN, to indicate that it is an ingress tunnel.
- For Azure Connection, VXLAN is the only supported Tunnel Type.

7. Click **Save**. The session created is added in the list view.
8. In the **User Defined Applications** section, select the template from the list. For information on **Supported protocols and Attributes** and **Limitations** refer **User Defined Application** topic.

The total applications participating in the network traffic are displayed in the Application Intelligence Dashboard. For more information about the dashboard, refer to the [View the Application Intelligence Dashboard](#).

Select the session from the Application Intelligence Sessions pane and click on the  icon and select **View Details** from the drop-down menu, to view the deployed G-vTAP Agents, their status and more information about source selectors, selected target.

If the session configuration is unsuccessful, troubleshoot the error notified (refer to [View the Health Status of a Solution](#)). Click the **Reapply all pending solutions** button  in the dashboard to redeploy the configuration.

NOTE: GigaVUE-FM takes few minutes to display the application statistics.

NOTE: The option **Reapply all pending solutions** is applicable for physical solution only.

When the Application Intelligence solution is in suspended state, you cannot delete the session. You can click on the  icon and select **View Details** from the drop-down menu, to view the details.


You can also filter the traffic based on the applications. For more information, see [Create Application Filtering Intelligence](#).

Configure V Series Node on NSX-T

This section provides an overview of the V Series fabric node deployment on the VMware NSX-T platforms and describes the procedure for setting up the traffic monitoring sessions using the V Series fabric nodes. The V Series fabric nodes support traffic visibility on the NSX-T NVDS switch.

GigaVUE-FM creates, manages and deletes the V Series fabric nodes in the NSX-T on the configuration information provided by the user. GigaVUE-FM can communicate directly with the V series fabric nodes.

The following diagram provides a high-level overview of the deployment:

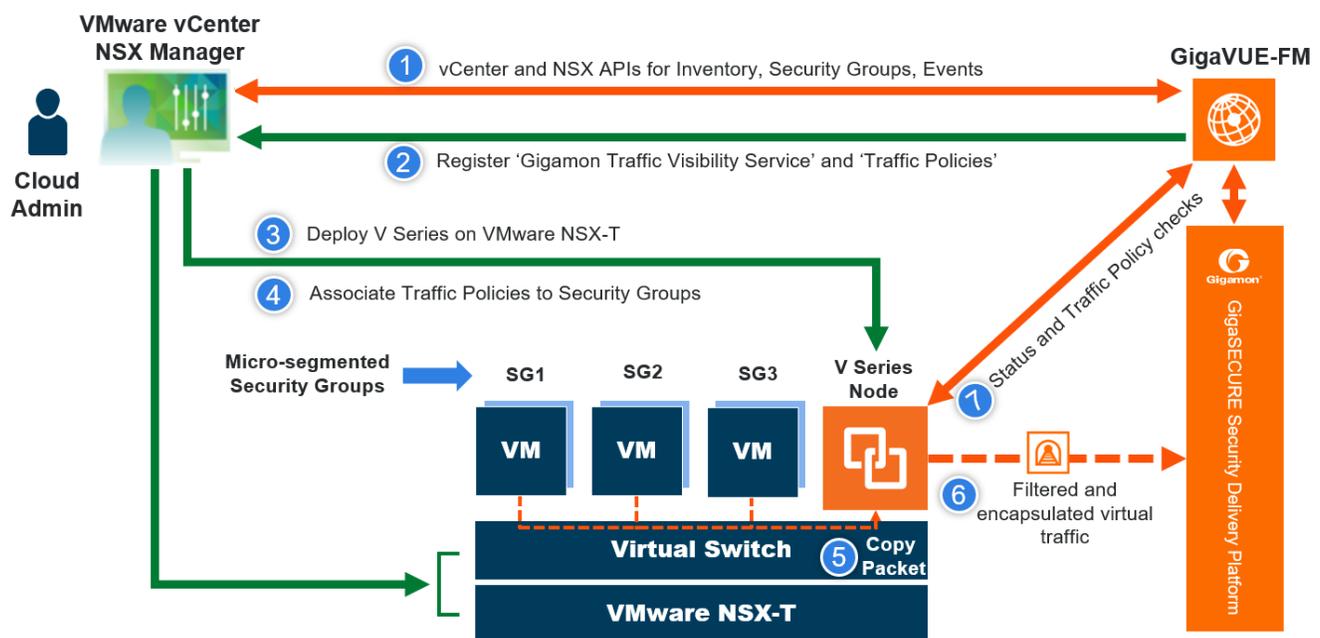

NOTE: If a V Series Node is restarted, then the existing flows that is received by that V Series node will not be forwarded to the other available V Series Nodes (if any). However, the new flows will be forwarded to any available V Series Node.

The chapter includes the following major sections:

- Prerequisites for Integrating V Series Nodes with NSX-T
- Integrate V Series nodes with NSX-T

NOTE: These steps assume that VMware NSX-T is installed and configured.

NOTE: When VMware NSX-T is configured in a cluster on multiple hosts, ensure all the hosts are in a connected state. Even if one of the hosts is in a disconnected state then V Series node host-based deployment will be unsuccessful.

Refer to the following Gigamon Validated Designs for more detailed information:

- [Deploying GigaVUE Cloud Suite for VMware NSX-T 3.1.2 using V Series](#)
- [Deploying GigaVUE Cloud Suite for VMware NSX-T using V Series](#)
- [Deploying GigaVUE Cloud Suite for VMware NSX-T 3.0 using V Series](#)
- [Deploying GigaVUE Cloud Suite for VMware NSX-T 2.5.1 using V Series](#)

Prerequisites for Integrating V Series Nodes with NSX-T

The following are the prerequisites for integrating V Series nodes with NSX-T:

- VMware vCenter Standard Version must be 7.0 with the required privileges. Refer to [Required VMware Virtual Center Privileges](#) for more information on vCenter privileges.
- Before deploying V Series nodes through GigaVUE-FM, Service segment must be created in the NSX-T manager.
- NSX-T version must be 3.2.0 or 4.0.0.
- ESXi hosts must have the minimum vCPU and memory resources.
- GigaVUE-FM version must be 5.10.01 or later.
- V Series 2 device OVA image file.
- Port number 8889 must be available for GigaVUE-FM to access V Series nodes.

NOTE: GigaVUE-FM supports service insertion only for overlay transport zone associated with the E-W traffic. Service insertion is not supported for VLAN transport zone associated with the N-S traffic or when the VMware NSX-T manager in federation mode.

NOTE: You cannot have both GigaVUE-VM and V Series node visibility solutions deployed on the same vCenter.

The V Series 2 Node OVA image files can be downloaded from [Gigamon Customer Portal](#).

Network Firewall Requirements

Following are the Network Firewall Requirements for V Series 2 node deployment.

Source	Destination	Source Port	Destination Port	Protocol	Service	Purpose
GigaVUE-FM	ESXi hosts	Any (1024-65535)	443	TCP	https	Allows GigaVUE-FM to communicate with vCenter, NSX-T and all ESXi hosts.
	NSX-T Manager					
	vCenter					
GigaVUE FM	V Series Nodes	Any (1024-65535)	8889	TCP	Custom API	Allows GigaVUE-FM to communicate with V Series node
Administrator	GigaVUE-FM	Any (1024-65535)	443	TCP	https	Management connection to GigaVUE-FM
			22		ssh	
GigaVUE-FM	V Series Nodes	Any (1024-65535)	5671	TCP	Custom TCP	Allows GigaVUE V Series 2 Nodes to send traffic health updates to GigaVUE-FM
Remote Source	V Series Nodes	Custom Port (VXLAN and UDPGRE),N/A for GRE	4789	UDP	VXLAN	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes (Applicable for Tunnel Ingress option only)
			N/A	IP 47	GRE	
			4754	UDP	UDPGRE	
V Series Nodes	Tool/ HC Series instance	Custom Port (VXLAN),N/A for GRE	4789	UDP	VXLAN	Allows V Series node to communicate and tunnel traffic to the Tool
			N/A	IP 47	GRE	
V Series Nodes	Tool/ HC Series instance	N/A	N/A	ICMP	echo Request	Allows V Series node to health check tunnel destination traffic (Optional)
					echo Response	
GigaVUE-FM	V Series Nodes	Any (1024-65535)	5671	TCP	Custom TCP	Allows GigaVUE V

Configure V Series Node on NSX-T

Prerequisites for Integrating V Series Nodes with NSX-T

						Series 2 Nodes to send traffic health updates to GigaVUE-FM
GigaVUE-FM	External Image Server URL	Any (1024-65535)	Custom port on web Server	TCP	http	Access to image server to image lookup and checks, and downloading the image
NSX-T Manager						
vCenter						

Recommended Form Factor (Instance Types)

The form factor (instance type) size of the V Series is configured on the OVF file and packaged as part of the OVA image file. The following table lists the available form factors and sizes based on memory and the number of vCPUs for a single V series node. Instance sizes can be different for V Series nodes in different ESXi hosts and the default size is Small.

Type	Memory	vCPU	Disk space
Small	4GB	2vCPU	8GB
Medium	8GB	4 vCPU	8GB
Large	16GB	8 vCPU	8GB

Required VMware Virtual Center Privileges

This section lists the minimum privileges required for the GigaVUE-FM user in Virtual Center.

The following table lists the minimum required permissions for GigaVUE-FM to manage the virtual center user with roles specified above.

Category	Required Privilege	Purpose
Virtual machine	Interaction <ul style="list-style-type: none"> ▪ Power on ▪ Power Off 	<ul style="list-style-type: none"> ● V Series Node Deployment ● Used to power on and power off GigaVUE V Series Node.

Default Login Credentials

You can login to the GigaVUE V Series Node, GigaVUE V Series proxy, and G-vTAP Controller by using the default credentials.

Product	Login credentials
GigaVUE V Series Node	You can login to the GigaVUE V Series Node by using ssh. The default username and password is: Username: gigamon Password: Gigamon123!

Integrate V Series nodes with NSX-T

To integrate V Series nodes with NSX-T, perform the following steps:

- [Step 1: Create Users in VMware vCenter and GigaVUE-FM](#)
- [Step 2: Upload V Series node Image into GigaVUE-FM](#)
- [Step 3: Connect to VMware vCenter in GigaVUE-FM](#)
- [Step 4: Create a Service Segment in NSX-T](#)
- [Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T](#)
- [Step 6: Configure Monitoring Sessions](#)
- [Step 7: Create NSX-T Group and Service Chain](#)

This section provides detailed information on the multiple ways in which GigaVUE Cloud Suite for VMware can be configured to provide visibility for physical and virtual traffic. Based on the method in which you want to deploy the GigaVUE V Series Nodes, there are two ways in which you can configure GigaVUE Cloud Suite for VMware (NSX-T). Refer to the [Prerequisites for Integrating V Series Nodes with NSX-T](#) section for prerequisites that are required to be configured. For more detailed information and the work flow refer the following topics:

- [Deploy GigaVUE V Series Nodes using GigaVUE-FM](#)

Deploy GigaVUE V Series Nodes using GigaVUE-FM

Step No	Task	Refer the following topics
1	Create users in GigaVUE-FM and VMware NSX-T for communication.	Step 1: Create Users in VMware vCenter and GigaVUE-FM
2	Upload the GigaVUE V Series Node Image (OVA File) into GigaVUE-FM	Step 2: Upload V Series node Image into GigaVUE-FM
3	Create a Monitoring Domain	Step 3: Connect to VMware vCenter in GigaVUE-FM
4	Create a service segment in NSX-T	Step 4: Create a Service Segment in NSX-T
5	Deploy GigaVUE V Series Nodes using GigaVUE-FM	Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T

Step No	Task	Refer the following topics
		Refer to <i>Deploy GigaVUE V Series Nodes using GigaVUE-FM</i> section
6	Create Monitoring session	Create a Monitoring Session
7	Create a Ingress and Egress Tunnels to tunnel traffic	Create Ingress and Egress Tunnel
8	Add Applications to the Monitoring Session	Add Applications to Monitoring Session
9	Deploy Monitoring Session	Deploy Monitoring Session
10	View Monitoring Session Statistics	View Monitoring Session Statistics

Deploy GigaVUE V Series Nodes using VMware NSX-T Manager

Step No	Task	Refer the following topics
1	Create users in GigaVUE-FM and VMware NSX-T for communication.	Step 1: Create Users in VMware vCenter and GigaVUE-FM
2	Upload the GigaVUE V Series Node Image (OVA File) into GigaVUE-FM	Step 2: Upload V Series node Image into GigaVUE-FM
3	Create a Monitoring Domain	Step 3: Connect to VMware vCenter in GigaVUE-FM
4	Create a service segment in NSX-T	Step 4: Create a Service Segment in NSX-T
5	Deploy GigaVUE V Series Nodes using GigaVUE-FM	Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T Refer to <i>Deploy GigaVUE V Series Nodes using VMware NSX-T Manager</i> section
6		Create a Monitoring Session
7	Create a Ingress and Egress Tunnels to tunnel traffic	Create Ingress and Egress Tunnel
8	Add Applications to the Monitoring Session	Add Applications to Monitoring Session
9	Deploy Monitoring Session	Deploy Monitoring Session
10	View Monitoring Session Statistics	View Monitoring Session Statistics

Step 1: Create Users in VMware vCenter and GigaVUE-FM

For VMware NSX-T and GigaVUE-FM to communicate, a GigaVUE-FM user must be created in NSX-T, and an NSX-T user must be created in GigaVUE-FM. Also, a GigaVUE-FM user must be created in NSX-T for GigaVUE-FM to perform NSX-T inventory functions. For NSX-T and GigaVUE Cloud Suite FM to communicate, users with the proper permissions must be created in both GigaVUE-FM and VMware NSX-T. Refer to [Required VMware Virtual Center Privileges](#) for more information on user roles and privileges.

NOTE: GigaVUE-FM connects to NSX-T Manager that supports TLSv1.0, TLSv1.1, and TLSv1.2.

Create GigaVUE-FM User in NSX-T manager

For GigaVUE-FM to communicate with NSX-T, you must first create a user with the minimum required role in NSX-T manager. This user will be a GigaVUE-FM user that the GigaVUE-FM uses to communicate with NSX-T Manager.

To create a user in NSX-T:

1. In NSX-T, navigate to **System > Settings > Users and Roles** and click **USERS** tab.
2. On the **USERS** tab, click **ADD** and then from the drop-down list,
 - for **NSX-T version 3.2.x**, select LDAP with the following Role combination:
 - NETX Partner Admin and Security Admin
 - for **NSX-T version 3.1.x**, select LDAP with one of the following Role combinations:
 - NETX Partner Admin and Security Operator
 - NETX Partner Admin and Network Operator

NOTE: When you deploy V Series Nodes using VMware NSX-T manager, you can select NETX Partner Admin alone as Role instead of these combinations.

- for **NSX-T version 2.x**, select Principal Identity with Role and select the Role as Enterprise Admin.
3. Click **Save** and then a GigaVUE-FM user is created in NSX-T.

Create VMware NSX-T user in GigaVUE-FM

For NSX-T to be able to communicate with GigaVUE-FM, you need to create a user in GigaVUE-FM who has the admin role. To create an NSX-T user in GigaVUE-FM, do the following:

1. From the left navigation pane, select **Settings > Authentication > User Management**. The **User Management** page appears.

- In the **Users** tab, click **Add**. The Create User page appears.

Create User
✕

Name	Name	
Username	Username	
Email	Email	
Password	Password	?
Confirm Password	Confirm Password	

Cancel
Save

- On the **Create User** page, specify the following for the new user:
 - In the **Name** field, enter the name of the call back user. For example, you can use NSX-T Manger Callback as the user name to help you associate this user with the NSX-T Manger.
 - In the **Username** field, enter a username for the user. For example, you can use nsxv to help you remember that this user is associated with NSX-T.
 - In the Email field, enter the email ID of the user.
 - In the **Password** field, enter the password for the user specified in the **Name** and **Username** fields.
 - In the **Confirm Password** field, reenter the password.

The FM Users NSX-T page should look like the example shown in the following figure when you are done.

- Click **Save**.


Refer [Deploying GigaVUE Cloud Suite for VMware vCenter using V Series](#) for more detailed information.

Step 2: Upload V Series node Image into GigaVUE-FM

You can upload your V Series Node image into GigaVUE-FM. This step is optional, follow the steps given below only if you wish to use GigaVUE-FM as an internal image server.

To upload the V Series image into GigaVUE-FM:

1. Go to **Inventory > VIRTUAL > VMware V Series NSX-T**, and then click **Settings > OVA Files**. The OVA Files page appears.

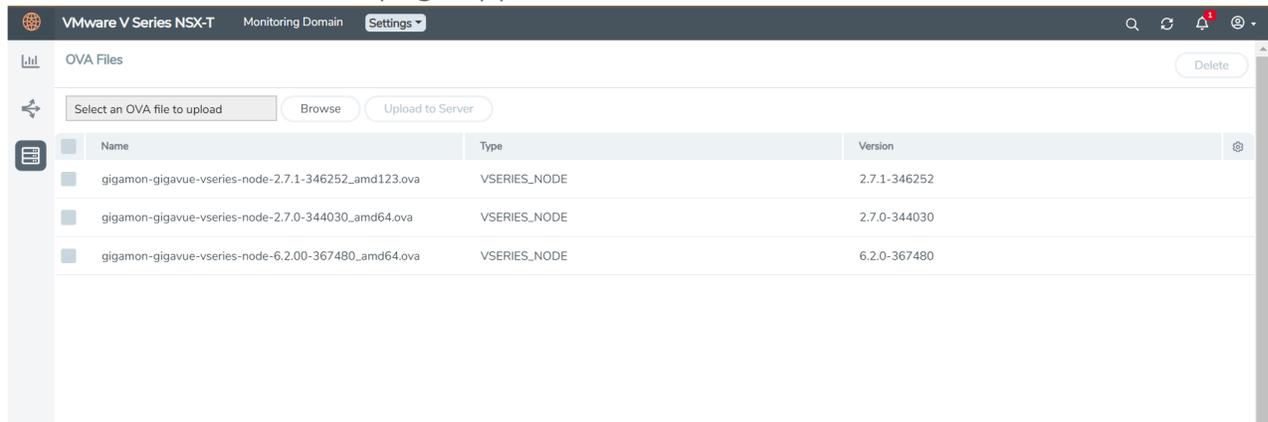

2. In the OVA Files page, click **Browse** to select the *gigamon-gigavue-vseries-node-x.x.x-0-xxxxxx.ova* file.
3. Click **Upload** to Server to upload the selected OVA image file to GigaVUE-FM server.

Step 3: Connect to VMware vCenter in GigaVUE-FM

This chapter describes how to create a monitoring domain for deploying V Series nodes in VMware NSX-T environment through GigaVUE-FM. You must establish a connection between GigaVUE-FM and your vCenter environment before you can perform the configuration steps for V Series node.

To configure VMware vCenter in GigaVUE-FM:

1. Go to **Inventory > VIRTUAL > VMware V Series NSX-T**, and then click **Monitoring Domain**. The **Monitoring Domain** page appears.
2. On the **Monitoring Domain** page, click on the **NSX-T** tab. Then, click **New**. The **VMware Configuration** page appears.

VMware Configuration

Monitoring Domain*	<input type="text" value="Enter a monitoring domain name"/>
Connection Alias*	<input type="text" value="Alias"/>
Virtual Center*	<input type="text" value="Virtual Center"/>
Username*	<input type="text" value="Username"/>
Password*	<input type="password" value="Password"/>
NSX-T Manager*	<input type="text" value="IP address or hostname"/>
NSX-T Username*	<input type="text" value="NSX-T Manager username"/>
NSX-T Password*	<input type="password" value="NSX-T Manager password"/>
FM Username*	<input type="text" value="FM username"/>
FM Password*	<input type="password" value="FM password"/>
Use External Image	<input type="checkbox"/> <input type="text" value="Select an image"/>
Use FM to Launch Fabric®	<input checked="" type="checkbox"/>

3. In the **VMware Configuration** page, enter or select the following details:

Field	Description
Monitoring Domain	Name of the monitoring domain
Connection Alias	Name of the connection
Virtual Center	IP address of the vCenter
Username	Username of the vCenter user with admin role privilege
Password	vCenter password used to connect to the vCenter
NSX-T Manager	IP address or Hostname of your VMware NSX-T.
NSX-T Username	Username of your NSX-T account.
NSX-T Password	Password of your NSX-T account. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> The NSX-T user account must have admin privileges. Each NSX-T manager can support a maximum of one monitoring domain. </div>
FM Username	Username of your GigaVUE-FM account
FM Password	Password of your GigaVUE-FM account.
Use External Image	<p>This toggle button allows you to choose between an external image or internal image. If you wish to use the Use External Image option, you use an external server to place all the OVA files and provide the URL of the web server. Else you can upload the OVA files to GigaVUE-FM and use it as an internal image server.</p> <ol style="list-style-type: none"> a. Yes to use an external image. To use an external image, enter the web server URL of the directory where V Series node OVA, VMDK, and OVF files are available. The Web Server URL must be in the following format: <i>http://<server-IP:port>/<path to where the OVF files are saved></i> and the port can be any valid number. The default port number is 80. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>NOTE: When using an external image, before VMware Configuration ensure all the contents of the OVA file are extracted and placed in the directory which represents the Image URL.</p> </div> b. No to use an internal image. To use an internal image, select the uploaded OVA files from the Select an image drop-down menu. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>NOTE: When using an internal image, before VMware Configuration save the OVA files to the dedicated directory.</p> </div>
Use FM to Launch Fabric	Enable this toggle button if you wish to deploy GigaVUE V Series Nodes using GigaVUE-FM.

4. Click **Save** and you are navigated to the **VMware NSX-T Fabric Deployment** page.

To edit a monitoring domain, select the deployed monitoring domain and click **Actions**. From the drop-down list, select **Edit**, the VMware configuration page appears.

NOTE: When editing a Monitoring domain that has nodes deployed, then the **Use External Image** toggle button is disabled. However, for a monitoring domain which does not have any nodes deployed the **Use External Image** toggle button is enabled.

Step 4: Create a Service Segment in NSX-T

Registering the NSX-T details on GigaVUE-FM is a prerequisite to create the service segment.

To create a service segment in VMware NSX-T:

1. On the NSX manager, go to **Security** and select **Network Introspection** from the left navigation pane. The **Network Introspection Settings** page opens. Select Service Segment from the top navigation bar. Then the Service Segment page appears.
2. On the Service Segment page, click **ADD SERVICE SEGMENT** and a new row appears to create a service segment.
3. Enter the name and map it to the overlay transport zone created for the VMs.
4. Click **Save**.

NOTE: Due to certificate validation requirement in NSX-T manager nodes, V Series node deployment may fail. Before deploying the V Series nodes, disable the certificate validation as follows.

1. Login to each NSX-T manager using CLI with root credentials.
2. Open **/config/vmware/auth/ovf_validation.properties** file
3. Set a value for **THIRD_PARTY_OVFS_VALIDATION_FLAG** as **2**. The definition of the legends are as follows:
 - 0: only VMware-signed OVF's are allowed for deployment
 - 1: only VMware-signed and well-known CA-signed OVF's are allowed for deployment
 - 2: no validation
4. Save and Exit the file.

Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T

This section provides step-by-step information on how to deploy GigaVUE V Series Nodes.

GigaVUE V Series Nodes can be deployed on VMware NSX-T in two ways. You can either directly use VMware NSX-T manager to deploy your V Series nodes or use GigaVUE-FM to deploy your V Series nodes.

Refer to the following section for more detailed information:

- [Deploy GigaVUE V Series Nodes using GigaVUE-FM](#)
- [Deploy GigaVUE V Series Nodes using VMware NSX-T Manager](#)

Deploy GigaVUE V Series Nodes using GigaVUE-FM

After establishing a connection between GigaVUE-FM and VMware NSX-T, GigaVUE-FM launches the configuration for the GigaVUE V Series Node.

Refer to the following sections for details:

- [Deploy GigaVUE V Series Node from GigaVUE-FM](#)
- [Increase or Decrease GigaVUE V Series Nodes using GigaVUE-FM](#)
- [Step 5: Deploy GigaVUE V Series Nodes on VMware NSX-T](#)

Deploy GigaVUE V Series Node from GigaVUE-FM

1. In the **VMware NSX-T Fabric Deployment** page, enter or select the following details.

The screenshot displays the 'VMware NSX-T Fabric Deployment' configuration interface. The left sidebar contains navigation icons. The main configuration area includes the following fields:

- Deployment Name:** A text input field.
- Datacenter:** A dropdown menu with the placeholder text 'Select a datacenter...'.
- Cluster:** A dropdown menu with the value 'N/A'.
- Datastore:** A dropdown menu with the value 'N/A'.
- Management:** A section containing:
 - Network:** A dropdown menu with the value 'N/A'.
 - IP Type:** A dropdown menu with the placeholder text 'Select IP type...'.
- Tunnel:** A section containing:
 - Network:** A dropdown menu with the value 'N/A'.
 - IP Type:** A dropdown menu with the placeholder text 'Select IP type...'.
 - Gateway IP:** A text input field.
 - Netmask Length:** A text input field with the value '1-32'.
- User Password:** A text input field with the placeholder text '(gigamon)'.
- Confirm User Password:** A text input field.
- Form Factor:** A dropdown menu with the value 'Small, 2vCPU, 4GB RAM, 8GB Disk'.
- Service Attachment:** A dropdown menu with the placeholder text 'Select service attachment...'.
- Deployment Type:** A dropdown menu with the placeholder text 'Select deployment type...'.
- Deployment Count:** A text input field with the value '1-10'.

2.

Field	Description
Deployment Name	Name of the deployment (NSX-T service deployment)
Datacenter	vCenter Data Center with the NSX-T hosts to be provisioned with V Series nodes
Cluster	Cluster where you want to deploy V Series nodes
Datastore	Network datastore shared among all NSX-T hosts.
Management	
Network	Management network for V Series nodes
IP Type	Select the management network IP type as Static or DHCP
Tunnel Network	
Network	Tunnel Network for the V Series nodes
IP Type	Select the tunnel network IP address type as Static or DHCP
Gateway IP	Gateway IP address of the Tunnel Network
Netmask Length	Tunnel network's subnet mask value in CIDR format. Eg. 21 for /21
User Password: (gigamon)	SSH Password for the built-in user, 'gigamon' on the V Series node
Confirm Password	Confirm the SSH Password of the V Series node
Form Factor	Instance size of the V Series node. (eg: Small, Medium or Large)
Service Attachment	Service segment created on NSX-T
Deployment Type	Type of V series node deployment. It can be either Clustered or Host-Based deployment type. NOTE: Select the deployment type as Clustered if you wish to increase or decrease the number of nodes in a cluster using GigaVUE-FM. Refer Increase or Decrease GigaVUE V Series Nodes using GigaVUE-FM for more detailed information.
Deployment Count (for Clustered deployment type)	Number of V Series nodes (Service Instances) to deploy

3. Click **Deploy**. After the V series node is deployed in vCenter, it appears on the Monitoring Domain page under the deployment name of the selected Monitoring Domain. You can select a specific service deployment by clicking on the deployment name on the Monitoring Domain page.

Monitoring Domain	Connections	Deployment Name	Name	Management IP	Type	Version	Status
nsxt-md	nsxt-md	vp-dep1	Gigamon Inc.-vp-dep1_1	10.115.206.70	V Series Node	2.6.0	Ok
		vp-dep2	Gigamon Inc.-vp-dep2_1	10.115.207.13	V Series Node	2.6.0	Ok
		vp-dep3	Gigamon Inc.-vp-dep3_1	10.115.207.30	V Series Node	2.6.0	Ok

To view the fabric launch configuration specification of a fabric node, click on a V Series fabric node, and a quick view of the Fabric Launch Configuration appears on the Monitoring Domain page.

Increase or Decrease GigaVUE V Series Nodes using GigaVUE-FM

NOTE: Increasing or Decreasing the number of nodes in a cluster is only applicable when using Clustered based deployment.

You can add more nodes or remove nodes from an existing monitoring domain using GigaVUE-FM.

Add V Series Nodes to Existing Monitoring Domain

To increase the number of V Series Node in an existing monitoring domain follow the steps given below:

1. On the Monitoring domain page, select the monitoring domain to which you wish to add more V Series Nodes.
2. Click on the **Actions** button and select **Deploy Fabric**.
3. The VMware Fabric Deployment page opens. Enter the details as mentioned in [Deploy GigaVUE V Series Node from GigaVUE-FM](#)



- The Deployment type must be Clustered to have multiple deployment on the same cluster.
- A cluster can have only one Host Based Deployment, however there can be multiple clustered deployment on the same cluster.

4. Enter the number of V Series Nodes you wish to add in the **Deployment Count** column.
5. Click Deploy.

The newly added V Series Nodes will be displayed under the existing monitoring domain with the new Deployment Name.

Decrease V Series Nodes from Existing Monitoring Domain

To decrease the number of nodes in an existing monitoring domain follow the steps given below:

1. On the Monitoring domain page, select the **Deployment** from which you wish to remove the V Series Nodes or select the entire monitoring domain to remove all the deployments from the monitoring domain.

NOTE: You can select the Deployment either by using the check-box on the left side or by clicking on the deployment name

2. Click on the **Actions** button and select **Delete Deployment**.
3. All the V Series Nodes under that deployment will be deleted.

The number of V Series Nodes in the monitoring domain will be decreased by the number of nodes in the deployment that were deleted.

Example use-case for Increase or Decrease V Series Nodes using GigaVUE-FM

This feature can be used in a scenario where you are migrating from GigaVUE-VM visibility solution to GigaVUE V Series visibility solution, you can simply add the V Series node to the existing monitoring domain instead of undeploying and redeploying the monitoring domain every time you wish to add more V Series nodes to the monitoring domain.

Deploy GigaVUE V Series Nodes using VMware NSX-T Manager

You can deploy your V Series Nodes using VMware NSX-T manager. The GigaVUE V Series nodes register themselves with GigaVUE-FM using the information provided by the user in the NSX-T manager. Once the nodes are registered with GigaVUE-FM, you can configure monitoring sessions and related services in GigaVUE-FM.

Refer to the following sections for details:

- [Getting Started](#)
- [Deploying GigaVUE V Series Nodes in VMware NSX-T Manager](#)
- [Delete GigaVUE V Series Nodes and Monitoring Domain](#)
- [Increase or Decrease GigaVUE V Series Nodes using VMware NSX-T Manager](#)

Getting Started

To register your V Series Nodes using VMware NSX-T manager, follow the steps given below:

1. Create a monitoring domain in GigaVUE-FM. Refer to [Step 3: Connect to VMware vCenter in GigaVUE-FM](#) for detailed instructions.
2. In the **VMware Configuration** page, select **No** for the **Use FM to Launch Fabric** field as you wish to deploy V Series Nodes using VMware NSX-T manager.

VMware Configuration

Monitoring Domain*	<input type="text" value="Enter a monitoring domain name"/>
Connection Alias*	<input type="text" value="Alias"/>
Virtual Center*	<input type="text" value="Virtual Center"/>
Username*	<input type="text" value="Username"/>
Password*	<input type="text" value="Password"/>
NSX-T Manager*	<input type="text" value="IP address or hostname"/>
NSX-T Username*	<input type="text" value="NSX-T Manager username"/>
NSX-T Password*	<input type="text" value="NSX-T Manager password"/>
FM Username*	<input type="text" value="FM username"/>
FM Password*	<input type="text" value="FM password"/>
Use External Image	<input type="checkbox"/> <input type="text" value="Select an image"/>
Use FM to Launch Fabric®	<input checked="" type="checkbox"/>


NOTE: When creating the Monitoring Domain for deploying V Series Nodes, you can use the VMware NSX-T username and password that has at least "NETX Partner Admin" role assigned to it.

3. After creating your monitoring domain, you can use VMware NSX-T manager to deploy your nodes.

Deploying GigaVUE V Series Nodes in VMware NSX-T Manager

1. In the Service Deployment page of the VMware NSX-T manager, select **Deployment**. Then select GigaVUE Cloud Suite from the **Partner Service** drop-down. For detailed information, refer to [Deploy a Partner Service](#) topic in VMware Documentation.
2. After selecting the **Deployment template** and **Deployment Specification**, click **Configure Attributes**. The **Configure Attributes** page appears.
3. In the **Configure Attributes** page, enter the Service VM Host Name and Admin user password details.
4. Once the V Series Node is successfully deployed, the deployed node is registered with GigaVUE-FM after the run time status of the node is displayed as **UP** in VMware NSX-T manager.

The GigaVUE V Series Node deployed in your VMware NSX-T manager appears on the Monitoring Domain page of GigaVUE-FM. In GigaVUE-FM the **Status** of the node is displayed as **Launching** and once the node is successfully registered the **Status** is changed to **Ok**.

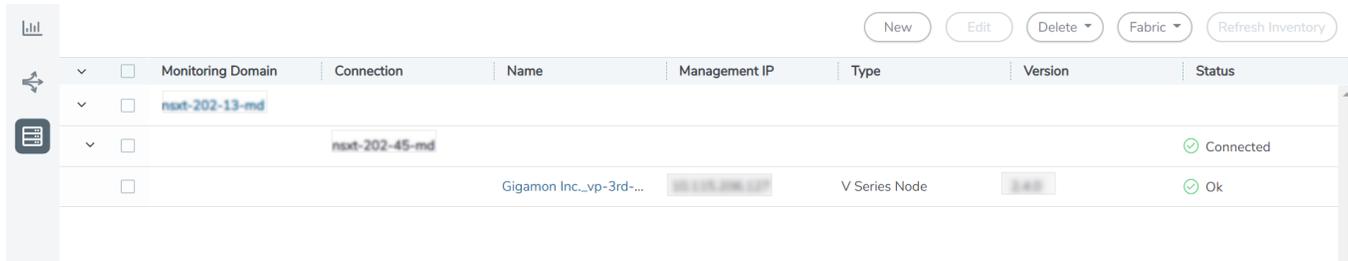

Monitoring Domain	Connection	Name	Management IP	Type	Version	Status
nsxt-202-13-md						
nsxt-202-45-md						Connected
		Gigamon Inc._vp-3rd-...	10.1.1.1	V Series Node	3.4.0	Ok

- IPv6 address is not supported for gateway of the tunnel interface when nodes are deployed through the VMware NSX-T manager.
- When you deploy nodes using VMware NSX-T manager, ensure all your V Series Nodes are of same version. GigaVUE-FM does not support V Series Nodes with different version in the Monitoring Domain.

Delete GigaVUE V Series Nodes and Monitoring Domain

NOTE: When you deploy your V Series Nodes using VMware NSX-T manager, you cannot directly delete your V Series Node in GigaVUE-FM. In this case, the Delete button in GigaVUE-FM is disabled, so the Service Deployment in NSX-T Manager must be deleted first.

To delete a GigaVUE V Series node deployed using VMware NSX-T Manager, follow the steps given below:

1. Delete the **Policy** and **Service Chain** in the VMware NSX-T manager.
2. Then, delete the Monitoring Session in GigaVUE-FM.
3. Delete the node in VMware NSX-T manager. Then, the node will be unregistered from the Monitoring Domain in GigaVUE-FM.
4. Finally, delete the Monitoring Domain in GigaVUE-FM.

Increase or Decrease GigaVUE V Series Nodes using VMware NSX-T Manager

You can now add more nodes or remove nodes from an existing monitoring domain using VMware NSX-T Manager.

Add V Series Nodes to Existing Monitoring Domain

To increase the number of V Series Node in an existing monitoring domain using VMware NSX-T Manager follow the steps given below:

1. On the Service Deployment page of the VMware NSX-T manager, select **Deployment**. This page lists the service deployments that are already deployed.
2. Then, click **Deploy Service** button. For more details on how to deploy a service refer [Deploy a Partner Service](#).
3. Enter the same details as given for the service mapped to the existing monitoring domain in GigaVUE-FM to which you wish to add more nodes.
4. In the **Clustered Deployment Count**, enter the number of nodes you wish to add to the existing monitoring domain.
5. Click **Save**.

Once the Service deployment is successful and the nodes are deployed, you can view the nodes on the monitoring domain page of GigaVUE-FM.

Example - Consider a scenario where the monitoring domain in GigaVUE-FM has two V Series Nodes. To increase the number of nodes in this monitoring domain, go to VMware NSX-T Manager and create a new service using the steps mentioned above. Then, the number of V Series Nodes in the monitoring domain in GigaVUE-FM goes up by the number you have mentioned in **Clustered Deployment Count** column in the VMware NSX-T.

Decrease V Series Nodes from Existing Monitoring Domain

To decrease the number of nodes in an existing monitoring domain using VMware NSX-T follow the steps given below:

1. On the **Service Deployment** page of the VMware NSX-T manager, select **Deployment**.
2. The service deployment page lists the service deployments that are already deployed. .
3. Select the service deployment that you want to delete. The V Series nodes that are part of that service deployment will be deleted from the host. These V Series nodes will also be removed from the monitoring domain in the GigaVUE-FM. This way the number of service VMs (V Series nodes) can be decreased in a monitoring domain

Example - Consider a scenario where the monitoring domain in GigaVUE-FM has five V Series Nodes. To reduce the number of nodes in this monitoring domain, go to VMware NSX-T Manager and delete a service deployment using the steps mentioned above. Then, the number of V Series Nodes in the monitoring domain in GigaVUE-FM goes down by the number you have mentioned in **Clustered Deployment Count** column of the service you have deleted.

Step 6: Configure Monitoring Sessions

GigaVUE-FM collects inventory data on all V series nodes deployed in your environment through vCenter connections. You can design your monitoring session to include or exclude the target VMs that you want to monitor. You can also choose to monitor egress, ingress, or all traffic. When a new target VM is added to your environment, GigaVUE-FM automatically detects it and based on the selection criteria, the detected target VMs are added into your

monitoring session. Similarly, when a traffic monitoring target VM is removed, it updates the monitoring sessions to show the removed instance. Before deploying a monitoring session, you need to deploy a V Series node in each host where you want to monitor the traffic.

NOTE:

- Link transformation and multiple links between two entities are not supported in V Series nodes of ESXi.
- Pre-filtering is not supported on VMware ESXi running with V Series nodes.

Refer to the following topics for details:

- [Create a Monitoring Session](#)
- [Create Ingress and Egress Tunnel](#)
- [Create a New Map](#)
- [Add Applications to Monitoring Session](#)
- [Deploy Monitoring Session](#)
- [View Monitoring Session Statistics](#)
- [Configure VMware Settings](#)

Create a Monitoring Session

Create a Monitoring Session

GigaVUE-FM automatically collects inventory data on all target instances available in your cloud environment. You can design your monitoring session to include or exclude the instances that you want to monitor. You can also choose to monitor egress, ingress, or all traffic.

When a new target instance is added to your cloud environment, GigaVUE-FM automatically detects and adds the instance into your monitoring session. Similarly, when an instance is removed, it updates the monitoring sessions to show the removed instance.

NOTE: You can have multiple monitoring sessions per monitoring domain.

You can create multiple monitoring sessions within a monitoring domain.

To create a new monitoring session:

1. In GigaVUE-FM, on the left navigation pane, select **Traffic > Virtual > Orchestrated Flows > VMware**. The **Monitoring Sessions** page appears.
2. Click **New** to open the **Create a New Monitoring Session** page.

Create A New Monitoring Session

3. Enter the appropriate information for the monitoring session as described in the following table.

Field	Description
Alias	The name of the monitoring session.
Monitoring Domain	The name of the monitoring domain that you want to select.
Connection	The connection(s) that are to be included as part of the monitoring domain. You can select the required connections that need to be part of the monitoring domain.

4. Click **Create**. The Monitoring Session details page appears displaying the specified session information and target VMs.

NOTE: In a Monitoring Session, if a selected VM is connected to VSS and VDS, then the GigaVUE-FM can create tapping for both VSS and VDS network.

The Monitoring Session page also has the following buttons:

Button	Description
Undeploy	Undeploys the selected monitoring session.
Clone	Duplicates the selected monitoring session.
Edit	Opens the Edit page for the selected monitoring session.

Button	Description
	<p>NOTE: In case of an error while editing a monitoring session, undeploy and deploy the monitoring session again.</p>
Delete	Deletes the selected monitoring session.

Create Ingress and Egress Tunnel

Traffic from the V Series 2 node is distributed to tunnel endpoints in a monitoring session. A tunnel endpoint can be created using a standard L2GRE, VXLAN, UDPGRE, or ERSPAN tunnel.

To create a new tunnel endpoint:

1. After creating a new monitoring session, or click **Actions > Edit** on an existing monitoring session, the GigaVUE-FM canvas appears.
2. In the canvas, select **New > New Tunnel**, drag and drop a new tunnel template to the workspace. The **Add Tunnel Spec** quick view appears.

3. On the New Tunnel quick view, enter or select the required information as described in the following table.

Field	Description
Alias	The name of the tunnel endpoint. NOTE: Do not enter spaces in the alias name.
Description	The description of the tunnel endpoint.
Type	The type of the tunnel. Select ERSPAN, or L2GRE, or VXLAN to create a tunnel.
Traffic Direction	The direction of the traffic flowing through the V Series node. <ul style="list-style-type: none"> Choose In (Decapsulation) for creating an Ingress tunnel, traffic from the source to the V Series node. Enter values for the Key. Choose Out (Encapsulation) for creating an Egress tunnel from the V Series node to the destination endpoint. Select or enter values for MTU, Time to Live, DSCP, PREC, Flow Label, and Key. <ul style="list-style-type: none"> ERSPAN, L2GRE, and VXLAN are the supported Ingress tunnel types. You can configure Tunnel Endpoint as your first level entity in Monitoring Session. L2GRE and VXLAN are the supported Egress tunnel types.
IP Version	The version of the Internet Protocol. Select IPv4 or IPv6.
Remote Tunnel IP	For Ingress tunnel, Remote Tunnel IP is the IP address of the tunnel source. For Egress tunnel, Remote Tunnel IP is the IP address of the tunnel destination endpoint.

4. Click **Save**.

To delete a tunnel, select the required tunnel and click **Delete**.

After configuring the tunnels and deploying the monitoring session, you can view the names of egress tunnels configured for a monitoring session, on the Monitoring Session details page. The Egress Tunnel column displays the name of the egress tunnel configured for a particular monitoring session. When multiple egress tunnels are configured for a monitoring session, then the Egress Tunnel column displays the number of egress tunnels configured in that monitoring session. Hover over the number of egress tunnels to display the names of the egress tunnels used in that particular monitoring session.

Create a New Map

You must have the flow map license to deploy a map in monitoring session.

For new users, the free trial bundle will expire after 30 days and the GigaVUE-FM prompts you to buy a new license. For detailed information on GigaVUE-FM licenses, refer to "Licenses" section in the *GigaVUE Administration Guide*.


A map is used to filter the traffic flowing through the GigaVUE V Series Nodes. It is a collection of one or more rules (R). The traffic passing through a map can match one or more rules defined in the map.

Keep in mind the following when creating a map:

Parameter	Description
Rules	A rule (R) contains specific filtering criteria that the packets must match. The filtering criteria lets you determine the targets and the (egress or ingress) direction of tapping the network traffic.
Priority	A priority determines the order in which the rules are executed. The priority value can range from 1 to 5, with 1 being the highest and 5 is the lowest priority.
Pass	The traffic from the virtual machine will be passed to the destination.
Drop	The traffic from the virtual machine is dropped when passing through the map.
Traffic Filter Maps	A set of maps that are used to match traffic and perform various actions on the matched traffic.
Inclusion Map	An inclusion map determines the instances to be included for monitoring. This map is used only for target selection.
Exclusion Map	An exclusion map determines the instances to be excluded from monitoring. This map is used only for target selection.
Automatic Target Selection (ATS)	A built-in feature that automatically selects the cloud instances based on the rules defined in the traffic filter maps, inclusion maps, and exclusion maps in the monitoring session. The below formula describes how ATS works: Selected Targets = Traffic Filter Maps \cap Inclusion Maps - Exclusion Maps
Group	A group is a collection of maps that are pre-defined and saved in the map library for reuse.

To create a new map:

1. After creating a new monitoring session, or click **Actions > Edit** on an existing monitoring session, the GigaVUE-FM canvas appears.
2. In the canvas, select **New > New Map**, drag and drop a new map template to the workspace. The New Map quick view appears.

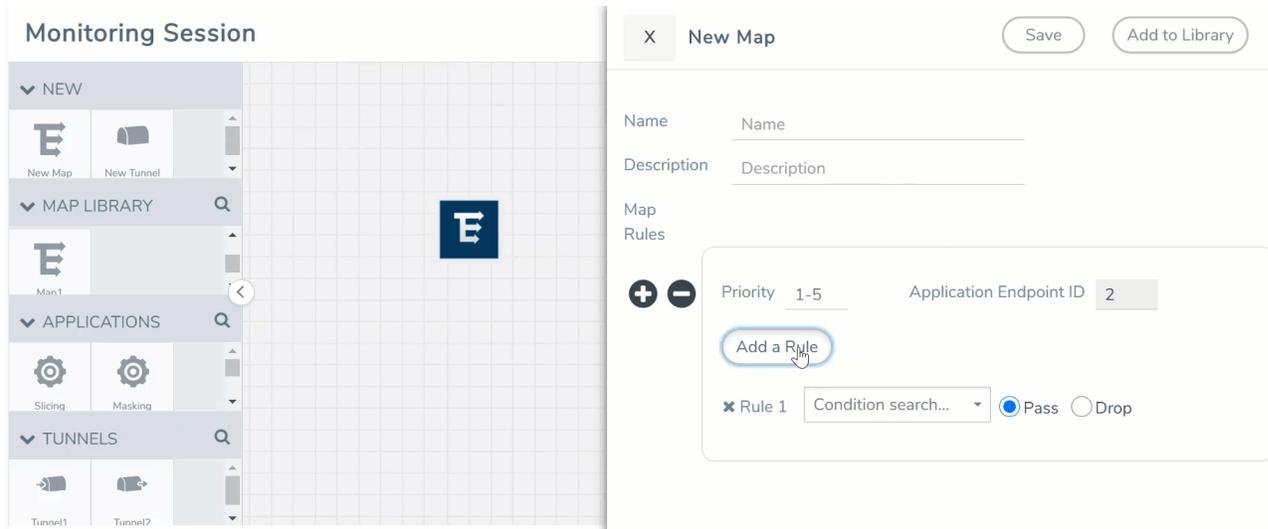

3. On the New Map quick view, enter or select the required information as described in the following table.

Field	Description
Name	Name of the new map
Description	Description of the map
Map Rules	<p>The rules for filtering the traffic in the map. Through the map, packets can be dropped or passed based on the highest to lowest rule priority. You can add 5 rule sets on a map. Use the + and - buttons to add or remove a rule set in the map. Each rule set can have only 25 rules per map and each map can have multiple conditions. To add ATS rules for an Inclusion/Exclusion map, you must select at least one rule condition.</p> <p>To add a map rule:</p> <ol style="list-style-type: none"> Enter a Priority value from 1 to 5 for the rule with 1 being the highest and 5 is the lowest priority. Click Add a Rule. The new rule field appears for the Application Endpoint. Select a required condition from the drop-down list. Select the rule to Pass or Drop through the map. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p> If two rules with same condition are configured as pass and drop,</p> <ul style="list-style-type: none"> on a same tunnel endpoint, the traffic filtering precedence will be based on the priority value. on two different tunnel endpoints, the traffic will be passed or dropped to the respective tunnel endpoints. <p>For detailed information on filtering fragmented and unfragmented packets, refer to "GigaSMART Adaptive Packet Filtering (APF)" section on the <i>GigaVUE Fabric Management Guide</i>.</p> </div>

-  Pass and Drop rule selection with Automatic Target Selection (ATS) differ with the Map type as follows:

 - Traffic Map—Only Pass rules for ATS
 - Inclusion Map—Only Pass rules for ATS
 - Exclusion Map—Only Drop rules for ATS

- To reuse the map, click **Add to Library**. Save the map using one of the following ways:
 - Select an existing group from the **Select Group** list or create a **New Group** with a name.
 - Enter a description in the **Description** field, and click **Save**.
- Click **Save**.

NOTE: If a packet is fragmented then all the fragments will be destined to the same application end point. You can find the stats of mapped fragmented traffic in GigaVUE-FM. Refer to "Map Statistics" section in *GigaVUE Fabric Management Guide* for detailed information.

To edit a map, select the map and click **Details**, or click **Delete** to delete the map.

Rules and Notes:

- Directional rules do not work on single NIC VMs that are running a windows agent.

You can also perform the following action in the Monitoring session canvas.

- Click a map and select **Details** to edit the map or select **Delete** to delete the map.
- Click the **Show Targets** button to view the monitoring targets highlighted in orange.
- Click  to expand the **Targets** dialog box. Click  to change the view from the list view to topology view. To view details about a GigaVUE V Series Node, click the arrow next to the VM.
- In the Instances window, click  to filter the list of instances.

Example- Create a New Map using Inclusion and Exclusion Maps

Consider a monitoring session with 5 cloud instances. Namely target-1-1, target-1-2, target-1-3, target-2-1, target-2-2.

1. Drag and drop a new map template to the workspace. The New map quick view appears.
2. Enter the name as Map 1 and enter the description. Enter the priority and Application Endpoint ID.
3. Select the condition as VM Name and enter the **target**. This includes the instances, target-1-1, target-1-2, target-1-3, target-2-1, and target-2-2.
4. Click on the Expand icon on the bottom of the Monitoring session canvas. The Inclusion Maps and Exclusion Maps sections appears.
5. Drag and drop a new map template to the Inclusion Maps region. The New Map quick view appears. Enter the Name and Description for the map.
 - a. Enter the name as Inclusionmap1 and enter the description. Enter the priority and Application Endpoint ID.
 - b. Select the condition as VM Name and enter the VM Name as **target-1**. Then the instance with VM name **target-1-1**, **target-1-2**, and **target-1-3** will be included.

6. Drag and drop a new map template to the Exclusion Maps region. The New Map quick view appears. Enter the details as mentioned in above section.
 - a. Enter the name as Exclusionmap1 and enter the description. Enter the priority and Application Endpoint ID.
 - b. Select the condition as VM Name and enter the VM Name as **target-1-3**. Then the instance **target-1-3** will be excluded.

Based on this configuration, the Automatic Target Selection will select the instances target-1-1 and target-1-2 as target.

Add Applications to Monitoring Session

GigaVUE Cloud Suite with GigaVUE V Series 2 node supports the following GigaSMART applications in the GigaVUE-FM canvas:

- Slicing
- Masking
- De-duplication
- Load Balancing
- PCAPng Application

For more detailed information on how to configure these application, refer to *GigaVUE V Series Applications Guide*.

You can also configure the following GigaSMART operations from the **Traffic > Solutions > Application Intelligence**:

- Application Metadata Intelligence
- Application Filtering Intelligence

For more information, refer to these GigaSMART Operations in the *GigaVUE Fabric Management Guide*.


Deploy Monitoring Session

To deploy the monitoring session:

1. Drag and drop the following items to the canvas as required:
 - Maps from the **MAP LIBRARY** section
 - Inclusion and Exclusion maps from the Map Library to their respective section at the bottom of the workspace.
 - GigaSMART apps from the **APPLICATIONS** section
 - Egress tunnels from the **TUNNELS** section

- After placing the required items in the canvas, hover your mouse on the map, click the red dot, and drag the arrow over to another item (map, application, or tunnel).

NOTE: You can drag multiple arrows from a single map and connect them to different maps.

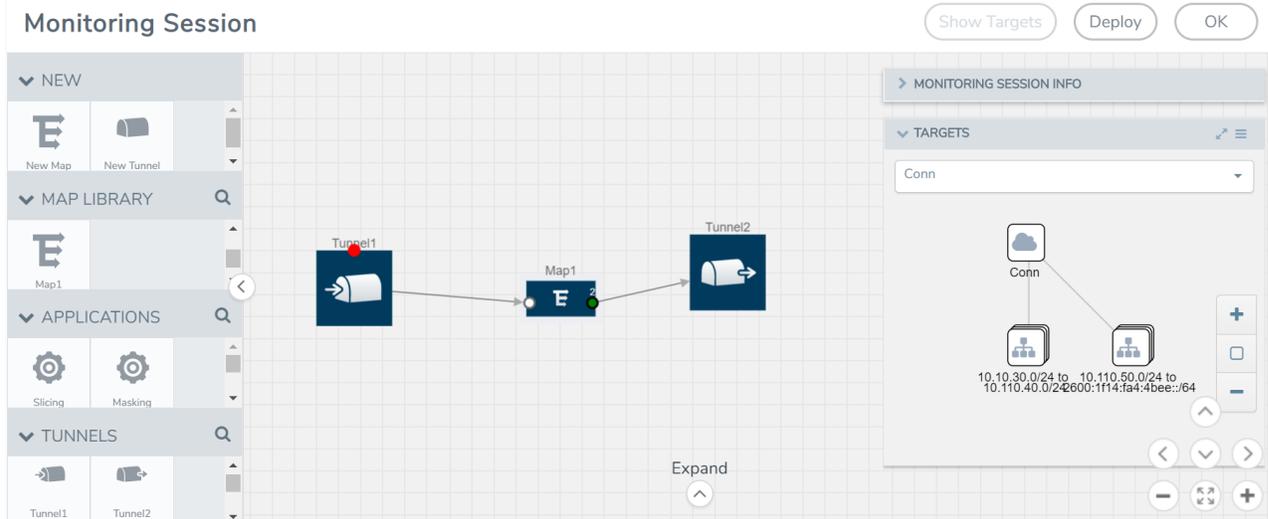


- (Not applicable for NSX-T solution and Customer Orchestrated SourceTraffic Acquisition Method) Click **Show Targets** to view details about the subnets and monitored instances. The instances and the subnets that are being monitored are highlighted in orange.
- Click **Deploy** to deploy the monitoring session. The status is displayed as **Success** in the Monitoring Sessions page. The session is successfully deployed on all the V Series nodes. Click on the status link in the Status column on the Monitoring Session page to view the Monitoring Session Deployment Report. When you click on the Status link, the Deployment Report is displayed. If the monitoring session is not deployed properly, then one of the following errors is displayed in the Status column.
 - Partial Success—The session is not deployed on one or more instances due to V Series node failure.
 - Failure—The session is not deployed on any of the V Series nodes.
 The **Monitoring Session Deployment Report** displays the errors that appeared during deployment.

View Monitoring Session Statistics

The Monitoring Session Statistics page lets you analyze the incoming and outgoing traffic on an hourly, daily, weekly, and monthly basis. The traffic can be viewed based on kilobits/second, megabits/second or gigabits/second.

On the Monitoring Sessions page, click **View** in the Statistics column to view the Monitoring Session Statistics page. The **Monitoring Session Statistics** page appears where you can analyze incoming and outgoing traffic.

NOTE: If there are multiple monitoring sessions with different target selection, then the incoming maps will not show true statistics and it shows the aggregate traffic from all the targets.

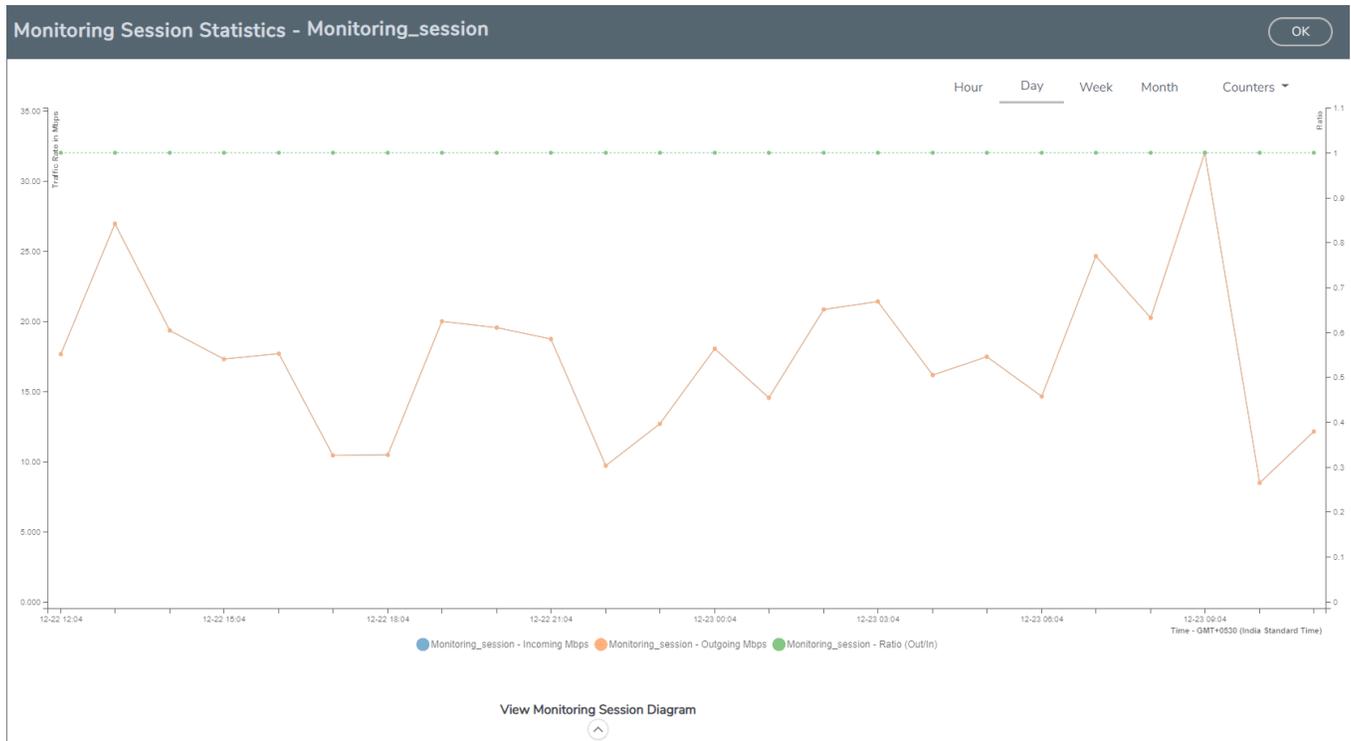

You can also perform the following actions on the Monitoring Session Statistics page:

- Directly below the graph, you can click on **Incoming Mbps**, **Outgoing Mbps**, or **Ratio (Out/In) (Mbps)** to view the statistics individually.
- At the bottom of the Monitoring Session Statistics page, you can click on **View Monitoring Session Diagram**. The Monitoring Session Diagram quick view appears.
- On the **Monitoring Session Diagram** page, you can expand any map, or tunnel to open a **Details** quick view of that item to see more details about the incoming and outgoing traffic for that item.
- You can also scroll down the Map **Details** quick view to view the Map Rules, Action Sets, and Map Info for this map. You can select Map Rules or Action Sets to view the traffic matching the selected rule on the graph in the quick view.
- You can also view the statistics of the monitoring session deployed in the individual V Series Nodes. To view the statistics of the individual V Series Node, select the name of the V Series Node for which you want to view the statistics from the V Series Node drop-down menu on the top left-corner of the Monitoring Session Statistics page.
- Hover over the V Series Node drop-down to view the number of the applications, end points, and other application environments configured for a particular V Series Node. It also displays the error message related to configuration for the particular V Series Node.



Raw EndPoint (REP) is a part of the monitoring session but can also receive the bypassed traffic that is not filtered by the map, so it is recording more packets than expected. For example, if the map has a rule as IPv4, but the REP can receive the bypassed (non-ipv4) traffic. The recorded number of packets from the V Series node can be more than expected.

Step 7: Create NSX-T Group and Service Chain

An NSX-T group and service chain must be created to redirect network traffic to the GigaVUE Cloud Suite. An NSX-T group defines which VMs are to be monitored. The service chain associates the GigaVUE Cloud Suite and map profile to the group.

Create Service Chain

The steps presented in this section create a service chain with the source virtual machines defined as the virtual machines in the applied groups. Additional configurations of the service chain are available. For additional details on creating security policies, refer to the “Service Composer” chapter of the *NSX Administration Guide*.

To create the service chain in NSX-T:

1. Select **Security > Settings > Network Introspection** and then click **SERVICE CHAINS** tab.
2. On the SERVICE CHAINS tab, click **ADD CHAIN**.
3. On the New Service Chain, do the following:
 - a. In the **Name** and **Description** fields, enter name and description for the service chain, respectively.
 - b. For **Service Segments**, select a service segment.
 - c. Click **Forward Path** and a **Set Forward Path** dialog box appears.
 - Select a Service Profile for Forward Path.
 - d. For **Reverse Path**, select or deselect the **Inverse Forward Path** to define the direction of the traffic.
 - e. For **Failure Policy**, specify whether to allow or block the service chain.
4. Click **Save**. A Service Chain is created.

The new Service Chain is then updated in the **NSX-T Virtual Maps** page of GigaVUE-FM.

Create Group

A group should be created that contains the VMs to forward NSX-T network traffic to the GigaVUE Cloud Suite.

To create the group, do the following in the NSX-T:

1. In NSX-T, select **Inventory > Groups**. The Groups page appears.
2. On the Groups page, click **ADD GROUP**.
3. On the New Group, enter or select the values as follows.
 - a. Enter a name for the new group.
 - b. Click **Set Members** and the **Select Members** dialog box appears.
 - Add or select Membership Criteria, Members, IP/MAC Addresses, and AD Groups.
 - c. Enter the description for the group.
4. Click **Save** and then a group is created and appears on the **Groups** page.

Create and Publish a Policy

A Policy is a set of rules defined to filter the traffic. A Policy is to be created and published for passing the traffic from NSX-T to the configured tunnel endpoint.

To create and publish a policy in NSX-T:

1. Select **Security > Service Chain Management > Network Introspection (E-W)**.
2. Click **ADD POLICY**.
3. On the New Policy, enter or select the values as follows:
 - a. Enter a name for the policy.
 - b. Select the **Sources** of the traffic.
 - c. Select the **Destinations** of the traffic.
 - d. Select the **Services** for the traffic.
 - e. For **Applied To** field, select the appropriate groups.
 - f. On **Action** field, specify whether to redirect the traffic or not.
4. Click **Publish**. On publishing the rule/policy you can view the traffic flow from the V Series nodes to the tunnel endpoint.

Upgrade GigaVUE V Series Nodes for VMware NSX-T

GigaVUE V Series Nodes can be deployed on VMware NSX-T in two ways. You can either directly use VMware NSX-T manager to deploy your V Series nodes or use GigaVUE-FM to deploy your V Series nodes. Based on the method in which you deploy GigaVUE V Series Nodes, you can upgrade them in two ways. Refer to the following topic for more detailed information.

- [Upgrade GigaVUE V Series Nodes Deployed using GigaVUE-FM](#)
- [Upgrade GigaVUE V Series Node Deployed using VMware NSX-T Manager](#)

Upgrade GigaVUE V Series Nodes Deployed using GigaVUE-FM

Before upgrading the nodes ensure that all the current V Series nodes are of same version. To upgrade V Series Node in GigaVUE-FM:

1. Go to **Inventory > VIRTUAL > VMware V Series NSX-T**, and then click **Monitoring Domain**. The **Monitoring Domain** page appears.
2. Select a deployed monitoring domain and click **Actions**. From the drop-down list, select **Upgrade Fabric**, the **V Series Node Upgrade** dialog box appears.

V Series Node Upgrade

Current Version 2.3.1

Use External Image No

Change Form Factors **Select an image**

- gigamon-gigavue-vseries-node-2.3.1-275864_amd64.ova
- gigamon-gigavue-vseries-node-2.3.3-284615_amd64.ova

Upgrade **Cancel**

3. Use the **Use External Image** toggle button to choose between internal and external image.
 - **Yes** to use an external image. Enter the Image URL of the latest V Series Node OVA image
 - **No** to use an internal image. To use an internal image, select the uploaded OVA files from the **Select an image** drop-down menu.
4. Click the **Change Form Factors** check box to modify the form factor (instance) size.

NOTE: Both the new and the current V Series nodes appears on the same monitoring domain until the new nodes replaces the current and the status changes to **Ok**.

5. Click **Upgrade**.

You can view the status of the upgrade in the Status column of the **Monitoring Domain** page.

To view the detailed upgrade status click **Upgrade in progress** or **Upgrade successful**, the **V Series Node Upgrade Status** dialog box appears.

V Series Node Upgrade Status

Monitoring Domain: esxi-md

Summary

Success: 1 Failed: 0 In Progress: 0 Total: 1

Node Statuses

Node	Status
VSeries- XXXXXXXXXX -node1-10-210-27-202	OK

Click **Clear** to delete the logs of successfully upgraded nodes.

NOTE: Monitoring Domain upgrade can be only done when there is a single service deployment in the monitoring domain.

Upgrade GigaVUE V Series Node Deployed using VMware NSX-T Manager

NOTE: When you deploy your V Series Nodes using VMware NSX-T manager, you cannot directly upgrade V Series Node in GigaVUE-FM. In this case, the upgrade button in GigaVUE-FM is disabled.

To upgrade V Series Nodes deployed using VMware NSX-T, follow the steps given below:

1. Delete the existing V Series Node in VMware NSX-T Manager.
2. Click **Actions > Edit** in the Monitoring Domain page. The VMware **VMware Configuration** page appears.
3. Enter the new **Image URL** or select a new image if **Use External Image** toggle button is disabled.
4. Then, deploy the new V Series Nodes in the VMware NSX-T manager

Configure VMware Settings

This section provides information on how to configure the maximum number of connections, refresh intervals for instance and non-instance inventory, and maximum batch size for monitoring session updates.

To configure the VMware Settings:

Go to **Inventory > VIRTUAL > VMware V Series NSX-T**, and then click **Settings > Advanced Settings** to edit the VMware V Series NSX-T settings.

Advanced Settings

Maximum number of vCenter connections allowed	20
Refresh interval for VM target selection inventory (secs)	300
Refresh interval for fabric deployment inventory (secs)	1800

Refer to the following table for details:

Settings	Description
Maximum number of vCenter connections allowed	Specifies the maximum number of vCenter connections you can establish in GigaVUE-FM
Refresh interval for VM target selection inventory (secs)	Specifies the frequency for updating the state of target VMs in VMware vCenter
Refresh interval for fabric deployment inventory (secs)	Specifies the frequency for updating the state of GigaVUE-FM fabrics deployed in VMware vCenter

Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware NSX-T

To configure the Application Intelligence solution on the GigaVUE V Series Nodes, create a virtual environment with the required connections. After creating the connections, configure the sources and the required destinations for the traffic flow. Refer the following topics for step by step instructions on how to configure Application Intelligence solution for GigaVUE V Series Nodes:

- [Configure Environment](#)
- [Connect to VMware NSX-T](#)
- [Create NSX-T Group and Service Chain](#)
- [Create Tunnel Specifications](#)
- [Configure Application Intelligence Session](#)

Important Notes:

- You can deploy multiple GigaVUE V Series Nodes in a connection.
- You can use **V Series Node API Proxy Server (VPS)** to scale and manage multiple V Series Nodes. Refer to the GigaVUE-FM REST API Reference in GigaVUE-FM User's Guide for detailed information.



- You can use tool templates while creating an Application Metadata Intelligence session. To create a custom tool template for GigaVUE V Series Node, signature is required from the node. Refer to the Tool Templates section in the *GigaVUE Fabric Management Guide* for more detailed information.
- To delete a GigaVUE V Series Node deployed in a Application Intelligence solution, you must delete the resources in the following order:
 1. Delete the Application Intelligence solution.
 2. Delete the GigaVUE V series Node and Connection.
 3. Delete the Environment.

Configure Environment


The Environments page allows you to create the following:

- **Environments:** The physical or the virtual environment in which the Application Intelligence solution is to be deployed.
- **Connections:** Connection between GigaVUE-FM and the cloud platform.

Create Environment

To configure the Environment:

1. Select **Inventory > Resources > Environments**.
2. On the **Environments** page, on the **Environments** tab, click **Create**.

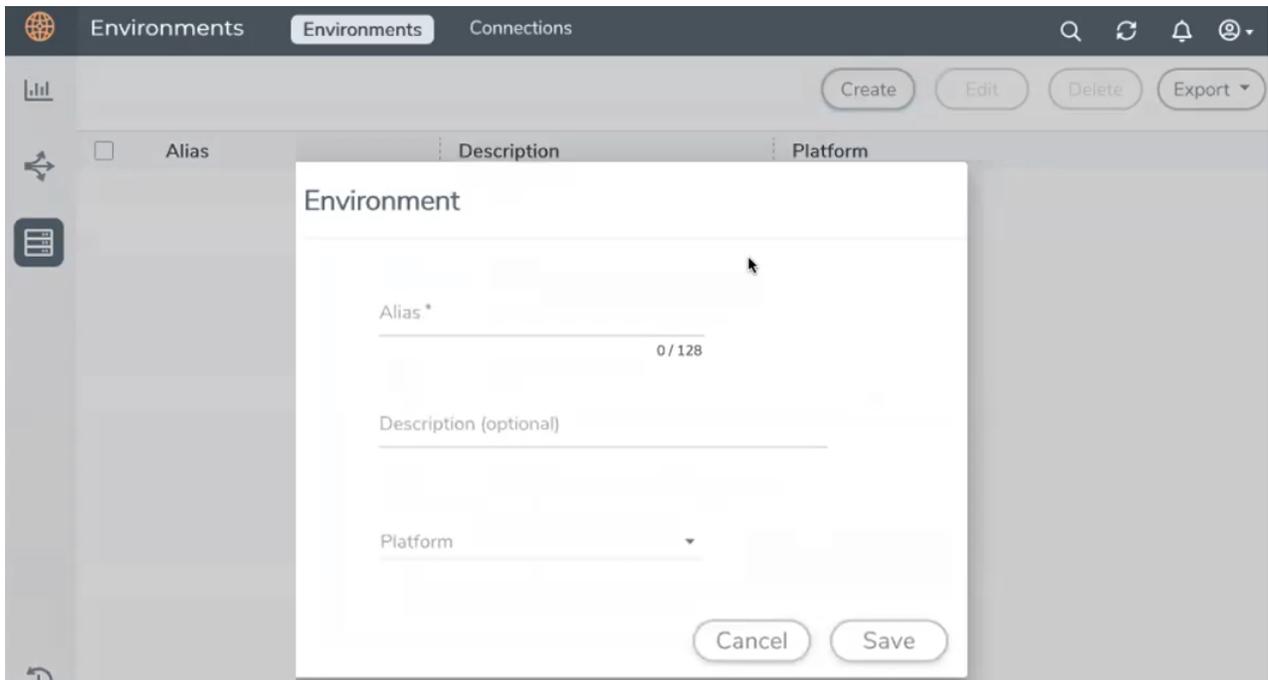

3. Select or enter the following details:

Field	Description
Alias	Alias name used to identify the Environment.
Description	Brief description about the Environment.
Platform	Select the cloud platform.

4. Click **Save**. The environment is added to the list view.

Use the following buttons to manage your environment:

Button	Description
Delete	Use to delete an Environment.
Edit	Use to edit the details in an Environment.
Export	Export the details from the Environment page in an XLS or CSV file.

Connect to VMware NSX-T

After creating an environment create a connection between the VMware NSX-T and GigaVUE-FM.

Refer to the following sections for details:

- Rules and Notes
- Steps

Rules and Notes

- NSXT- manager version must be 3.1.3. Otherwise after editing the solution, the packets will not reach the GigaVUE V Series Node.
- NSX-T manager cannot be registered for more than one GigaVUE-FM.
- For GigaVUE-FM software version 5.13.00, you cannot deploy more than one GigaVUE V Series Node.
- **For GigaVUE-FM software version 5.13.00:** If you configure a GigaVUE V Series Node with the Application intelligence solution, then you must not configure other basic GigaSMART applications, such as slicing, masking, and vice-e-versa. These GigaSMART applications cannot work in parallel.

Create Connection

To create a new Connection:

1. Select **Inventory > Resources > Environment**.
2. On the **Environments** page, on the **Connections** tab, click **Create**.

3. The **Create New Connection** dialog box opens. Enter the details as mentioned in the below section.

NOTE: When creating a connection in the connections page, the corresponding monitoring domain created for internal use in GigaVUE-FM will not be displayed in the Monitoring Domain list page.

To connect to VMware NSX-T, select or enter the following details:

Field	Description
Alias	Alias name used to identify the connection.
Description	Brief description about the connection.
Environment	Select the environment configured in the Connect to VMware NSX-T
Server	The IP address or the DNS name of the virtual server.
vCenterUserName	Valid user name
vCenterPassword	Password for the user
NSX-T Manager IP Address	IP address or Hostname of your VMware NSX-T.
NSX-T User Name	Username of your NSX-T account.
NSX-T Password	Password of your NSX-T account.
Image URL	Web Server URL of the directory where V Series node OVA, VMDK, and OVF files are available. The Web Server URL must be in the following format: <i>http://<server-IP;port>/<path to where the OVF files are saved></i> and the port can be any valid number.
GigaVUE-FM User Name	GigaVUE-FM username.
GigaVUE-FM Password	GigaVUE-FM password

Once the connection is established, enter the following details in the fabric launch configuration page, and click **Save**:

Field	Description
Datacenter	vCenter Data Center with the ESXi hosts to be provisioned with V Series nodes
Cluster	Cluster where you want to deploy V Series nodes
Datastore	Network datastore shared among all ESXi hosts.
Management Network	Management network for V Series nodes
IP Type	Select the management network IP type as Static or DHCP
Tunnel Network	Tunnel Network for the V Series nodes
IP Type	Select the tunnel network IP address type as Static or DHCP
Tunnel Gateway IP	Gateway IP address of the Tunnel Network
MTU	The Maximum Transmission Unit (MTU) is the maximum size of each packet that the tunnel endpoint can carry.
Netmask Length	CIDR value of the Tunnel.
User Password: (gigamon)	SSH Password for the built-in user, 'gigamon' on the V Series node
Confirm User Password	Confirm the SSH Password of the V Series node

Field	Description
Form Factor	Instance size of the V Series node
Service Attachment	Service segment created on NSX-T
Deployment Type Deployment Count (for Clustered deployment type)	<p>Deployment type is clustered.</p> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px 0;"> <p>NOTE: Host-based deployment option is disabled, as there can be one V series node per ESXi host.</p> </div> <p>Deployment count is restricted to one V Series nodes (Service Instances).</p>

Use the following buttons to manage your VMware NSX-T connections :

Button	Description
Create	Use to create new connection.
Actions	<p>Provides the following options:</p> <ul style="list-style-type: none"> • Edit Connection - Use to edit a connection. You can only edit the following fields in the Edit Connection page: <ul style="list-style-type: none"> ▪ vCenter Username ▪ vCenter Password ▪ NSX-T Username ▪ NSX-T password ▪ Image URL • Deploy Node - Use to deploy a node. • Delete Connection - Use to delete a connection. • Delete Node - Use to delete a node. • Force Delete -This option is enabled when an upgrade fails due to infrastructure issues. Use this option to force delete the connection. • Upgrade Fabric - Use to upgrade the fabric components. • Continue Upgrade Fabric - If the upgrade failed or interrupted for any reason, use this option to continue the upgrade process.
Refresh Inventory	Use to refresh the entire connections page.
Export	Use to export the details from the Connections page into an XLS or a CSV file.

To create Application Intelligence sessions, refer to [Create an Application Intelligence Session in Virtual Environment](#).

Refer [Deploying Application Intelligence Solution at Scale on VMware NSX-T 3.1.3](#) for more detailed information.

Create NSX-T Group and Service Chain

After creating connection to NSX-T, VMware NSX-T NSX-T manager is responsible for configuring the sources. In order for VMware NSX-T manager to configure the source, you must create groups and service chains in NSX-T manager. Refer [Step 7: Create NSX-T Group and Service Chain](#) for step-by-step instructions.

Create Tunnel Specifications

A tunnel endpoint can be created using a standard L2GRE, VXLAN, or ERSPAN tunnel. The tunnel can be an ingress tunnel or an egress tunnel.

NOTE: VXLAN is the only supported tunnel type for Azure.

To configure the tunnels:

1. Select **Inventory > Resources > Tunnel Specifications**.
2. On the **Tunnel Specifications** page, navigate to **VM** tab and click **Create**. The Create Tunnel Specification wizard appears.

Create tunnel specification



Alias

Description

Alias *

Description (optional)

Tunnel type

Cancel

Save

3. Enter or select the following information:

Field	Description
Alias	<p>The name of the tunnel endpoint.</p> <p>NOTE: Do not enter spaces in the alias name.</p>
Description	The description of the tunnel endpoint.
Tunnel Type	<p>The type of the tunnel.</p> <p>Select ERSPAN, or L2GRE, or VXLAN to create a tunnel.</p> <p>Do not select UDPGRE tunnel type.</p> <p>NOTE: VXLAN is the only supported tunnel type for Azure.</p>
Traffic Direction	<p>The direction of the traffic flowing through the V Series node.</p> <ul style="list-style-type: none"> Choose In (Decapsulation) for creating an Ingress tunnel, Tunnel Spec for the Source should always have the Traffic Direction as IN, signifying an ingress tunnel. Enter values for the Key. Choose Out (Encapsulation) for creating an Egress tunnel from the V Series node to the destination endpoint. Select or enter values for MTU, Time to Live, DSCP, PREC, Flow Label, and Key. <p> ERSPAN, L2GRE, and VXLAN are the supported Ingress tunnel types. You can configure Tunnel Endpoint as your first level entity in Monitoring Session.</p> <ul style="list-style-type: none"> L2GRE and VXLAN are the supported Egress tunnel types. For Azure connection, VXLAN is the supported Ingress and Egress tunnel type.
IP Version	The version of the Internet Protocol. Select IPv4 or IPv6.
Remote Tunnel IP	<p>For Ingress tunnel, Remote Tunnel IP is the IP address of the tunnel source.</p> <p>For Egress tunnel, Remote Tunnel IP is the IP address of the tunnel destination endpoint.</p>

4. Click **Save** to save the configuration.

User Defined Application

This feature gives you the ability to classify applications not classified automatically by the DPI engine. This allows unclassified TCP, UDP, HTTP, and HTTPS applications to be identified and named with the help of user defined application signatures.

To configure User Defined Application signatures :

Step Number	Task	Refer the following
1	Create rules under User Defined Application Section	Create rules under User Defined Application
2	Configure Application Intelligence Session	For Physical: Application Intelligence Session For Virtual: Configure Application Intelligence Session
3	Monitor User Defined Application	View the Application Intelligence Dashboard

Create Rules under User Defined Application

1. Click **Inventory**.
2. Click **User Defined Applications** to create rules based on a set of **Supported Protocols and Attributes**. For information on **Supported protocols and Attributes** refer **User Defined Application** topic. This helps the physical or virtual node to classify the traffic based on the protocols and attributes selected in the created rule.
3. Click **New** in the **User Defined Applications** screen to create a new rule.
4. Enter **Application Name**.
5. Enter **Priority**. The value must be between 1 and 120.
Note: The least value will have the highest priority.
6. In the created rule:
 - a. Choose the **Protocol** from the list of protocols.
 - b. Choose the **Attributes** from the list of attributes.
 - c. Choose the **Values** from the list of values.

7. Click **Apply**. The rule is now created. For information on the limitations for creating rules refer Configuration Limitations section.
8. Click the application listed under the **Applications** column.
9. Click the **Rule** tab.
10. Select a rule to view its protocol details.

Supported Protocols and Attributes

The DPI engine will match the rules defined based on the following protocols and attributes within the first 500 bytes of a packet payload.

For supported Regexp patterns, refer [Supported RegExp Syntax](#)

Protocol	Attributes	Attribute Labels	Description	Direction	Supported Data Type	Example Value
http	cts-uri	Request URI	Partially Normalized URL (path + request)	Client to Server Only	REGEXP	/fupload/(create_file new_slice upload_slice)\?.*upload_token=.*
	cts-server	Server Name	Web Server Name from URI or Host	Client to Server Only	REGEXP	(.*\.)?gigamon\.com
	mime_type	MIME Type	Content type of Request or the Web page	Both, Client to Server or Server to Client	REGEXP	http
	cts-user_agent	User Agent	Software / Browser used for request	Client to Server Only	REGEXP	mozilla

	cts-referer	Referer URI	Source address where client got the URI	Client to Server Only	REGEXP	http://gigamon.com/
	stc-server_agent	Server Agent	Software used for the server	Server to Client Only	REGEXP	NWS_TCloud_PX
	stc-location	Redirect Location	Destination address where the client is redirected to	Server to Client Only	REGEXP	.*\football\.*
	cts-cookie	Cookie (Raw)	Raw value of the HTTP Cookie header line	Client to Server Only	REGEXP	.*tEstCoOkie.*
	content	Content	Message body content	Both, Client to Server or Server to Client	REGEXP	.*GIGAMON.* mindata = 206 Refer Mindata
ssl	common_name	Domain Name	Domain name from Client Hello message or the certificate		REGEXP	(.*\.)?gigamon\.com

	stc-subject_alt_name	Subject Alt Name (s)	List of host names which belong to the same certificate	Server to Client Only	REGEXP	(.*\.)?gigamon\.com
rtmp	cts-page_url	Page URL	URL of the webpage where the audio/video content is streamed	Client to Server Only	REGEXP	http://www.music.tv/recorded/1234567
tcp	stream	Payload Data	Data payload for a packet, excluding the header.		REGEXP	.*GIGAMON.* mindata = 70 Refer Mindata
	port	Server Port	Server (listen) port number		UINT16 RANGE as REGEXP String	80-4350
udp	stream	Payload Data	Data payload for a packet, excluding the header		REGEXP	.*GIGAMON.* mindata = 100 Refer Mindata
	port	Server	Server		UINT16	80-4350

Configure V Series Node on NSX-T

Configure Application Intelligence Solutions on GigaVUE V Series Nodes for VMware NSX-T

		Port	(listen) port number		RANGE as REGEXP String	
sip	user_agent	User Agent	Software used	Both, Client to Server or Server to Client	REGEXP	GVUE-release 6.2.0
icmp	code	Message Code	Code of the ICMP message	Both, Client to Server or Server to Client	UINT8 as REGEXP String	200
	typeval	Message Type	Type of ICMP message	Both, Client to Server or Server to Client	UINT8 as REGEXP String	10
ip	address	Server IP Addresses	IP address of the server		IPV4 as REGEXP String	62.132.12.30/24
	dscp	DSCP Value	DSCP from Differentiated Service (DS) Field in IP		UINT8 as REGEXP String	33

			header			
	resolv_name	DNS Name	Server's DNS name		REGEXP	gigamon.com
ipv6	address	Server IP Address	IP address of the server		IPV6 as REGEXP String	2001:0:9d38:6ab8:307b:16a4:9c66:5f4 2001:0:9d38::9c66:5f4/64
	dscp	DSCP Value	DSCP from Differentiated Service (DS) Field in IP header		UINT8 as REGEXP String	43

Mindata

The mindata value is the number of payload bytes to buffer and match a given pattern. You can configure mindata value for HTTP content, TCP stream, and UDP stream. The buffer size is calculated from the start of the payload and the default buffer size is different for each protocol (HTTP - 206, TCP - 67, and UDP - 48.)

For example, for pattern `".*TEST.*"` that may be present within the first 67 bytes of TCP payload, you can specify the mindata value as 4 (which is the length of the input string) or as 67 (which is the default buffer size of TCP payload). In case, the pattern is present in between 65 to 68 bytes of the payload and the mindata is specified as 4 or 67, it will not match. For this case, you must specify the mindata value as 68.

Supported RegExp Syntax

Pattern	Description
.	Matches any symbol
*	Searches for 0 or more occurrences of the symbol or character set that precedes it
+	Searches for 1 or more occurrences of the symbol or character set that precedes it

?	Searches for 0 or 1 occurrence of the symbol or character set that precedes it
()	Groups a series of expressions together
[]	Matches any value included within the bracket at its current position Example: [Dd]ay matches Day and day
 [<start>-<end>]	Separates values contained in (). Searches for any one of the values that it separates. Example: The following expression matches dog or cat: (dog cat). Matches any value contained within the defined range (a hyphen indicates the range). You can mix character class and a hexadecimal range Example: [AaBbCcDdEeFf0-9]
\O <octal_ number>	Matches for a direct binary with octal input
\x<hexadecimal- number>\x	Matches for a direct binary with hexadecimal input
\[<character- set>\]	Matches a character set while ignoring case. WARNING: Not performance friendly

Limitations

- The maximum number of user defined application that can be configured is 120 per FM. These applications can be spread across one or more application intelligence sessions.
- The maximum number of rules that can be created per application is 8.
- The maximum number of protocols that can be configured per rule is 3.

Configure Application Intelligence Session

Application Visualization (earlier known as Application Monitoring) gathers the application statistics, and sends this information to GigaVUE-FM, which acts as an application monitor. The monitoring reports are sent to GigaVUE-FM through the destination port 2056. The

application statistics appear as an array of monitoring reports that provide application-usage data in an easy-to-read graphical interface. This provides you with greater insight and control over how your network is being used and what applications are utilizing the most resources. To perform Application Monitoring, you must create the required application intelligence sessions on the nodes managed by GigaVUE-FM.

Prerequisites

- The environment on which the Application Intelligence solution is to be deployed must already be created and the nodes must be deployed on it.
- In virtual environment, the destination tunnels for the Application Filtering Intelligence Map must already be created.

NOTE: For Application Visualization and Application Metadata Intelligence, the destination(s) are defined internally by the solution.

Create an Application Intelligence Session in Virtual Environment

Complete the following prerequisites before creating an Application Intelligence solution in the virtual environment:

To create an Application Intelligence Session:

1. On the left navigation pane, select **Traffic > Solutions > Application Intelligence**.
2. Click **Create New**. The **Create Application Intelligence Session** page appears.

3. In the **Basic Info** section, enter the name and description, and in the Environment select **Virtual** for the session to be created:
 - Virtual- connects to the specific environment.
4. In the Environment section, select the **Environment Name**, and the **Connection Name**. To create an Environment and connection, refer to [Configure Environment](#).
5. In the **Configurations** section, complete the following:

- a. Select an **Export Interval** during which you want the Application Intelligence session to generate the reports for application visualization. The valid range is 60–900 seconds.
- b. Select the required interface. By default, **Management Interface** is enabled. To export the data through tunnel interface, uncheck the Management Interface check box.
- c. Enter a value for the **Scale Unit**. The scale unit represents the number of flows supported by the application. If the scale unit value is 1, the maximum active flow limit will be 100k.

Refer to the following table for the maximum scale unit supported for VMware, AWS, and Azure platforms.

NOTE: Scale Unit is not applicable for the OpenStack platform.

Cloud Platform	Instance Size	Maximum Scale Unit
VMware	Large (8 vCPU and 16 GB RAM)	3
	Medium (4 vCPU and 8 GB RAM)	1
AWS	Large (c5n.2xlarge)	4
	Medium (t3a.xlarge)	3
Azure	Large (Standard_D8s_V4)	9
	Medium (Standard_D4s_v4)	3

6. In the **Source Traffic** section, select anyone of the following:
 - **Source Selector**- Select the source from the drop-down list box. To create new source, select **New Source Selector** and add the filters. For more information on creating a New Source Selector, refer to [Create Source Selectors](#).

NOTE: You cannot configure Source Selectors when you deploy the GigaVUE V Series Nodes using the Third Party Orchestration in VMware ESXi host.

- **Tunnel Specification**- Select the tunnel from the drop-down list box. To create new tunnel, select **New Source Tunnel Spec** and add the details for the tunnel. For more information on creating a new tunnel, refer to [Create Tunnel Specifications](#).

NOTE: Select the ens192 interface for the Tunnel Specifications from the drop-down menu when using third party orchestration.

- **Raw End Point**- Select the Raw End Point Interface from the drop-down menu which will trap the traffic for application monitoring.

NOTE: This field is applicable only when you deploy your GigaVUE V Series Nodes using third party orchestration in VMware ESXi Host, Nutanix and Google Cloud Platform.



- Tunnel Specification for the source must always be configured with Traffic Direction as IN, to indicate that it is an ingress tunnel.
- For Azure Connection, VXLAN is the only supported Tunnel Type.

7. Click **Save**. The session created is added in the list view.
8. In the **User Defined Applications** section, select the template from the list. For information on **Supported protocols and Attributes** and **Limitations** refer **User Defined Application** topic.

The total applications participating in the network traffic are displayed in the Application Intelligence Dashboard. For more information about the dashboard, refer to the [View the Application Intelligence Dashboard](#).

Select the session from the Application Intelligence Sessions pane and click on the  icon and select **View Details** from the drop-down menu, to view the deployed G-vTAP Agents, their status and more information about source selectors, selected target.

If the session configuration is unsuccessful, troubleshoot the error notified (refer to [View the Health Status of a Solution](#)). Click the **Reapply all pending solutions** button  in the dashboard to redeploy the configuration.

NOTE: GigaVUE-FM takes few minutes to display the application statistics.

NOTE: The option **Reapply all pending solutions** is applicable for physical solution only.

When the Application Intelligence solution is in suspended state, you cannot delete the session. You can click on the  icon and select **View Details** from the drop-down menu, to view the details.

You can also filter the traffic based on the applications. For more information, see [Create Application Filtering Intelligence](#).

Remove Gigamon Service from NSX-T and GigaVUE-FM

To clean up the Gigamon Visibility Platform from NSX-T and GigaVUE-FM, perform the following steps:

- [Step 1: Remove the Service Chains](#)
- [Step 2: Delete the Monitoring Session](#)
- [Step 3: Undeploy GigaVUE Cloud Suite - V Series VMs](#)
- [Step 4: Delete the NSX-T Manager and vCenter Connections](#)

Step 1: Remove the Service Chains

To delete the network monitoring services:

1. Select **Security > Settings > Network Introspection** and then click **SERVICE CHAINS** tab.
2. On the appropriate Service Chain, click  and then select **Delete** to delete the selected Service Chain.

Step 2: Delete the Monitoring Session

To delete the Monitoring session from GigaVUE-FM:

1. From the left navigation pane, select **Traffic > VIRTUAL > Orchestrated Flows > VMware**. The monitoring sessions pertaining to all VMware deployment appears.
2. Select the NSX-T related monitoring session and click **Delete**. The service profile and the profile that corresponds to the map is deleted on NSX-T manager console.

Step 3: Undeploy GigaVUE Cloud Suite - V Series VMs

To undeploy GigaVUE Cloud Suite-Fabric VMs from GigaVUE-FM:

1. From the left navigation pane, select **Inventory > VIRTUAL > VMware > Monitoring Domain**. The Monitoring domain page appears along with the deployed V Series nodes.
2. Select the appropriate **Monitoring Domain** for NSX-T, click on the dropdown option for Delete and then click **Delete Fabric Nodes**.

Step 4: Delete the NSX-T Manager and vCenter Connections

To delete the NSX-T Manager from GigaVUE-FM:

1. From the left navigation pane, select **Inventory > VIRTUAL > VMware > Monitoring Domain**. The monitoring domain page appears.
2. Select the appropriate NSX-T monitoring domain that you wish to delete and then click **Delete Monitoring Domain** option from the **Delete** dropdown.

Cloud Health Monitoring

GigaVUE-FM allows you to monitor the traffic and configuration health status of the monitoring session and its individual components. This section provides detailed information on how to view the traffic and configuration health status of the monitoring session and its individual components.

Configuration Health Monitoring

The configuration health status provides us detailed information about the configuration and deployment status of the deployed monitoring session.

This feature is supported for the following fabric components and features on the respective cloud platforms:

For V Series Nodes:

- AWS
- Azure
- OpenStack
- VMware
- Nutanix

For G-vTAP Agents:

- AWS
- Azure
- OpenStack

For VPC Mirroring:

- AWS

For OVS Mirroring and VLAN Trunk Port:

- OpenStack

To view the configuration health status, refer to the [View Health Status](#) section.

Traffic Health Monitoring

GigaVUE-FM allows you to monitor the traffic health status of the entire monitoring session and also the individual V Series Nodes for which the monitoring session is configured. Traffic health monitoring focuses on identifying any discrepancies (packet drop or overflow etc) in the traffic flow. When any such discrepancies are identified, GigaVUE-FM propagates the health status to corresponding monitoring session. GigaVUE-FM monitors the traffic health status in near real-time. GigaVUE V Series Node monitors the traffic, when the traffic limit goes beyond the upper or lower threshold values that is configured, it notifies GigaVUE-FM, based on which traffic health is computed.

This feature is supported for GigaVUE V Series Nodes on the respective cloud platforms:

For V Series Nodes:

- AWS
- Azure
- OpenStack
- VMware

The following section gives step-by-step instructions on creating, applying, and editing threshold templates across a monitoring session or an application, and viewing the traffic health status. Refer to the following section for more detailed information:

- [Create Threshold Template](#)
- [Apply Threshold Template](#)
- [Edit Threshold Template](#)
- [Clear Thresholds](#)
- [Supported Resources and Metrics](#)

Keep in mind the following points when configuring a threshold template:

- By default Threshold Template is not configured to any monitoring session. If you wish to monitor the traffic health status, then create and apply threshold template to the monitoring session.
- Editing or redeploying the monitoring session will reapply all the threshold policies associated with that monitoring session.
- Deleting or undeploying the monitoring session will clear all the threshold policies associated with that monitoring session.
- After applying threshold template to a particular application, you need not deploy the monitoring session again.

Create Threshold Template

To create threshold templates:

1. In GigaVUE-FM, on the left navigation pane, select **Traffic > Virtual > Orchestrated Flows** and select your cloud platform. Then, click on the **Threshold Template** tab in the top navigation bar.
2. The **Threshold Template** page appears. Click **Create** to open the **New Threshold Template** page.
3. Enter the appropriate information for the threshold template as described in the following table.

Field	Description
Threshold Template Name	The name of the threshold template.
Thresholds	
Monitored Objects	Select the resource for which you wish to apply the threshold template. Eg: TEP, REP, Maps, Applications like Slicing, Dedup etc
Time Interval	Frequency at which the traffic flow needs to be monitored.
Metric	Metrics that needs to be monitored. For ex, Tx Packets, Rx Packets etc
Type	Difference: The difference between the stats counter at the start and end time of an interval, for a given metric. Derivative: Average value of the stats counter in a time interval, for a given metric.
Condition	Over: Checks if the stats counter value is greater than the 'Set Trigger Value'. Under: Checks if the stats counter value is lower than the 'Set Trigger Value'.
Set Trigger Value	Value at which a traffic health event is raised, if stats counter goes below/ above this value. Based on the condition configured.
Clear Trigger Value	Value at which a traffic health event is cleared, if stats counter goes below/ above this value. Based on the condition configured.

4. Click **Save**. The newly created threshold template is saved, and it appears on the **Threshold Template** page.

Apply Threshold Template

You can apply your threshold template across the entire monitoring session and also to a particular application.

Apply Threshold Template to Monitoring Session

To apply the threshold template across a monitoring session, follow the steps given below:

1. In GigaVUE-FM, on the left navigation pane, select **Traffic > Virtual > Orchestrated Flows** and select your cloud platform. The **Monitoring Session** page appears.
2. Select the monitoring session and click **Actions > Apply Thresholds**.
3. The **Apply Thresholds** page appears. To apply a threshold template across a monitoring session, select the template you wish to apply across the monitoring session from the Threshold Template drop-down menu or enter the threshold values manually.
4. Click **Done**.

Apply Threshold Template to Applications

To apply the threshold template to a particular application in the monitoring session follow the steps given below:

NOTE: Applying threshold template across monitoring session will not over write the threshold value applied specifically for an application. When a threshold value is applied to a particular application, it over writes the existing threshold value for that particular application.

1. On the **Monitoring Session** page. Click **Actions > Edit**. The Edit Monitoring Session page with canvas page appears.
2. Click on the application for which you wish to apply or change a threshold template and click **Details**. The **Application** quick view opens.
3. Click on the **Thresholds** tab. Select the template you wish to apply from the Threshold Template drop-down menu or enter the threshold values manually.
4. Click **Save**.

Edit Threshold Template

To edit a particular threshold template follow the steps given below:

1. On the Threshold Template page, Click **Edit**. The **Edit Threshold Template** page appear.
2. The existing threshold templates will be listed here. Edit the templates you wish to modify.
3. Click **Save**.

NOTE: Editing a threshold template does not automatically apply the template to monitoring session. You must apply the edited template to monitoring session for the changes to take effect.

Clear Thresholds

You can clear the thresholds across the entire monitoring session and also to a particular application.

Clear Thresholds for Applications

To clear the thresholds of a particular application in the monitoring session follow the steps given below:

1. On the **Monitoring Session** page. Click **Actions > Edit**. The Edit Monitoring Session page with canvas page appears.
2. Click on the application for which you wish to clear the thresholds and click **Details**. The **Application** quick view opens.
3. Click on the **Thresholds** tab. Click **Clear All** and then Click **Save**.

Clear Thresholds across the Monitoring Session

To clear the applied thresholds across a monitoring session follow the steps given below:

1. In GigaVUE-FM, on the left navigation pane, select **Traffic > Virtual > Orchestrated Flows** and select your cloud platform. The **Monitoring Sessions** page appears.
2. Select the monitoring session and click **Actions > Apply Thresholds**.
3. The **Apply Thresholds page appears**. Click **Clear**.

NOTE: Clearing thresholds at monitoring session level does not clear the thresholds that were applied specifically at the application level. To clear thresholds for a particular application refer to [Clear Thresholds for Applications](#)

Supported Resources and Metrics

The following table lists the resources and the respective metrics supported for traffic health monitoring

Resource	Metrics	Threshold types	Trigger Condition
Tunnel End Point	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Tx Bytes 4. Rx Bytes 5. Tx Dropped 6. Rx Dropped 7. Tx Errors 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under

	8. Rx Errors		
Raw End Point	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Tx Bytes 4. Rx Bytes 5. Tx Dropped 6. Rx Dropped 7. Tx Errors 8. Rx Errors 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Map	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Slicing	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Masking	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Dedup	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Header Stripping	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Tunnel Encapsulation	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
Load Balancing	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 3. Packets Dropped 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under
SSL Decryption	<ol style="list-style-type: none"> 1. Tx Packets 2. Rx Packets 	<ol style="list-style-type: none"> 1. Difference 2. Derivative 	<ol style="list-style-type: none"> 1. Over 2. Under

	3. Packets Dropped		
Application Metadata	1. Tx Packets 2. Rx Packets 3. Packets Dropped	1. Difference 2. Derivative	1. Over 2. Under
AMI Exporter	1. Tx Packets 2. Rx Packets 3. Packets Dropped	1. Difference 2. Derivative	1. Over 2. Under
Geneve	1. Tx Packets 2. Rx Packets 3. Packets Dropped	1. Difference 2. Derivative	1. Over 2. Under
5G-SBI	1. Tx Packets 2. Rx Packets 3. Packets Dropped	1. Difference 2. Derivative	1. Over 2. Under

View Health Status

You can view the health status of the monitoring session on the Monitoring Session details page. The health status of the monitoring session is healthy only if both the configuration health and traffic health are healthy.

View Health Status of the Entire Monitoring Session

To view the health status of a monitoring session:

1. On the Monitoring Session details page, click on the health status displayed in the **Status** column of the monitoring session.
2. The monitoring session diagram is displayed, click on the Status displayed in the top left-corner above the canvas. The quick view page appears.

This displays the configuration health and traffic health of the monitoring session and also the thresholds applied to that monitoring session.

View Health Status of an Application

To view the health status of an application across an entire monitoring session:

1. On the Monitoring Session page, click on the health status displayed in the **Status** column of the monitoring session.
2. The monitoring session diagram is displayed.
3. To view application health, click on the application for which you wish to see the health status. The quick view page appears.
4. Click on the **Status** tab.

This displays the configuration health and traffic health of the application and also the thresholds applied to that particular application.

View Health Status for Individual V Series Nodes

You can also view the health status of the view the health status of an individual GigaVUE V Series Node. To view the configuration health status and traffic health status of the V Series Nodes:

1. On the Monitoring Session page, click on the health status in the **Status** column of the monitoring session.
2. The monitoring session diagram is displayed. Select the V Series Node from the **View By** drop-down menu and then click on the Status displayed in the top left-corner above the canvas. The quick view page appears.

View Application Health Status for Individual V Series Nodes

To view the application configuration and traffic health status of the GigaVUE V Series Nodes:

1. On the Monitoring Session page, click on the health status in the **Status** column of the monitoring session.
2. The monitoring session diagram is displayed. Select the V Series Node from the **View By** drop-down menu.
3. To view application health, click on the application for which you wish to see the health status. The quick view page appears.
4. Click on the **Status** tab.

The subsession toggle button available in the top-left corner of the canvas allows you to view the statistics of individual paths in the monitoring session. If the traffic health is not configured for monitoring session or a particular application, the traffic health is displayed as **Not Applicable**.

View Health Status on the Monitoring Session Page

You can view the health status of the monitoring session and the components deployed, in the monitoring session page.

The following columns in the monitoring session page are used to convey the health status:

Health

This column displays the health status (both traffic and configuration) of the entire monitoring session. The status is marked healthy only if both the traffic and configuration health status is healthy, even if either of them is unhealthy then the health status is moved to unhealthy.

V Series Node Health

This column displays the configuration and traffic health status of the monitoring session deployed in V Series Nodes. This column provides information on the number of GigaVUE V Series Nodes that have healthy traffic flow and monitoring session successfully deployed to the total number of V Series Nodes that have monitoring session deployed.

You can view the health status of the individual V Series Nodes by clicking on the V Series Node Health column.

NOTE: V Series Node health only displays the health status therefore even if the V Series Node is down it will not be reflected in the monitoring session page.

Target Source Health

This column displays the configuration health status of the monitoring session deployed in targets. This column provides information on the number of monitoring sessions successfully deployed on a particular target to the total number of monitoring session deployed on that particular target.

You can view the health status of the individual targets and also the error message associated with them, by clicking on the Target Source Health column.

Fabric Health Analytics for Virtual Resources (BETA)

Fabric Health Analytics is delivered as BETA in software version 5.16.00 and is subject to change in the upcoming release(s).

Fabric Health Analytics (FHA) in GigaVUE-FM is a standalone service that provides data visualization capabilities. Using FHA¹ you can create visual elements such as charts that are embedded as visualizations. The visualizations are grouped together in dashboards. You can also create search objects using FHA. Dashboards, Visualizations and Search Objects are called FHA objects. Refer to [Fabric Health Analytics BETA](#) topic in *GigaVUE Fabric Management Guide* for more detailed information on Fabric Health Analytics.

Rules and Notes:

- You cannot edit or delete these default dashboards. However, you can clone the dashboards and visualizations. Refer to the [Clone Dashboard](#) section for more details.
- Use the Time Filter option to select the required time interval for which you need to view the visualization.

Virtual Inventory Statistics and Cloud Applications Dashboard

Fabric Health Analytics dashboards allow users to monitor the physical and virtual environment and detect anomalous behavior and plan accordingly. Refer to the [Fabric Health Analytics](#) section in *GigaVUE Fabric Management Guide* for details on how to create a new dashboard, clone a dashboard, create a new visualization, and other information about the Discover page and Reports page.

To access the dashboards:

1. Go to  -> **Analytics -> Dashboards**.
2. Click on the required dashboard to view the visualizations.

The following table lists the various virtual dashboards:

¹FHA uses the Kibana front-end application to visualize and analyze the data in the Elasticsearch database of GigaVUE-FM. Kibana is an open source data visualization plugin for Elasticsearch.

Dashboard	Displays	Visualizations	Displays
Inventory Status (Virtual)	<p>Statistical details of the virtual inventory based on the platform and the health status.</p> <p>You can view the following metric details at the top of the dashboard:</p> <ul style="list-style-type: none"> • Number of Monitoring Sessions • Number of V Series Nodes • Number of Connections • Number of GCB Nodes <p>You can filter the visualizations based on the following control filters:</p> <ul style="list-style-type: none"> • Platform • Health Status 	<i>V Series Node Status by Platform</i>	Number of healthy and unhealthy V Series Nodes for each of the supported cloud platforms.
		<i>Monitoring Session Status by Platform</i>	Number of healthy and unhealthy monitoring sessions for each of the supported cloud platforms
		<i>Connection Status by Platform</i>	Number of healthy and unhealthy connections for each of the supported cloud platforms
		<i>GCB Node Status by Platform</i>	Number of healthy and unhealthy GCB nodes for each of the supported cloud platforms
V Series Node Statistics	<p>Displays the Statistics of the V Series node such as the CPU usage, trend of the receiving and transmitting packets of the V Series node.</p> <p>You can filter the visualizations based on the following control filters:</p> <ul style="list-style-type: none"> • Platform • Connection • V Series Node 	<i>V Series Node Maximum CPU Usage Trend</i>	<p>Line chart that displays maximum CPU usage trend of the V Series node in 5 minutes interval, for the past one hour.</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>NOTE: The maximum CPU Usage trend refers to the CPU usage for service cores only. Small form factor V-series nodes do not have service cores, therefore the CPU usage is reported as 0.</p> </div>
		<i>V Series Node with Most CPU Usage For Past 5 minutes</i>	Line chart that displays Maximum CPU usage of the V

Dashboard	Displays	Visualizations	Displays
			Series node for the past 5 minutes. NOTE: You cannot use the time based filter options to filter and visualize the data.
		<i>V Series Node Rx Trend</i>	Receiving trend of the V Series node in 5 minutes interval, for the past one hour.
		<i>V Series Network Interfaces with Most Rx for Past 5 mins</i>	Total packets received by each of the V Series network interface for the past 5 minutes. NOTE: You cannot use the time based filter options to filter and visualize the data.
		<i>V Series Node Tunnel Rx Packets/Errors</i>	Displays the reception of packet at the Tunnel RX. This is the input to V Series Node, Grouping by tunnel identifier comprising {monDomain, conn, VSN, tunnelName}, before aggregation.
		<i>V Series Node Tunnel Tx Packets/Errors</i>	TX is for output tunnels from VSN. V Series Node Tunnel Tx Packets/Errors
Dedup	Displays visualizations related to Dedup application. You can filter the visualizations based on the following control filters: <ul style="list-style-type: none"> Platform Connection 	<i>Dedup Packets Detected/Dedup Packets Overload</i>	Statistics of the total dedup packets received (ipV4Dup, ipV6Dup and nonIPDup) against the dedup application overload.

Dashboard	Displays	Visualizations	Displays
	<ul style="list-style-type: none"> VSeries Node 	<i>Dedup Packets Detected/Dedup Packets Overload Percentage</i>	Percentage of the dedup packets received against the dedup application overload.
		<i>Total Traffic In/Out Dedup</i>	Total incoming traffic against total outgoing traffic
Tunnel (Virtual)	<p>Displays visualizations related to the tunneled traffic in both bytes as well as the number of packets.</p> <p>You can select the following control filters, based on which the visualizations will get updated:</p> <ul style="list-style-type: none"> Monitoring session: Select the required monitoring session. The cloud platform, monitoring domain and connection within the monitoring domain that is used by the V-series node are shown in square brackets, comma-separated, after the name, to distinguish the whole path to it. V series node: Management IP of the V Series node. Choose the required V-series node from the drop-down. Tunnel: Select any of the tunnels shown in the Tunnel drop-down. The direction for each tunnel is shown with the prefix in or out. <p>The following statistics are displayed for the tunnel:</p> <ul style="list-style-type: none"> Received Bytes Transmitted Bytes Received Packets Transmitted Packets Received Errored Packets Received Dropped Packets 	<i>Tunnel Bytes</i>	<p>Displays received tunnel traffic vs transmitted tunnel traffic, in bytes.</p> <ul style="list-style-type: none"> For input tunnel, transmitted traffic is displayed as zero. For output tunnel, received traffic is displayed as zero.

Dashboard	Displays	Visualizations	Displays
	<ul style="list-style-type: none"> Transmitted Errored Packets Transmitted Dropped Packets 	<i>Tunnel Packets</i>	Displays packet-level statistics for input and output tunnels that are part of a monitoring session.
App (Virtual)	<p>Displays Byte and packet level statistics for the applications for the chosen monitoring session on the selected V series node.</p> <p>You can select the following control filters, based on which the visualizations will get updated:</p> <ul style="list-style-type: none"> Monitoring session V series node Application: Select the required application. By default, the visualizations displayed includes all the applications. <p>By default, the following statistics are displayed:</p> <ul style="list-style-type: none"> Received Bytes Transmitted Bytes Received Packets Transmitted Packets Errored Packets Dropped Packets 	<i>App Bytes</i>	Displays received traffic vs transmitted traffic, in Bytes.

Dashboard	Displays	Visualizations	Displays
		<i>App Packets</i>	Displays received traffic vs transmitted traffic, as the number of packets.
End Point (Virtual)	<p>Displays Byte and packet level statistics for the un-tunneled traffic deployed on the V-series nodes.</p> <p>The following statistics that are shown for Endpoint (Virtual):</p> <ul style="list-style-type: none"> • Received Bytes • Transmitted Bytes • Received Packets • Transmitted Packets • Received Errored Packets • Received Dropped Packets • Transmitted Errored Packets • Transmitted Dropped Packets <p>The endpoint drop-down shows <i><V-series Node Management IP address : Network Interface></i> for each endpoint.</p> <p>You can select the following control filters, based on which the visualizations will get updated:</p> <ul style="list-style-type: none"> • Monitoring session • V Series node • Endpoint: Management IP of the V Series node followed by the Network Interface (NIC) 	<i>Endpoint Bytes</i>	Displays received traffic vs transmitted traffic, in Bytes.
		<i>Endpoint Packets</i>	Displays received traffic vs transmitted traffic, as the number of packets.

NOTE: The Tunnel (Virtual), App (Virtual) and Endpoint (Virtual) dashboards do not show data from the previous releases if the *Monitoring Session [Platform : Domain : Connection]* dashboard filter is applied. This is because, this filter relies on the new attributes in the Elasticsearch database, which are available only from software version 5.14.00 and beyond.

Sharing the Same Host across Different Monitoring Domains

GigaVUE-FM has the ability to share a host between VMware ESXi and VMware NSX-T monitoring domain. You can deploy multiple V Series nodes from VMware NSX-T monitoring domain and one V Series Node from VMware ESXi monitoring domain on the same host. This way the workload virtual machines connected to NSX segments can be monitored using the V Series nodes deployed in NSX-T monitoring domain and workload virtual machines connected to regular VSS / VDS networks can be monitored using the V Series node deployed in the ESXi monitoring domain.

NOTE: If a Virtual Machine has NICs attached to both VMware NSX-T segments and ESXi VDS or VSS port groups then GigaVUE-FM cannot provide visibility to those virtual machines in ESXi platform.

GigaVUE V Series Deployment Clean up


On installation failure or incomplete service removal, you must clean up V Series nodes before reattempting the installation. To clean up the V Series deployments from NSX-T and GigaVUE-FM, perform the following steps:

- [Remove Service Profiles](#)
- [Remove Service Deployments](#)
- [Remove Service Reference](#)
- [Remove Service Manager](#)
- [Remove Vendor Template and Service Definition](#)


Remove Service Profiles

To remove Service Profiles:

1. From NSX-T Manager, navigate to **Security > Network Introspection (E-W)**.
2. In the **SERVICE PROFILES** tab, select the **GigaVUE Cloud Suite** partner service.

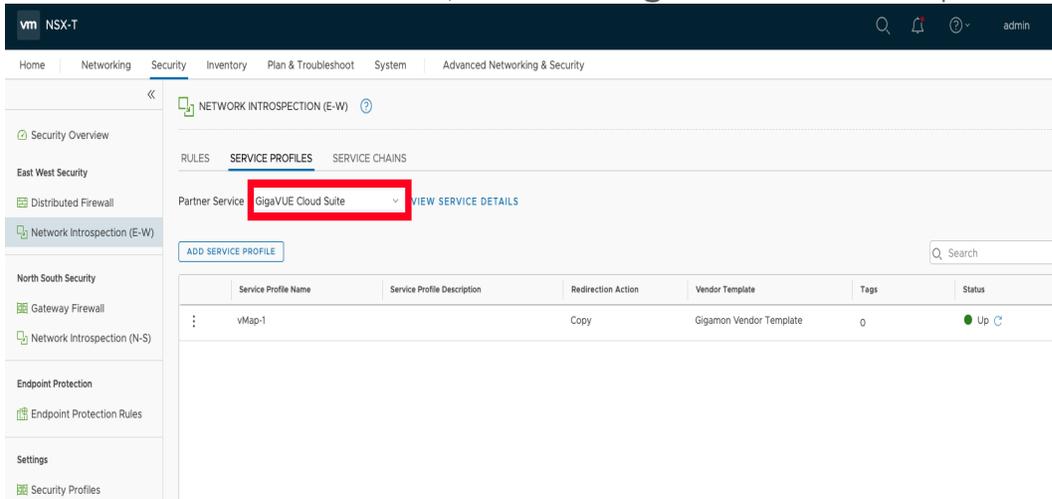


3. Delete all existing Service Profiles.

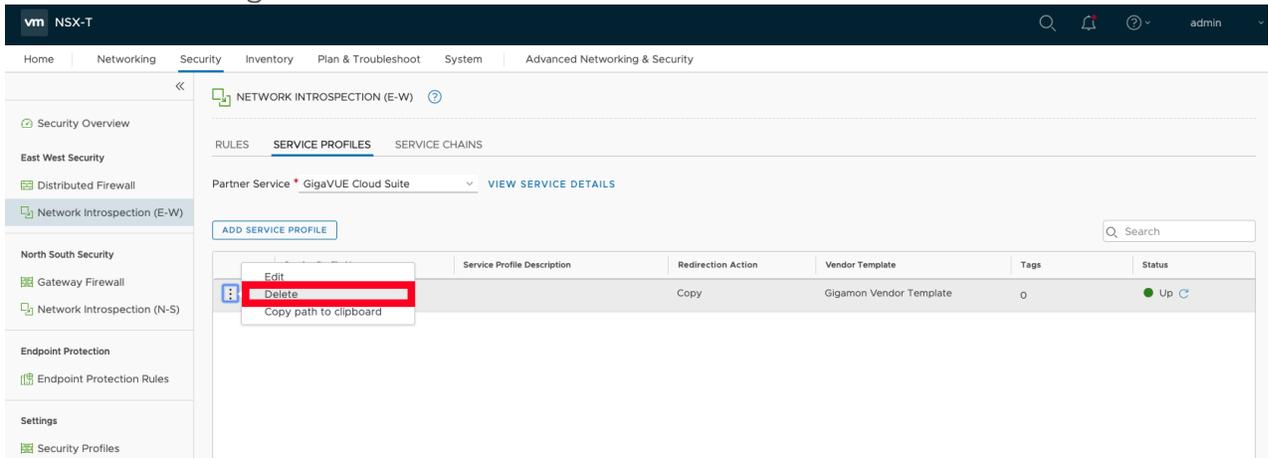


Remove Service Deployments

To remove Service Profiles:

1. From NSX-T Manager, navigate to **System > Service Deployments**.
2. In the **DEPLOYMENT** tab, Select the **GigaVUE Cloud Suite** partner service.

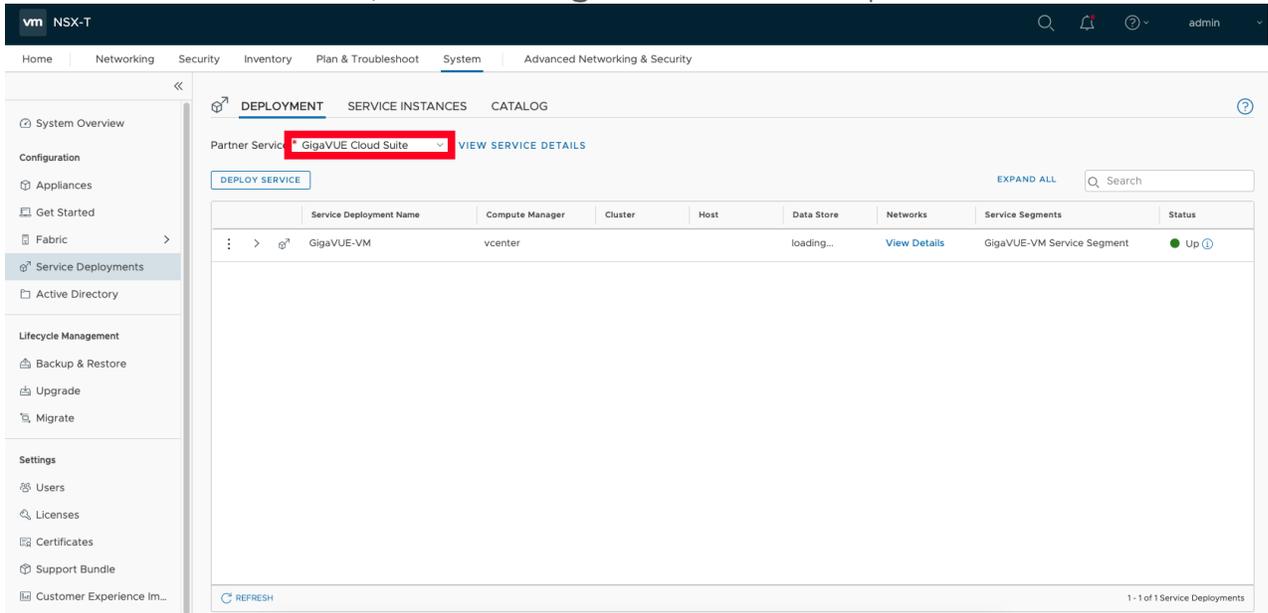


3. Delete all the existing Service Deployments.

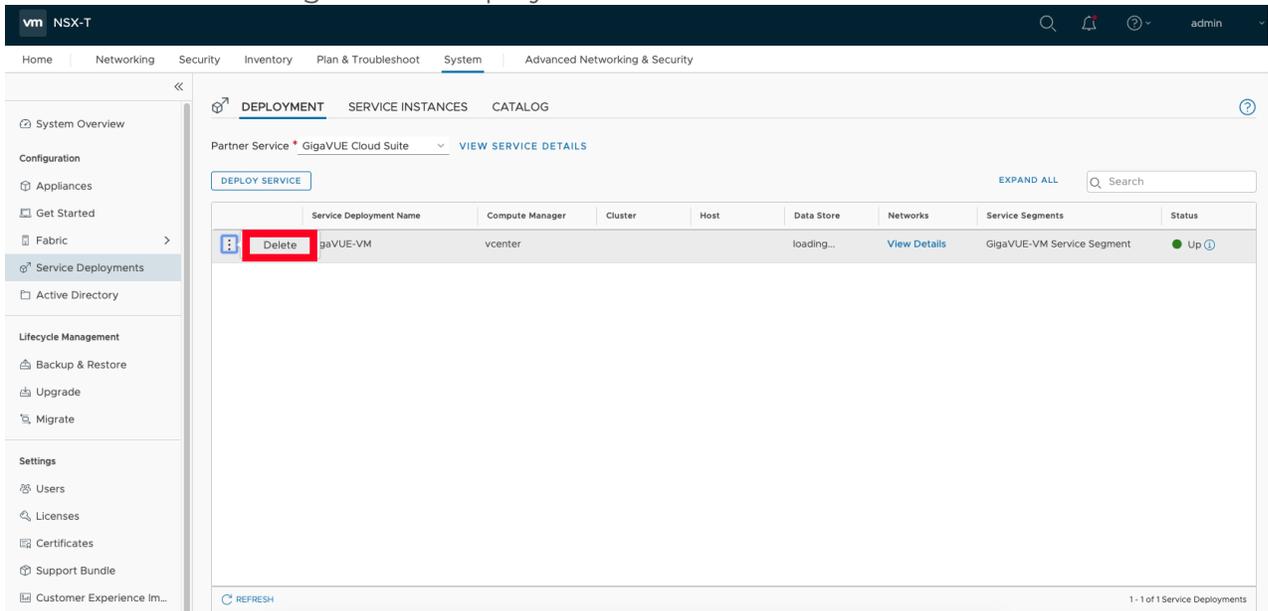

To remove the Service Deployments through NSX-T API:

1. Login to Postman.

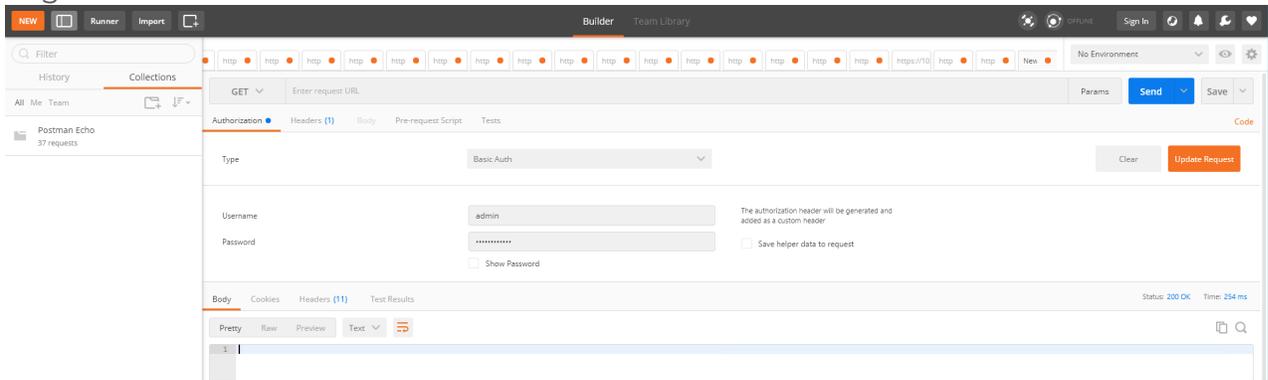


2. Get the Service ID.**GET** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/`
3. Get the ID of the Service Deployments.**GET** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/<Service_ID>/service-deployments/`
4. Delete all Service Deployments.**DELETE** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/<Service_ID>/service-deployments/<Service_Deployment_ID>`

Remove Service Reference

To remove Service References through NSX-T API:

1. Login to Postman.

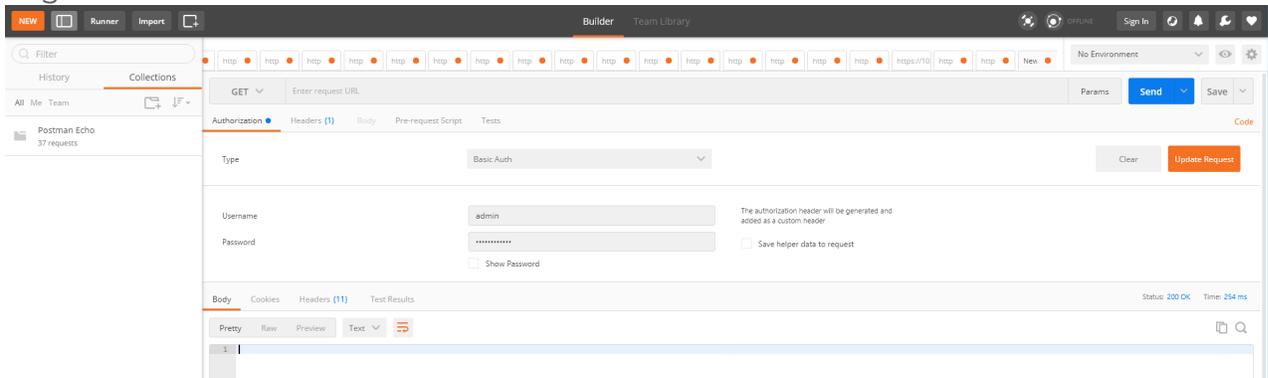


2. Get the Service Reference ID.**GET** `https://<NSX_Manager_IP>/policy/api/v1/infra/service-references/`
3. Delete the Service Reference.**DELETE** `https://<NSX_Manager_IP>/policy/api/v1/infra/service-references/<Service_Reference_ID>`

Remove Service Manager

To remove Service Manager through NSX-T API:

1. Login to Postman.

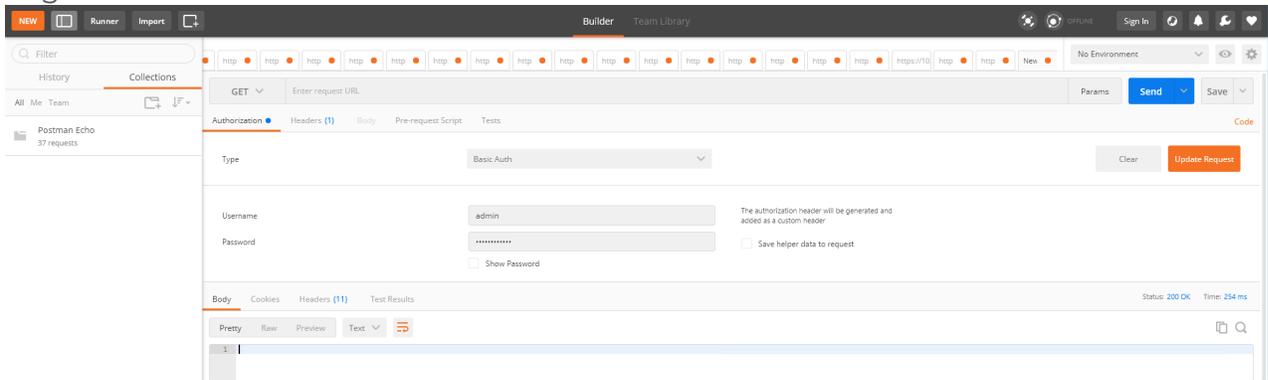


2. Get the Service Manager ID.**GET** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/service-managers/`
3. Delete the Service Manager.**DELETE** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/service-managers/<Service_Manager_ID>`

Remove Vendor Template and Service Definition

To remove Vendor Template and Service Definition through NSX-T API:

1. Login to Postman.

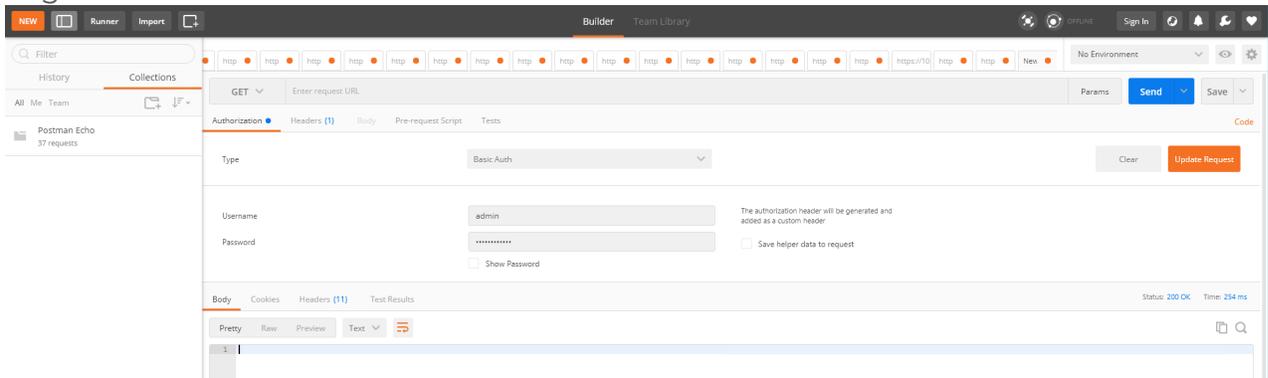

2. Get the Service ID.**GET** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/`
3. Get the Vendor Templates' ID.**GET** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/<Service_ID>/vendor-templates/`
4. Delete the Vendor Templates.**DELETE** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/<Service_ID>/vendor-templates/<Vendor_Template_ID>`
5. Delete the Service.**DELETE** `https://<NSX_Manager_IP>/api/v1/serviceinsertion/services/<Service_ID>`

Additional Sources of Information

This appendix provides additional sources of information. Refer to the following sections for details:

- [Documentation](#)
- [Documentation Feedback](#)
- [Contact Technical Support](#)
- [Contact Sales](#)
- [The VUE Community](#)

Documentation

This table lists all the guides provided for GigaVUE Cloud Suite software and hardware. The first row provides an All-Documents Zip file that contains all the guides in the set for the release.

NOTE: In the online documentation, view [What's New](#) to access quick links to topics for each of the new features in this Release; view [Documentation Downloads](#) to download all PDFs.

Table 1: Documentation Set for Gigamon Products

GigaVUE Cloud Suite 6.2 Hardware and Software Guides
<p>DID YOU KNOW? If you keep all PDFs for a release in common folder, you can easily search across the doc set by opening one of the files in Acrobat and choosing Edit > Advanced Search from the menu. This opens an interface that allows you to select a directory and search across all PDFs in a folder.</p>
<p>Hardware</p> <p>how to unpack, assemble, rack-mount, connect, and initially configure ports the respective GigaVUE Cloud Suite devices; reference information and specifications for the respective GigaVUE Cloud Suite devices</p>
GigaVUE-HC1 Hardware Installation Guide
GigaVUE-HC2 Hardware Installation Guide
GigaVUE-HC3 Hardware Installation Guide
GigaVUE-HC1-Plus Hardware Installation Guide
GigaVUE-TA25E Hardware Installation Guide
GigaVUE-TA200E Hardware Installation Guide
GigaVUE-TA25 Hardware Installation Guide

GigaVUE Cloud Suite 6.2 Hardware and Software Guides	
GigaVUE-TA200 Hardware Installation Guide	
GigaVUE-TA400 Hardware Installation Guide	
GigaVUE-TA10 Hardware Installation Guide	
GigaVUE-TA40 Hardware Installation Guide	
GigaVUE-TA100 Hardware Installation Guide	
GigaVUE-TA100-CXP Hardware Installation Guide	
GigaVUE-OS Installation Guide for DELL S4112F-ON	
G-TAP A Series 2 Installation Guide	
GigaVUE M Series Hardware Installation Guide	
GigaVUE-FM Hardware Appliance Guide for GFM-HW1-FM010 and and GFM-HW1-FM001-HW	
Software Installation and Upgrade Guides	
GigaVUE-FM Installation, Migration, and Upgrade Guide	
GigaVUE-OS Upgrade Guide	
GigaVUE V Series Migration Guide	
Fabric Management and Administration Guides	
GigaVUE Administration Guide	covers both GigaVUE-OS and GigaVUE-FM
GigaVUE Fabric Management Guide	how to install, deploy, and operate GigaVUE-FM; how to configure GigaSMART operations; covers both GigaVUE-FM and GigaVUE-OS features
Cloud Guides	
how to configure the GigaVUE Cloud Suite components and set up traffic monitoring sessions for the cloud platforms	
*GigaVUE V Series Applications Guide	
GigaVUE V Series Quick Start Guide	
GigaVUE Cloud Suite for AWS—GigaVUE V Series 2 Guide	
GigaVUE Cloud Suite for Azure—GigaVUE V Series 2 Guide	
GigaVUE Cloud Suite for OpenStack—GigaVUE V Series 2 Guide	
*GigaVUE Cloud Suite for Nutanix Guide—GigaVUE V Series 2 Guide	
GigaVUE Cloud Suite for VMware—GigaVUE V Series Guide	

GigaVUE Cloud Suite 6.2 Hardware and Software Guides

***GigaVUE Cloud Suite for Third Party Orchestration**

GigaVUE Cloud Suite for AnyCloud Guide

Universal Container Tap Guide

Gigamon Containerized Broker Guide

GigaVUE Cloud Suite for AWS—GigaVUE V Series 1 Guide

GigaVUE Cloud Suite for Azure—GigaVUE V Series 1 Guide

GigaVUE Cloud Suite for OpenStack—GigaVUE V Series 1 Guide

GigaVUE Cloud Suite for Nutanix Guide—GigaVUE-VM Guide

GigaVUE Cloud Suite for VMware—GigaVUE-VM Guide

GigaVUE Cloud Suite for AWS Secret Regions Guide

Reference Guides

GigaVUE-OS CLI Reference Guide

library of GigaVUE-OS CLI (Command Line Interface) commands used to configure and operate GigaVUE HC Series and TA Series devices

GigaVUE-OS Security Hardening Guide

GigaVUE Firewall and Security Guide

GigaVUE Licensing Guide

GigaVUE-OS Cabling Quick Reference Guide

guidelines for the different types of cables used to connect Gigamon devices

GigaVUE-OS Compatibility and Interoperability Matrix

compatibility information and interoperability requirements for Gigamon devices

GigaVUE-FM REST API Reference in GigaVUE-FM User's Guide

samples uses of the GigaVUE-FM Application Program Interfaces (APIs)

Release Notes

GigaVUE Cloud Suite 6.2 Hardware and Software Guides

GigaVUE-OS, GigaVUE-FM, GigaVUE-VM, G-TAP A Series, and GigaVUE Cloud Suite Release Notes

new features, resolved issues, and known issues in this release ;
important notes regarding installing and upgrading to this release

NOTE: Release Notes are not included in the online documentation.

NOTE: Registered Customers can log in to [My Gigamon](#) to download the Software and Release Notes from the Software & Docs page on to [My Gigamon](#). Refer to [How to Download Software and Release Notes from My Gigamon](#).

In-Product Help

GigaVUE-FM Online Help

how to install, deploy, and operate GigaVUE-FM.

How to Download Software and Release Notes from My Gigamon

Registered Customers can download software and corresponding Release Notes documents from the **Software & Release Notes** page on to [My Gigamon](#). Use the My Gigamon Software & Docs page to download:

- Gigamon Software installation and upgrade images,
- Release Notes for Gigamon Software, or
- Older versions of PDFs (pre-v5.7).

To download release-specific software, release notes, or older PDFs:

1. Log in to [My Gigamon](#)
2. Click on the **Software & Release Notes** link.
3. Use the **Product** and **Release** filters to find documentation for the current release. For example, select Product: "GigaVUE-FM" and Release: "5.6," enter "pdf" in the search box, and then click **GO** to view all PDF documentation for GigaVUE-FM 5.6.xx.

NOTE: My Gigamon is available to registered customers only. Newer documentation PDFs, with the exception of release notes, are all available through the publicly available online documentation.

Documentation Feedback

We are continuously improving our documentation to make it more accessible while maintaining accuracy and ease of use. Your feedback helps us to improve. To provide feedback and report issues in our documentation, send an email to:

documentationfeedback@gigamon.com

Please provide the following information in the email to help us identify and resolve the issue. Copy and paste this form into your email, complete it as able, and send. We will respond as soon as possible.

Documentation Feedback Form		
About You	Your Name	
	Your Role	
	Your Company	
For Online Topics	Online doc link	<i>(URL for where the issue is)</i>
	Topic Heading	<i>(if it's a long topic, please provide the heading of the section where the issue is)</i>
For PDF Topics	Document Title	<i>(shown on the cover page or in page header)</i>
	Product Version	<i>(shown on the cover page)</i>
	Document Version	<i>(shown on the cover page)</i>
	Chapter Heading	<i>(shown in footer)</i>
	PDF page #	<i>(shown in footer)</i>
How can we improve?	Describe the issue	<i>Describe the error or issue in the documentation. (If it helps, attach an image to show the issue.)</i>
	How can we improve the content? Be as specific as possible.	
	Any other comments?	

Contact Technical Support

For information about Technical Support: Go to **Settings**  > **Support** > **Contact Support** in GigaVUE-FM.

You can also refer to <https://www.gigamon.com/support-and-services/contact-support> for Technical Support hours and contact information.

Email Technical Support at support@gigamon.com.

Contact Sales

Use the following information to Gigamon channel partner or Gigamon sales representatives.

Telephone: +1.408.831.4025

Sales: inside.sales@gigamon.com

Partners: www.gigamon.com/partners.html

Premium Support

Email Gigamon at inside.sales@gigamon.com for information on purchasing 24x7 Premium Support. Premium Support entitles you to round-the-clock phone support with a dedicated Support Engineer every day of the week.

The VÜE Community

The VÜE Community is a technical site where Gigamon users, partners, security and network professionals and Gigamon employees come together to share knowledge and expertise, ask questions, build their network and learn about best practices for Gigamon products.

Visit the VÜE site to:

- Find knowledge base articles and documentation
- Ask and answer questions and learn best practices from other members.
- Join special-interest groups to have focused collaboration around a technology, use-case, vertical market or beta release
- Take online learning lessons and tutorials to broaden your knowledge of Gigamon products.

- Open support tickets (Customers only)
- Download the latest product updates and documentation (Customers only)

The VUE Community is a great way to get answers fast, learn from experts and collaborate directly with other members around your areas of interest.

Register today at community.gigamon.com

Questions? Contact our Community team at community@gigamon.com.

Glossary

D

decrypt list

need to decrypt (formerly blacklist)

decryptlist

need to decrypt - CLI Command (formerly blacklist)

drop list

selective forwarding - drop (formerly blacklist)

F

forward list

selective forwarding - forward (formerly whitelist)

L

leader

leader in clustering node relationship (formerly master)

M

member node

follower in clustering node relationship (formerly slave or non-master)

N

no-decrypt list

no need to decrypt (formerly whitelist)

nodecryptlist

no need to decrypt- CLI Command (formerly whitelist)

P

primary source

root timing; transmits sync info to clocks in its network segment (formerly grandmaster)

R

receiver

follower in a bidirectional clock relationship (formerly slave)

S

source

leader in a bidirectional clock relationship (formerly master)